

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [XINLEI](#) /

› [XINLEI Mobile TV Stand ML55SE Instruction Manual for 21-60 Inch TVs](#)

## XINLEI ML55SE

# XINLEI Mobile TV Stand Instruction Manual

MODEL: ML55SE

## IMPORTANT SAFETY INFORMATION

---

Please read this manual thoroughly before assembly and use. Retain this manual for future reference. Incorrect assembly or use may result in product damage or personal injury.

- **Weight Capacity:** Do not exceed the maximum weight capacity of **77 lbs (35 kg)**.
- **TV Size Compatibility:** This stand is designed for televisions between **21 and 60 inches**.
- **VESA Compatibility:** Ensure your TV's VESA mounting pattern is between **100x100mm and 400x400mm**.
- **Stable Surface:** Always place the TV stand on a flat, stable, and level surface.
- **Children and Pets:** Keep children and pets away from the stand during assembly and ensure the TV is securely mounted to prevent tipping.
- **Tighten All Fasteners:** Periodically check and retighten all screws and bolts to ensure stability.

## PACKAGE CONTENTS

---

Verify that all components are present and undamaged before beginning assembly. If any parts are missing or damaged, contact customer support.

- Main support pole
- X-shaped base with pre-installed casters
- TV mounting bracket assembly
- All necessary hardware (screws, washers, spacers)
- Assembly tools

# Measurements

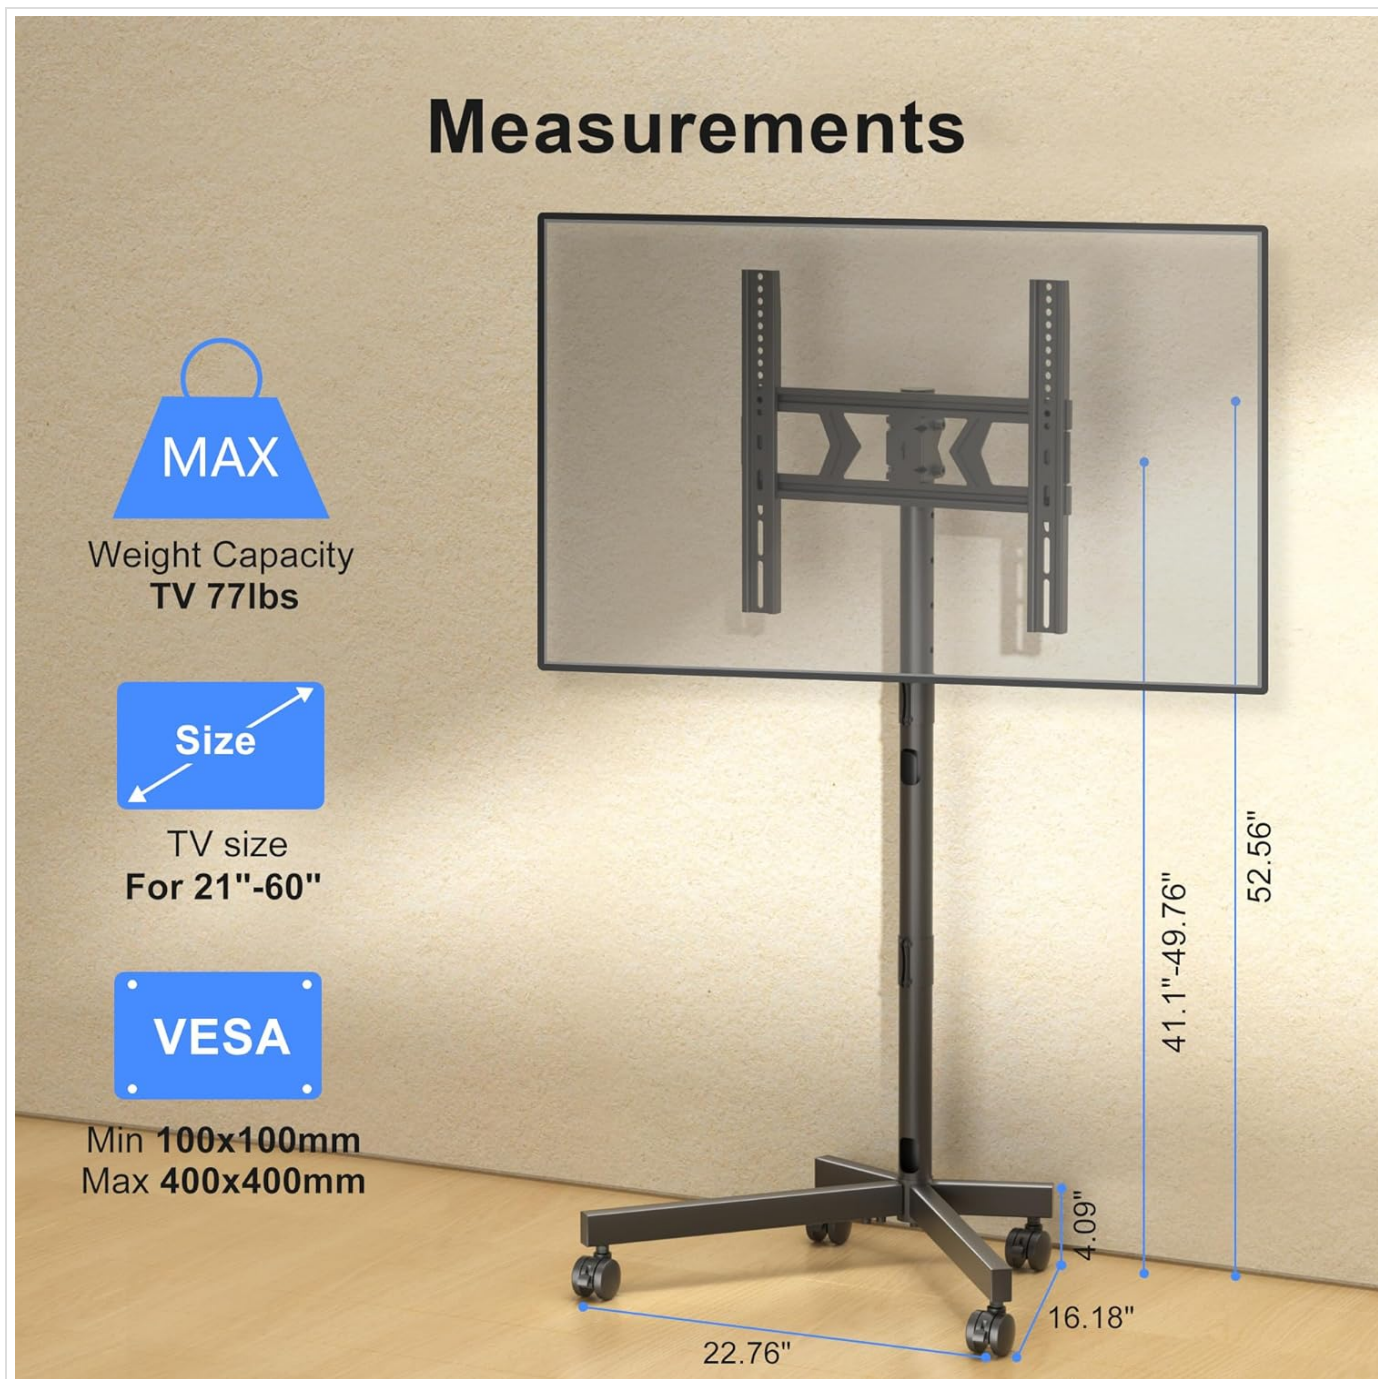 


Image: Overview of the TV stand's dimensions, weight capacity, and VESA compatibility.


## ASSEMBLY INSTRUCTIONS (SETUP)

Follow these steps carefully for proper assembly. It is recommended to have a second person assist with mounting the television.

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a soft, clean surface to prevent scratches.
2. **Assemble the Base:** The X-shaped base comes with casters pre-installed. Ensure all casters are securely attached.
3. **Attach the Main Support Pole:** Secure the main support pole to the center of the X-shaped base using the provided fasteners. Ensure it is firmly tightened for stability.
4. **Prepare TV Mounting Brackets:** Attach the vertical mounting brackets to the back of your television. Select the appropriate screws, washers, and spacers from the hardware kit that fit your TV's VESA holes. Do not overtighten.
5. **Mount the TV to the Stand:** With assistance, carefully lift the television and hook the brackets onto the main

support pole's mounting plate. Ensure the TV is centered and level.

6. **Secure the TV:** Engage the safety locks on the TV mounting brackets to prevent accidental dislodgement.
7. **Cable Management:** Utilize the integrated cable management features within the support pole to route and conceal TV cables for a tidy appearance and to prevent tripping hazards.

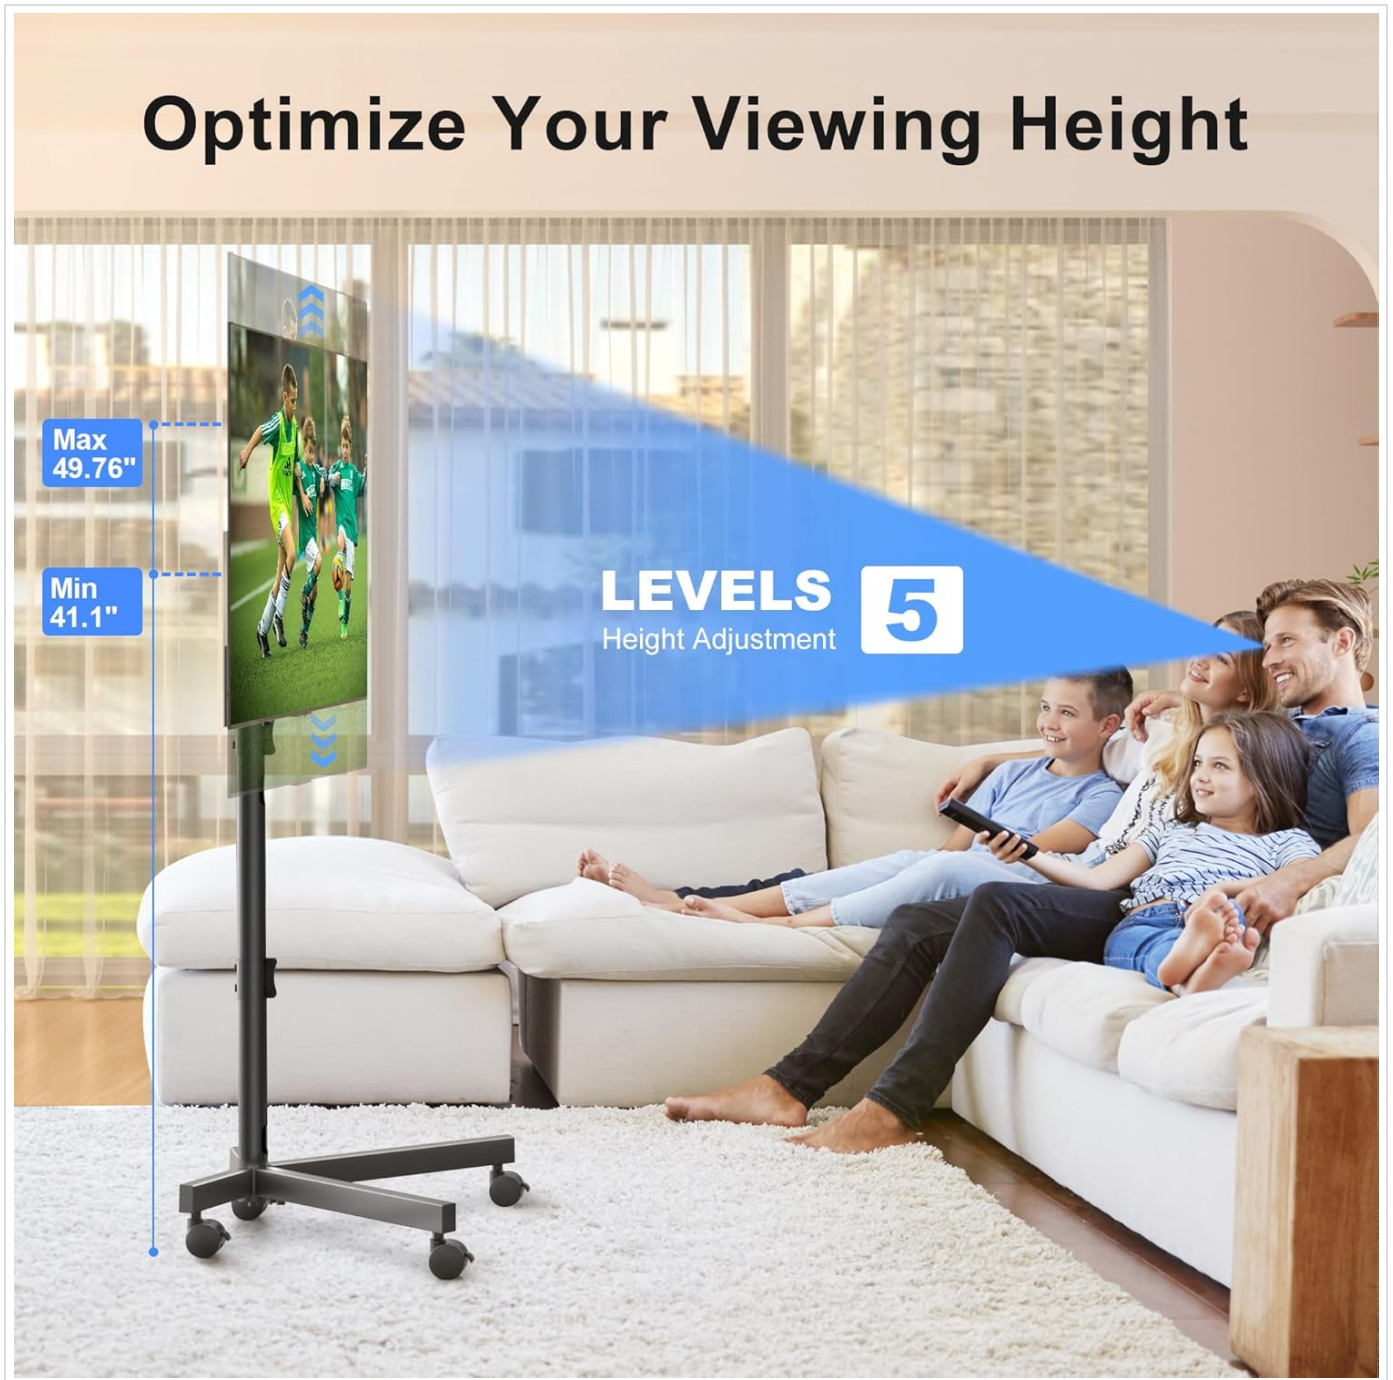 

*Image: The sturdy X-shaped base design, engineered to minimize tip-over risk.*





Image: Key features including anti-drop design, safety lock, cable management, and lockable casters.

## OPERATING INSTRUCTIONS

The XINLEI Mobile TV Stand offers versatile adjustments for optimal viewing.

- **Height Adjustment:** The TV stand features 5 levels of height adjustment, allowing you to position your TV screen between **41.1 inches and 49.76 inches** from the floor. To adjust, loosen the securing bolts on the main support pole, raise or lower the TV to the desired height, and then firmly retighten the bolts.



*Image: Illustration of the TV stand's adjustable height feature.*

- **Tilt Adjustment:** The TV mounting plate can be tilted **+5° upwards to -10° downwards**. This allows you to reduce glare and optimize your viewing angle. To adjust the tilt, loosen the tilt adjustment knobs on the side of the mounting plate, set the desired angle, and then firmly retighten the knobs.



*Image: Demonstration of the TV stand's tilt adjustment capability.*

- **Mobility:** The 360° lockable casters provide smooth movement across various floor types. To move the stand, unlock all casters. To secure the stand in place, press down on the locking mechanism on each caster until it clicks.

## MAINTENANCE

---

Regular maintenance ensures the longevity and safe operation of your TV stand.

- **Cleaning:** Wipe the stand with a soft, dry cloth. For stubborn marks, a slightly damp cloth can be used, followed by immediate drying. Avoid abrasive cleaners or solvents.
- **Fastener Check:** Periodically (e.g., every 3-6 months) inspect all bolts and screws to ensure they are tight. Retighten as necessary.
- **Caster Inspection:** Check casters for any debris or hair that might impede smooth movement. Clean as needed.

## TROUBLESHOOTING

---

If you encounter issues with your XINLEI Mobile TV Stand, refer to the following common solutions.

- **Stand is unstable:**

- Ensure all assembly bolts are securely tightened.
- Verify the stand is on a flat, level surface.
- Confirm the TV weight does not exceed 77 lbs (35 kg).

- **Difficulty adjusting height/tilt:**

- Loosen the adjustment knobs/bolts sufficiently before attempting to move the TV.
- Ensure no cables are snagged or obstructing movement.

- **Casters not rolling smoothly:**

- Check if casters are locked. Unlock them for movement.
- Remove any debris (e.g., hair, lint) from the caster wheels.

For further assistance, please contact XINLEI customer support. We provide reliable after-sale service and professional technical support.




## SPECIFICATIONS

Model Number	ML55SE
Brand	XINLEI
Compatible TV Sizes	21 - 60 inches
Maximum Weight Capacity	77 lbs (35 kg)
VESA Compatibility	Min 100x100mm, Max 400x400mm
Height Adjustment Range	41.1 inches - 49.76 inches (5 levels)
Tilt Adjustment	+5° / -10°
Material	Metal
Color	Black
Item Weight	10.89 pounds
Package Dimensions	17.44 x 11.02 x 4.96 inches

## WARRANTY AND SUPPORT

XINLEI stands behind the quality of its products. For specific warranty details, please refer to the warranty card included with your purchase or visit the official XINLEI website. If you require technical support, have questions about assembly, or need replacement parts, please contact our customer service team. Contact information can typically be found on our website or on the product packaging.

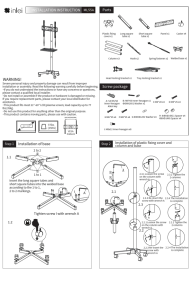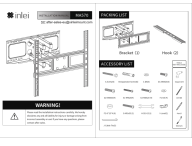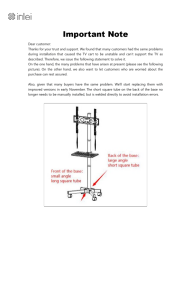

 The image shows the first page of the ML5073 Mobile TV Cart Installation Guide. It includes a list of parts, a list of tools, and a list of warnings. The main section is titled 'Assembly' and shows step 1: 'Attach the TV to the cart'. It includes a diagram of the TV being attached to the cart and a list of steps to follow.	<p><a href="#">ML5073 Mobile TV Cart Installation Guide</a></p> <p>Comprehensive installation instructions for the ML5073 mobile TV cart, featuring height adjustment, a shelf, and support for 21-60 inch screens up to 77 lbs with VESA patterns up to 400x400mm.</p>
 The image shows the first page of the Xinlei MA570 TV Wall Mount Installation Manual. It includes a list of parts, a list of tools, and a list of warnings. The main section is titled 'Assembly' and shows step 1: 'Attach the TV to the wall mount'. It includes a diagram of the TV being attached to the wall mount and a list of steps to follow.	<p><a href="#">Xinlei MA570 TV Wall Mount Installation Manual</a></p> <p>Comprehensive installation guide for the Xinlei MA570 TV wall mount, detailing steps for concrete and wood wall mounting, attaching the TV, and cable management.</p>
 The image shows the first page of the Xinlei Mobile TV Cart: Important Installation and Stability Update. It includes a list of parts, a list of tools, and a list of warnings. The main section is titled 'Assembly' and shows step 1: 'Attach the TV to the cart'. It includes a diagram of the TV being attached to the cart and a list of steps to follow.	<p><a href="#">Xinlei Mobile TV Cart: Important Installation and Stability Update</a></p> <p>Important notification from Xinlei regarding common installation issues with their mobile TV carts, addressing stability concerns and detailing product improvements for future versions.</p>