

## ACEBELL TL-AH708

# ACEBELL Wireless WiFi 1080P Video Doorbell Camera with 7-inch Touch Screen Monitor User Manual

Model: TL-AH708

## INTRODUCTION

---

This manual provides detailed instructions for the installation, operation, and maintenance of your ACEBELL Wireless WiFi 1080P Video Doorbell Camera and 7-inch Touch Screen Monitor. Please read this manual thoroughly before using the product to ensure proper functionality and safety.

## PACKAGE CONTENTS

---

Verify that all items listed below are included in your package:

- Doorbell Camera
- 7-inch Touch Screen Monitor
- USB Type C Charging Cable
- Mounting Hardware (screws, anchors)
- User Manual
- Lithium Ion Batteries (pre-installed or separate)



Image: The ACEBELL Wireless Video Doorbell Camera (left) and the 7-inch Touch Screen Monitor (right) are displayed. A 32GB Micro SD card is shown below the monitor, and a hand holds a smartphone displaying the doorbell's live feed and app controls. This image illustrates the main components of the system.

## PRODUCT OVERVIEW

The ACEBELL Video Doorbell System consists of two primary components:

- **Doorbell Camera:** This outdoor unit features a 1080p camera, motion sensor, microphone, speaker for two-way audio, and a doorbell button. It is battery-powered and connects wirelessly to the monitor and your home Wi-Fi network.
- **7-inch Touch Screen Monitor:** This indoor unit serves as the primary interface for viewing live video, communicating with visitors, and managing system settings. It features a touch screen for intuitive control and an antenna for stable wireless connection to the doorbell.

## SETUP

### 1. Charging the Devices

Before initial use, fully charge both the doorbell camera and the monitor using the provided USB Type C cable. Connect the cable to the charging port on each device and a standard USB power adapter (not included). The charging indicator will show when charging is complete.

## 2. Doorbell Camera Installation

1. **Choose a Location:** Select a suitable location near your door, ensuring a clear view and good Wi-Fi signal strength.
2. **Mounting:** The doorbell camera supports self-adhesive installation. Clean the mounting surface thoroughly. Peel off the protective film from the adhesive backing and firmly press the doorbell camera onto the desired location. For a more secure installation, use the provided screws and anchors to mount the bracket, then attach the doorbell camera.
3. **Power On:** Ensure the doorbell camera is powered on after installation.

## 3. Monitor Placement

Place the 7-inch monitor in a central location within your home where it is easily accessible and has a good wireless connection to the doorbell camera.

## 4. App Installation and Pairing

1. **Download the App:** Search for "ACEBELL Video Door Phone" or scan the QR code (if provided in packaging) to download the official app on your smartphone or tablet.
2. **Create Account:** Open the app and follow the on-screen instructions to create a new user account.
3. **Add Device:** In the app, select "Add Device" or a similar option. Follow the prompts to connect your doorbell camera to your home's 2.4GHz Wi-Fi network.
4. **Pair with Monitor:** The doorbell camera and monitor are typically pre-paired. If not, refer to the monitor's on-screen menu for pairing instructions. This usually involves selecting a pairing option on both devices within a short timeframe.

## OPERATING INSTRUCTIONS

---

### 1. Live View and Two-Way Audio

- **From Monitor:** Tap the screen to activate the live view from the doorbell camera. Use the on-screen microphone icon to initiate two-way audio communication with the visitor.
- **From App:** Open the ACEBELL app on your smartphone or tablet. Select your doorbell camera to view the live feed. Tap the microphone icon to speak and the speaker icon to listen.

### 2. Motion Detection

The doorbell camera is equipped with motion detection. When motion is detected, the system will:

- Send a notification to your smartphone/tablet via the app.
- Trigger a recording of the event (if a Micro SD card is installed in the monitor).
- Optionally, ring the indoor monitor.

Motion detection sensitivity can be adjusted in the app settings.

### 3. Answering a Doorbell Ring

- When a visitor presses the doorbell button, the indoor monitor will ring, and your smartphone/tablet will receive a call notification.
- **On Monitor:** Tap "Answer" on the screen to view the visitor and engage in two-way audio.
- **On App:** Accept the incoming call notification to view the live feed and communicate.

## 4. Video Recording and Playback

The system supports local storage via a Micro SD card (up to 32GB, included) inserted into the monitor. Recordings are triggered by motion detection or manual activation.

- **Playback on Monitor:** Access the "Playback" or "Gallery" option on the monitor's touch screen to review recorded videos.
- **Playback on App:** In the ACEBELL app, navigate to the "Playback" or "History" section to view cloud or local recordings.

## MAINTENANCE

- **Battery Charging:** The doorbell camera has a battery life of approximately 45 days, depending on usage. Recharge both the doorbell and monitor when the battery low indicator appears. Use the provided USB Type C cable.
- **Cleaning:** Wipe the camera lens and monitor screen with a soft, dry cloth. Avoid using abrasive cleaners or solvents.
- **Firmware Updates:** Periodically check the ACEBELL app for available firmware updates to ensure optimal performance and security.

## TROUBLESHOOTING

Problem	Possible Solution
No video feed on monitor/app.	<ul style="list-style-type: none"><li>◦ Ensure both doorbell and monitor are powered on and charged.</li><li>◦ Check Wi-Fi connection for both devices.</li><li>◦ Restart both devices.</li><li>◦ Re-pair the doorbell with the monitor if necessary.</li></ul>
Poor video quality.	<ul style="list-style-type: none"><li>◦ Check Wi-Fi signal strength at the doorbell location.</li><li>◦ Ensure the camera lens is clean.</li></ul>
Motion detection not working.	<ul style="list-style-type: none"><li>◦ Verify motion detection is enabled in the app settings.</li><li>◦ Adjust motion sensitivity.</li><li>◦ Ensure there are no obstructions blocking the sensor.</li></ul>
Two-way audio issues.	<ul style="list-style-type: none"><li>◦ Check microphone and speaker settings in the app.</li><li>◦ Ensure network connection is stable.</li></ul>

## SPECIFICATIONS

Feature	Detail
---------	--------

Feature	Detail
Brand	ACEBELL
Model Number	TL-AH708
Power Source	Battery Powered
Battery Type	Lithium Ion (included)
Battery Life	Approximately 45 days
Video Capture Resolution	1080p
Connectivity Technology	Wireless (WiFi)
Compatible Devices	Smartphone, Tablet
Installation Type	Self-Adhesive
Control Method	App, Touch (Monitor)
Included Components	Doorbell camera, monitor
Monitor Size	7-inch Touch Screen
Product Dimensions	10 x 9 x 3 inches
Item Weight	2.6 pounds
Connector Type	USB Type C

## WARRANTY AND SUPPORT

---

For warranty information and technical support, please refer to the contact details provided in your product packaging or visit the official ACEBELL website. Keep your purchase receipt for warranty claims.

**Manufacturer:** ACEBELL