



Manuals.plus /

› Edillas /

› Edillas Digital Sports Watch User Manual - Model Edi 918

Edillas Edi 918

Edillas Digital Sports Watch User Manual

Model: Edi 918

INTRODUCTION

This manual provides comprehensive instructions for the operation and maintenance of your Edillas Digital Sports Watch, Model Edi 918. Please read this manual carefully before using the watch to ensure proper function and longevity.

PRODUCT FEATURES

- 1.57-inch Large Digital Display for clear readability.
- Multi-functional: Includes date display, 12/24-hour format, alarm, stopwatch, and countdown timer.
- LED Backlight for visibility in low-light conditions.
- 30m Water Resistance (suitable for splashes, rain, hand washing; not for swimming or diving).
- Comfortable and adjustable soft silicone strap.
- Durable design with scratch-resistant reinforced resin glass lens.

PACKAGE CONTENTS

- 1 x Edillas Digital Sports Watch (Model Edi 918)
- 1 x User Manual

Why Choose Us?



Simple operation (single button)

Soft silicone strap

Stainless steel cover

Large dial

High Transparency Acrylic Mirror

Image: The Edillas Digital Sports Watch, Model Edi 918, shown in its retail packaging.

SETUP

1. Setting Time, Date, and Day of Week

To set the current time, date, and day of the week on your Edillas Digital Sports Watch, follow the steps outlined in the video below. This process involves navigating through different modes and adjusting values using the watch buttons.

Your browser does not support the video tag.

Video: Detailed instructions on how to set the time, date, and day of the week on the Edillas Digital Sports Watch.

2. Adjusting the Strap

The watch features a soft silicone strap designed for comfort and adjustability. To ensure a secure and comfortable fit, adjust the buckle to the appropriate hole on the strap. The strap is designed to fit a wide range of wrist sizes.



Image: A child wearing the Edillas Digital Sports Watch, demonstrating its comfortable fit.

OPERATING INSTRUCTIONS

1. Backlight Operation

To activate the LED backlight for viewing the display in dark conditions, press and hold the "MODE" button for 2 seconds. The backlight will illuminate for approximately 3 seconds. This feature is useful for checking the time at night or in dimly lit environments.

Your browser does not support the video tag.

Video: Demonstration of how to activate the backlight feature on the Edillas Digital Sports Watch.

Backlight at Night

Press and hold the button for 2 seconds to activate the backlight.



Image: Comparison of the watch display in normal mode versus with the backlight activated.

2. Alarm Function

The watch includes an alarm feature to help with daily scheduling. You can set a specific time for the alarm to sound. Refer to the video for detailed steps on setting and managing the alarm.

Your browser does not support the video tag.

Video: Instructions on how to set the alarm time on the Edillas Digital Sports Watch.

3. Hourly Chime and Alarm On/Off

You can enable or disable the hourly chime and the alarm function. The hourly chime provides an audible alert at the top of each hour. The video below demonstrates how to toggle these features.

Your browser does not support the video tag.

Video: Guide on how to turn the alarm and hourly chime functions on and off.

4. Stopwatch Function

The stopwatch function allows for precise timing of activities. You can start, pause, and reset the stopwatch. Follow the instructions in the video to utilize this feature.

Your browser does not support the video tag.

Video: How to use the stopwatch function on the Edillas Digital Sports Watch.



Image: The watch display showing the stopwatch function in action.

5. Countdown Timer

The countdown timer is useful for various timed activities. You can set a specific duration, and the watch will count down to zero. Learn how to set and use the countdown timer from the video provided.

Your browser does not support the video tag.

Video: Instructions on how to use and set the countdown function on the Edillas Digital Sports Watch.



Image: The watch display showing the countdown timer function.

6. Water Resistance

Your Edillas Digital Sports Watch is rated for 30 meters (3 ATM) water resistance. This means it is suitable for everyday use and can withstand splashes, rain, and hand washing. **It is not suitable for swimming, diving, or prolonged submersion in water. Do not operate buttons underwater.**

Water Resistant in Your Child's Life

Note: Do not operate the buttons underwater.



Image: The watch demonstrating its water resistance against splashes and rain.

MAINTENANCE

Cleaning

To clean your watch, wipe it with a soft, damp cloth. Avoid using harsh chemicals or abrasive materials, as these can damage the watch's finish or internal components.

Battery Replacement

The watch uses a Nonstandard Battery (included). For optimal performance, it is recommended to have the battery replaced by a qualified technician when necessary. The watch is designed for longer battery life with imported components.



Image: Visual representation of the watch's long-lasting battery.

Storage

Store your watch in a cool, dry place away from direct sunlight and extreme temperatures to prevent damage.

TROUBLESHOOTING

Issue	Possible Cause / Solution
Display is blank or dim.	Battery may be low or depleted. Replace the battery.
Time is incorrect.	Refer to the "Setting Time, Date, and Day of Week" section to re-set the time.
Alarm not sounding.	Ensure the alarm function is enabled. Check alarm settings for correct time.
Watch is not responding to button presses.	The watch may be in a specific mode or require a reset. Try pressing the MODE button multiple times to cycle through modes. If unresponsive, allow the battery to fully deplete and then replace it.


SPECIFICATIONS

Feature	Detail
Model Number	Edi 918
Display Type	Digital
Case Diameter	1.57 Inches (4cm)
Band Material Type	Silicone
Water Resistance Depth	30 Meters (3 ATM)
Power Source	Battery Powered (1 Nonstandard Battery included)
Item Weight	1.28 ounces
Movement Type	Japanese Automatic

WARRANTY AND SUPPORT


Edillas offers a Lifetime Warranty for this product. For any issues, missing parts, or discrepancies, please contact customer support. The manufacturer provides a 2-year after-sales service, 30-day no-reason return policy, and 12-hour online customer service.

Contact Email: yadelaiiaftersale@163.com

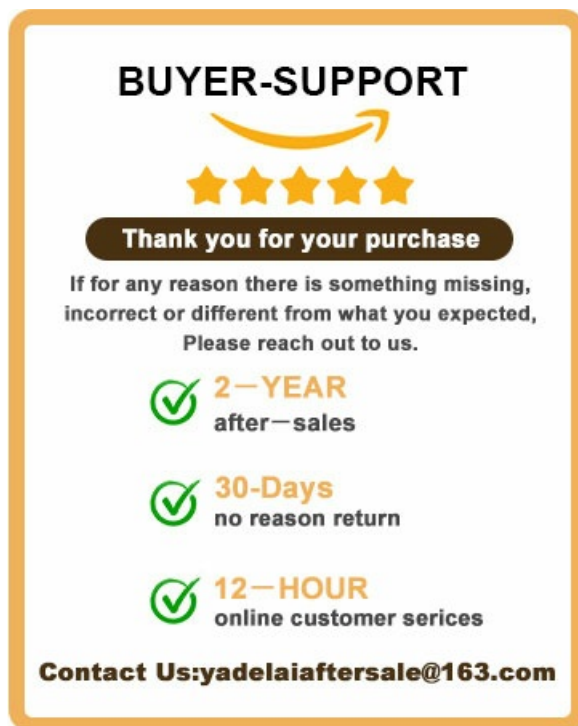




BUYER-SUPPORT





Thank you for your purchase

If for any reason there is something missing, incorrect or different from what you expected, Please reach out to us.

-  **2-YEAR**
after-sales
-  **30-Days**
no reason return
-  **12-HOUR**
online customer services

Contact Us: yadelaiiaftersale@163.com

Image: Customer support details and warranty information.