

[Manuals.plus](#) /

› [OMOTON](#) /

› OMOTON Backlit AZERTY Wired Keyboard Instruction Manual

OMOTON B0F6MMW491

OMOTON Backlit AZERTY Wired Keyboard Instruction Manual

Model: B0F6MMW491

INTRODUCTION

Thank you for choosing the OMOTON Backlit AZERTY Wired Keyboard. This keyboard is designed with large, easy-to-read characters and a comfortable ergonomic layout, making it ideal for a wide range of users including seniors, children, and those with visual impairments. It features multimedia keys and versatile USB-A/C connectivity for seamless integration with your Windows PC.

PRODUCT FEATURES

- **Large Character Keys:** Enhanced visibility with oversized characters, reducing typing errors and improving comfort for users with visual challenges.
- **Multimedia Functionality:** Dedicated multimedia keys for quick access to audio, video, and other essential functions, boosting productivity.
- **Dual USB-A/C Compatibility:** 2-in-1 wired connectivity ensures broad compatibility with various devices, offering plug-and-play convenience.
- **Ergonomic Design:** User-friendly ergonomic design provides comfort during extended typing sessions, reducing strain on hands and wrists.
- **Stylish and Functional:** Combines a sleek aesthetic with practical features, suitable for any home or office environment.

SETUP GUIDE

Connecting Your Keyboard

The OMOTON keyboard offers versatile connectivity with both USB-A and USB-C options. Simply plug the appropriate connector into your computer's available port.

1. Identify an available USB-A or USB-C port on your computer.

2. Connect the keyboard's USB cable to the chosen port. The keyboard is plug-and-play, requiring no additional drivers for Windows operating systems.
3. Once connected, the keyboard should be recognized automatically by your system and ready for use.



Image: The OMOTON keyboard showcasing its design and the dual USB-A and USB-C connectors for flexible connectivity.



Design Ergonomique

Le support rabattable assure une position d'écriture confortable et augmente l'efficacité du travail



Image: Detailed view of the keyboard's USB-C connector plugging into a laptop and the USB-A connector plugging into a desktop PC, illustrating its dual compatibility.

OPERATING INSTRUCTIONS

Basic Typing and Navigation

The keyboard functions as a standard AZERTY layout keyboard. Its large keys are designed for improved readability and

reduced typing errors.

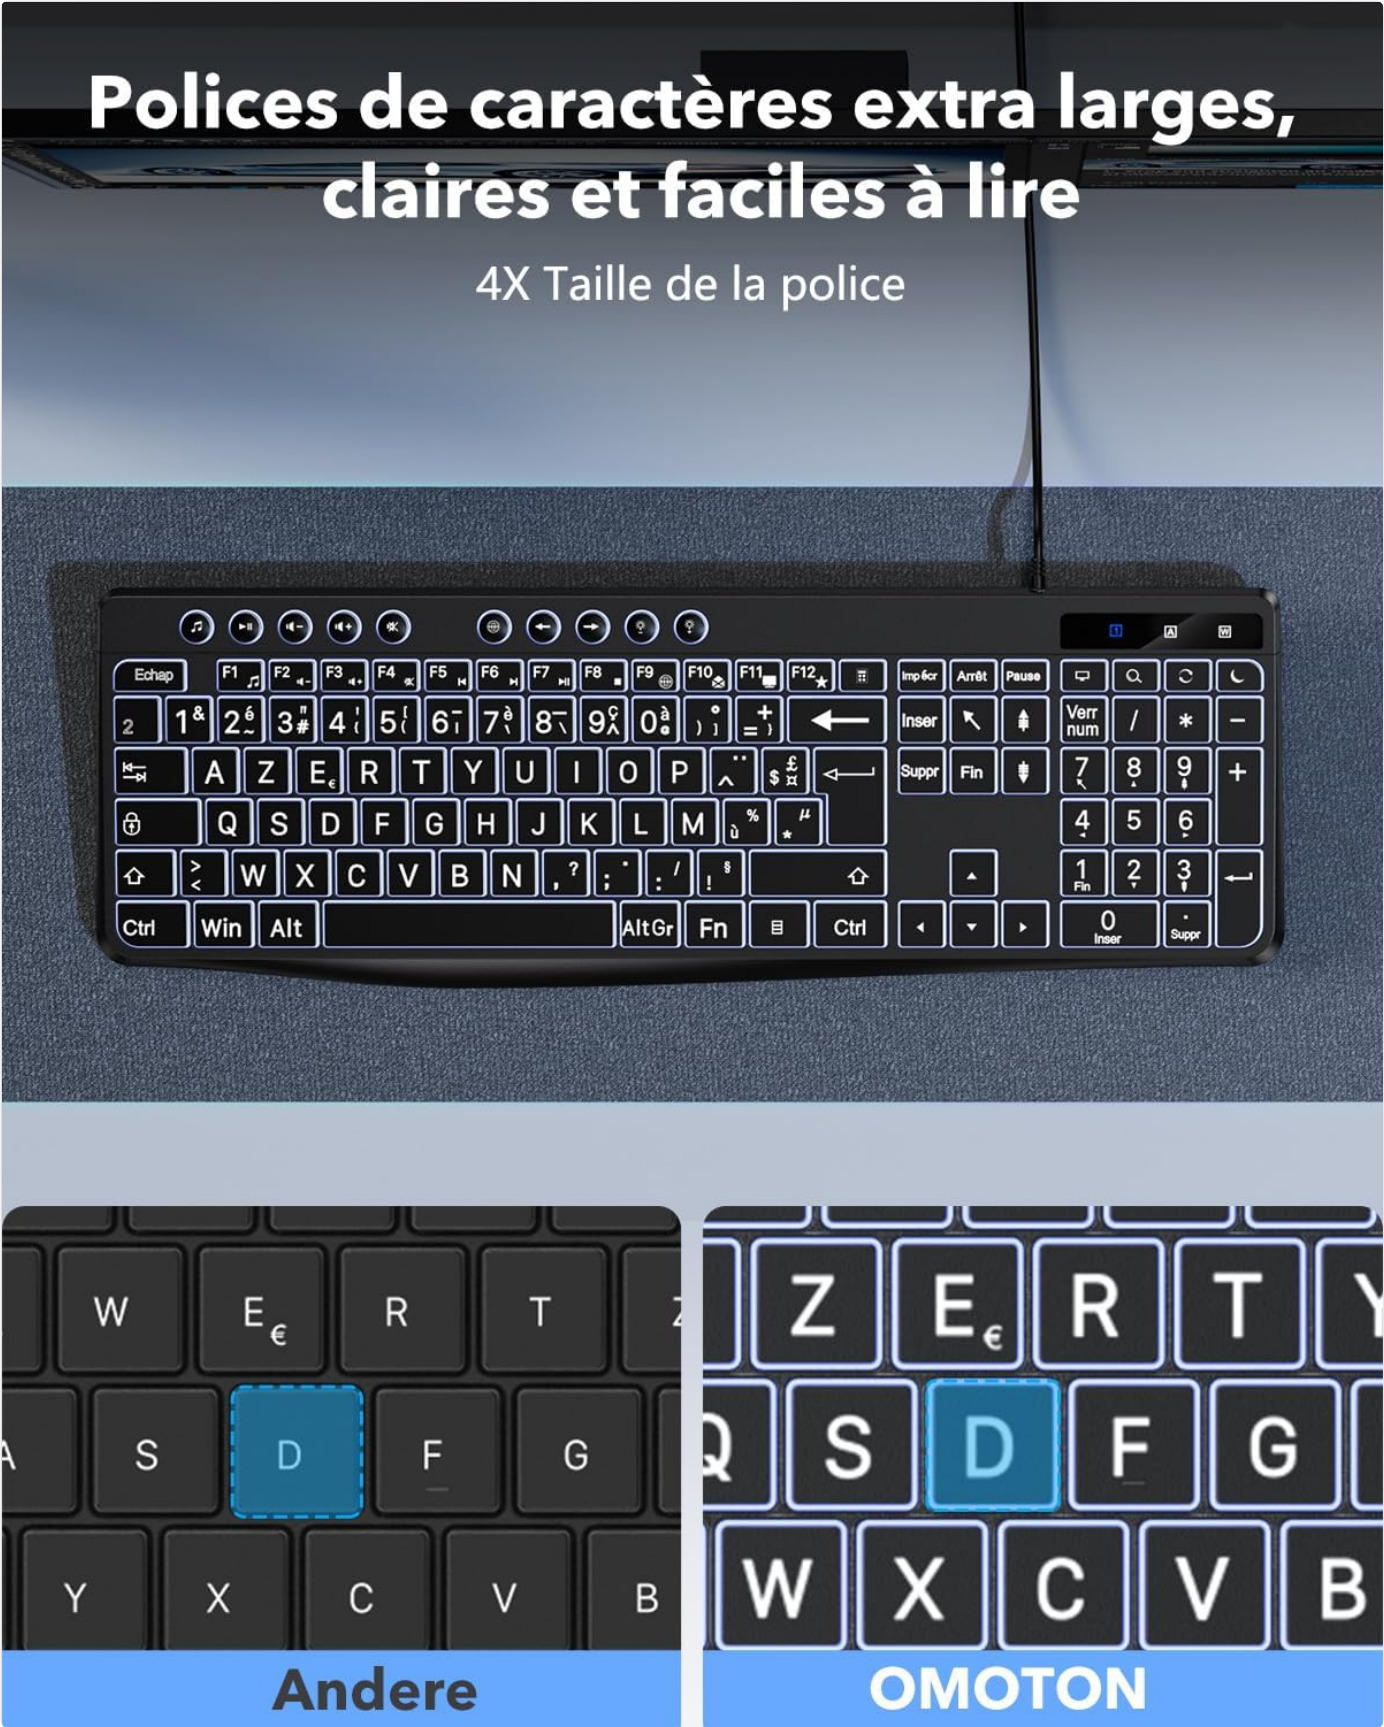


Image: A visual comparison highlighting the significantly larger and clearer font on the OMOTON keyboard keys compared to standard keyboard keys.

Multimedia Keys

The keyboard includes dedicated multimedia function keys (F1-F12) that provide quick access to various controls. These functions are typically activated by pressing the **Fn** key simultaneously with the desired function key.

Multimedia Key Functions

Key Combination	Function
Fn + F1	Media Player
Fn + F2	Volume Down
Fn + F3	Volume Up
Fn + F4	Mute
Fn + F5	Previous Track
Fn + F6	Next Track
Fn + F7	Play/Pause
Fn + F8	Stop
Fn + F9	Home Page
Fn + F10	Email
Fn + F11	My Computer
Fn + F12	Calculator

Réglages du Rétroéclairage

Fn + **Imp écr** = Activer et désactiver le rétroéclairage

Fn + **Arrêt** = Commutation des modes d'éclairage

(Mode respiratoire/Mode normal)

① Mode respiratoire:

Fn +  = Réglage de l'intensité de la lumière

② Mode normal:

Fn +  = Réglage de la fréquence de la lumière respiratoire



Image: An overhead view of the keyboard highlighting the multimedia function keys (F1-F12) and their corresponding icons, demonstrating their quick access capabilities.

Backlight Settings

The keyboard features adjustable backlighting for enhanced visibility in various lighting conditions.

- **Turn Backlight On/Off:** Press **Fn + Print Screen** (Imp écr) to toggle the backlight on or off.
- **Switch Lighting Modes:** Press **Fn + Scroll Lock** (Arrêt) to cycle through different lighting modes (e.g., Breathing Mode, Constant Light Mode).
- **Adjust Brightness (Constant Light Mode):** In Constant Light Mode, press **Fn + Up Arrow** to increase brightness,

and **Fn + Down Arrow** to decrease brightness. There are 7 levels of intensity.

- **Adjust Breathing Speed (Breathing Mode):** In Breathing Mode, press **Fn + Left Arrow** to slow down the breathing effect, and **Fn + Right Arrow** to speed it up.



Image: A diagram illustrating the key combinations for controlling the keyboard's backlight, including turning it on/off, changing modes, and adjusting brightness/speed.



Image: A visual representation showing the OMOTON keyboard with its backlight on, accompanied by graphics indicating 7 levels of brightness adjustment using Fn + arrow keys.

Ergonomic Design

The keyboard features adjustable feet at the back, allowing you to set the typing angle for optimal comfort and reduced wrist strain during prolonged use.

Connexion câblée simple



Image: A side view of the OMOTON keyboard demonstrating its adjustable feet, which allow for an ergonomic typing angle of 8 degrees to enhance comfort.

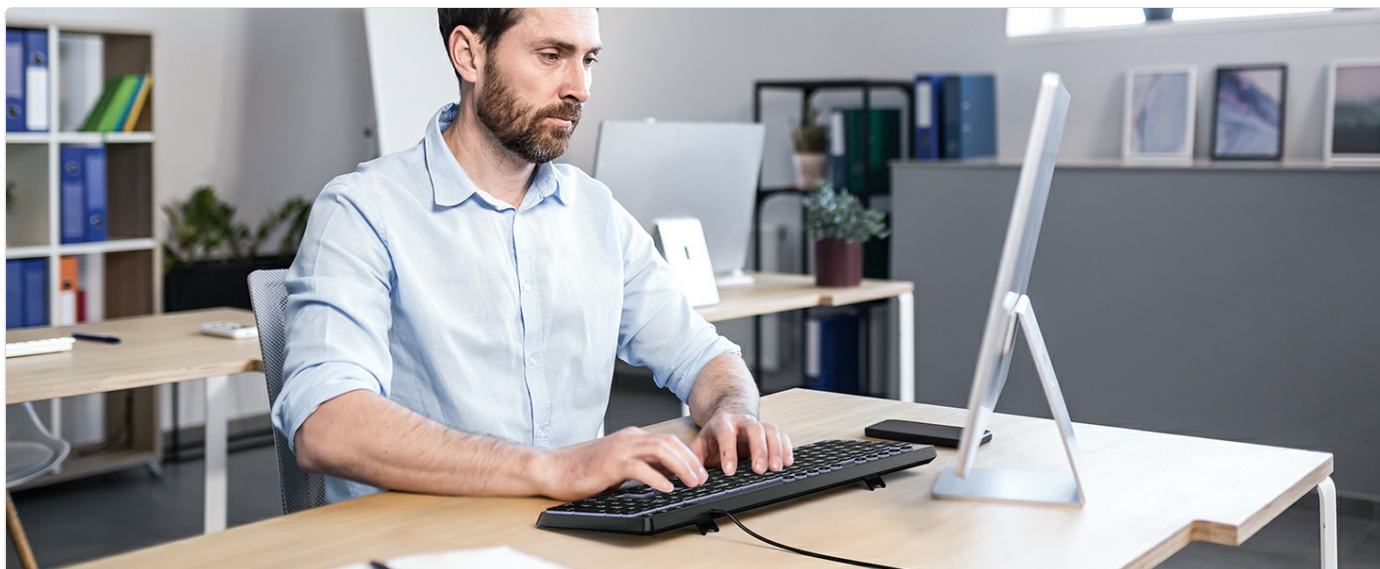


Image: Two side-profile views of the OMOTON keyboard, illustrating the two available typing angles (6 degrees and 8 degrees) provided by its adjustable feet for ergonomic comfort.

MAINTENANCE

To ensure the longevity and optimal performance of your OMOTON keyboard, follow these simple maintenance guidelines:

- **Cleaning:** Regularly wipe the keyboard surface with a soft, dry, lint-free cloth. For deeper cleaning, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid excessive moisture.
- **Dust Removal:** Use compressed air to remove dust and debris from between the keys.
- **Avoid Liquids:** Do not spill liquids on the keyboard. If a spill occurs, immediately disconnect the keyboard and allow it to dry completely before reconnecting.
- **Storage:** When not in use, store the keyboard in a clean, dry environment away from extreme temperatures.

TROUBLESHOOTING

If you encounter any issues with your OMOTON keyboard, please refer to the following common troubleshooting steps:

Common Issues and Solutions

Problem	Solution
Keyboard not responding	◦ Ensure the USB cable is securely plugged into both the keyboard and the computer. ◦ Try plugging the keyboard into a different USB port on your computer. ◦ Restart your computer. ◦ Test the keyboard on another computer to determine if the issue is with the keyboard or the computer.
Backlight not working	◦ Press Fn + Print Screen (Imp écr) to ensure the backlight is turned on. ◦ Try cycling through backlight modes by pressing Fn + Scroll Lock (Arrêt). ◦ Adjust brightness using Fn + Up/Down Arrow keys.

Problem	Solution
Multimedia keys not functioning	◦ Ensure you are pressing the Fn key simultaneously with the desired function key (F1-F12). ◦ Check your operating system's settings for any conflicting hotkey assignments.
Keys are sticky or unresponsive	◦ Clean the keyboard thoroughly, especially around the affected keys, to remove any debris or spills. ◦ If the issue persists after cleaning, contact customer support.

SPECIFICATIONS

Feature	Detail
Brand	OMOTON
Model Number	B0F6MMW491
Color	Black
Keyboard Description	Multimedia
Special Feature	Ergonomic, Backlit
Style	FR-Layout (AZERTY)
Material	Plastic
Language	French (AZERTY layout)
Connectivity	Wired (USB-A / USB-C)
Compatibility	PC Windows

WARRANTY AND SUPPORT

The OMOTON Backlit AZERTY Wired Keyboard comes with a **1-year manufacturer's warranty**. For technical support, warranty claims, or any other inquiries, please contact OMOTON customer service through the retailer where you purchased the product or visit the official OMOTON website for contact information. Please retain your proof of purchase for warranty purposes.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question