

[Manuals.plus](#) /

› [Haofy](#) /

› Haofy 3200 DPI Wired Gaming Mouse User Manual

Haofy Haofyei29cp5ar8-12

Haofy 3200 DPI Wired Gaming Mouse User Manual

Model: Haofyei29cp5ar8-12

INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your Haofy 3200 DPI Wired Gaming Mouse. Designed for both daily work and gaming, this optical mouse features an ergonomic design, adjustable DPI settings, and broad compatibility.



Figure 1: Overall view of the Haofy Wired Gaming Mouse. This image displays the white mouse with a distinctive crackle pattern, a braided USB cable, and its ergonomic shape.

SETUP

The Haofy Wired Gaming Mouse is designed for simple plug-and-play functionality, requiring no additional driver installation for basic operation.

1. **Connect the USB Cable:** Locate an available USB port on your computer (desktop, laptop, or PC).
2. **Insert the USB Connector:** Plug the USB connector of the mouse into the chosen USB port.
3. **System Recognition:** Your operating system should automatically detect and configure the mouse. This process typically takes a few seconds.

The mouse is compatible with a wide range of operating systems, including Windows XP, Windows 7, Windows 8, Windows 10, Windows Vista, and Windows Me.

OPERATING INSTRUCTIONS

This section details the primary functions and adjustable features of your gaming mouse.

Basic Mouse Functions

- **Left Click:** Primary selection and activation button.
- **Right Click:** Opens contextual menus.
- **Scroll Wheel:** Used for vertical scrolling through documents and web pages. The scroll wheel also functions as a clickable middle button.

Adjusting DPI (Sensitivity)

The mouse features four adjustable DPI levels, allowing you to change cursor sensitivity on the fly to suit different tasks, from precise graphic design work to fast-paced gaming.

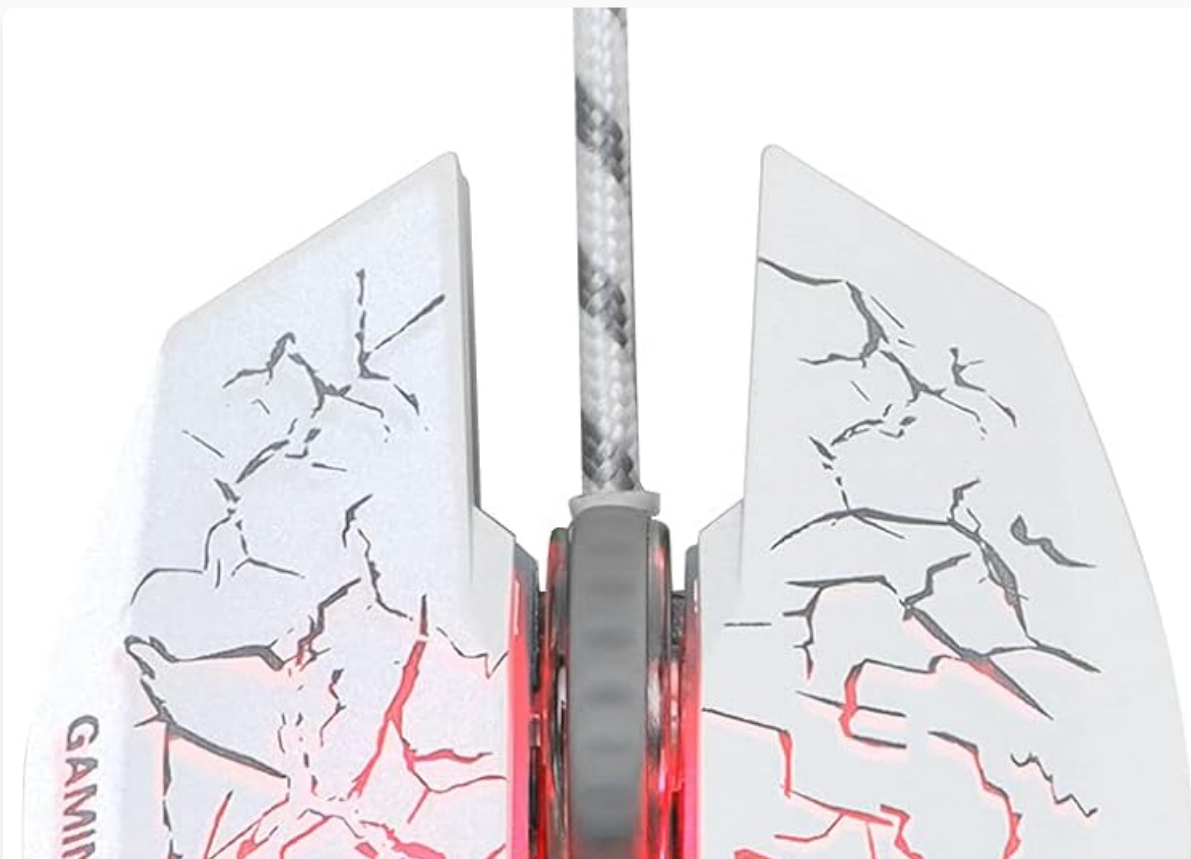




Figure 2: Top view of the mouse illustrating the DPI adjustment button. The image shows the mouse with its internal LED lighting illuminated in red, highlighting the central button located behind the scroll wheel.

To adjust the DPI setting, press the dedicated DPI button, typically located behind the scroll wheel. Each press will cycle through the available DPI levels, indicated by a change in the mouse's internal LED lighting or a brief cursor movement.

Ergonomic Design

The mouse is designed with an ergonomic shape to provide comfort during extended periods of use, reducing strain on your hand and wrist. Its contours fit naturally in the palm, making it suitable for both work and gaming sessions.



Figure 3: Side profile of the Haofy Gaming Mouse. This view emphasizes the ergonomic curve designed for comfortable hand placement and extended use.

MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your Haofy Wired Gaming Mouse.

- **Cleaning the Surface:** Use a soft, dry, lint-free cloth to wipe down the exterior of the mouse. For stubborn dirt, slightly dampen the cloth with water, ensuring no liquid enters the mouse.
- **Cleaning the Optical Sensor:** Periodically inspect the optical sensor located on the underside of the mouse. Use a cotton swab or a soft brush to gently remove any dust or debris that may obstruct the sensor.
- **Cable Care:** Avoid sharp bends or kinks in the USB cable. Do not pull the mouse by its cable. When storing, coil the cable loosely.
- **Avoid Liquids:** Do not expose the mouse to liquids. If liquid spills on the mouse, immediately disconnect it from the computer and allow it to dry completely before reconnecting.





Figure 4: Underside of the Haofy Gaming Mouse. This image highlights the optical sensor opening and the glide pads, along with product information.

If you encounter issues with your Haofy Wired Gaming Mouse, refer to the following common solutions:

- **Mouse Not Responding:**
 - Ensure the USB cable is securely plugged into the computer's USB port.
 - Try plugging the mouse into a different USB port on your computer.
 - Restart your computer.
 - Test the mouse on another computer to determine if the issue is with the mouse or the computer.
- **Cursor Movement is Erratic or Jumpy:**
 - Clean the optical sensor on the underside of the mouse (refer to the Maintenance section).
 - Ensure you are using the mouse on a clean, non-reflective, and uniform surface. Mouse pads are recommended.
- **DPI Setting Not Changing:**
 - Ensure you are pressing the correct DPI adjustment button.
 - Verify that the mouse is properly connected and recognized by your system.

SPECIFICATIONS

Feature	Detail
Product Type	Wired Optical Gaming Mouse
Brand	Haofy
Model Number	Haofyei29cp5ar8-12
Connection Type	USB Wired
Optical Resolution	3200 DPI (Adjustable, Four Levels)
Interface	USB
Ergonomic Support	Yes
Compatibility	Windows XP / 7 / 8 / 10 / Vista / Me
Item Weight	157 Grams
Approximate Dimensions (L x W x H)	15 x 10 x 5 cm

WARRANTY AND SUPPORT

For information regarding product warranty, please refer to the documentation provided at the time of purchase or contact your retailer. Warranty terms may vary based on region and point of sale.

For technical support or further assistance with your Haofy Wired Gaming Mouse, please contact Haofy customer support through their official website or the contact information provided with your product packaging.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question