

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Magcubic](#) /

› [Magcubic Projector Remote Control User Manual for HY300ULTRA and HY310](#)

Magcubic HY300ULTRA HY310

Magcubic Projector Remote Control User Manual

Models: HY300ULTRA, HY310

1. INTRODUCTION

This manual provides essential instructions for the proper setup, operation, and maintenance of your Magcubic Projector Remote Control. Please read this manual thoroughly before using the remote to ensure optimal performance and longevity.

2. PRODUCT OVERVIEW

The Magcubic Projector Remote Control is designed for intuitive control of your compatible Magcubic projectors, including models HY300ULTRA and HY310. Its lightweight design and Bluetooth connectivity ensure a seamless user experience.



This image displays the Magcubic Projector Remote Control, a sleek black remote with clearly labeled buttons for power, navigation, volume, and various projector functions. It features a circular directional pad with an 'OK' button in the center, surrounded by other function buttons.

Key Features:

- Lightweight design for comfortable handling.
- Bluetooth connectivity for reliable control.
- Dedicated buttons for power, mute, navigation, menu, home, and volume.
- Support for Miracast and AirPlay functions (projector dependent).

3. SETUP

3.1. Battery Installation

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch to open it.
3. Insert two AAA batteries, ensuring the correct polarity (+/-) as indicated inside the compartment.
4. Replace the battery compartment cover, ensuring it clicks securely into place.

3.2. Pairing with Projector (Bluetooth)

For Bluetooth connectivity, ensure your projector's Bluetooth function is enabled.

1. Turn on your Magcubic projector.
2. Navigate to the projector's **Settings** menu, then select **Bluetooth Setting**.
3. On the remote, press and hold the **OK** and **Volume Down (-)** buttons simultaneously for a few seconds until the remote's indicator light flashes, signaling pairing mode.
4. On the projector screen, select the remote control from the list of available Bluetooth devices to complete the pairing process.

4. OPERATING INSTRUCTIONS

4.1. Button Functions

Button	Function
Power (Red)	Turns the projector On/Off.
Mute	Mutes or unmutes the projector's audio.
Directional Pad (Up/Down/Left/Right)	Navigates through menus and options.
OK	Confirms selections or enters a menu/application.
Return	Goes back to the previous screen or menu.
Menu	Accesses additional options or context menus.
Home	Returns to the main home screen of the projector.
Volume (+/-)	Adjusts the audio volume.
Miracast/AirPlay	Initiates screen mirroring for compatible devices.
Mouse Mode	Switches to mouse control for easier navigation in certain applications.

4.2. Screen Mirroring (Wireless)

The projector supports wireless screen mirroring from compatible Android and iOS devices via Miracast and AirPlay. Ensure both your device and the projector are connected to the same Wi-Fi network.

1. On the projector's home screen, select the **ScreenCast** application.
2. Choose **Miracast** for Android devices or **AirPlay** for iOS devices.
3. On your mobile device, enable screen mirroring (e.g., "Smart View" on Samsung, "Screen Mirroring" on other Androids, or "Screen Mirroring" in Control Center for iOS).
4. Select the projector's name (e.g., "HY300 Pro+") from the list of available devices.

5. Confirm the connection on your device if prompted.

Your browser does not support the video tag.

This video demonstrates the Magcubic Projector Remote Control, highlighting its design, button layout, and battery compartment. It shows the remote being held and manipulated, providing a clear view of its physical features.

Your browser does not support the video tag.

This video provides a detailed look at the Magcubic Projector Remote Control, showcasing its various buttons and their functions, including power, volume, navigation, and menu access. It also illustrates how to install batteries.

4.3. Wired Connection

For a wired connection, use the appropriate cables (e.g., HDMI or USB) to connect your device to the projector. The remote can then be used to navigate the projector's interface and select the correct input source.

1. Connect your external device (e.g., laptop, gaming console) to the projector using an HDMI cable.
2. Alternatively, connect a USB storage device to the projector's USB port.
3. On the projector's home screen, use the remote to select the corresponding input source (e.g., **HDMI** or **USB**).

5. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's responsiveness decreases or it stops functioning. Always use new AAA batteries and dispose of old batteries responsibly.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.

6. TROUBLESHOOTING

- **Remote not responding:**

- Check if the batteries are correctly inserted and have sufficient charge. Replace if necessary.
- Ensure there are no obstructions between the remote and the projector.
- Re-pair the remote with the projector following the instructions in Section 3.2.

- **Laggy or inconsistent response:**

- Ensure the remote is within the effective operating range of the projector.
- Minimize potential interference from other electronic devices.
- If issues persist, try re-pairing the remote.

- **Specific buttons not working:**

- Check for any physical damage or debris under the buttons.
- Ensure the remote is in the correct mode (e.g., not in mouse mode if trying to use directional keys).
- If only certain buttons are affected, and general troubleshooting does not resolve the issue, the remote may require service.

7. SPECIFICATIONS

Feature	Detail
Brand	Magcubic
Item Weight	1.44 ounces
Package Dimensions	5.98 x 1.5 x 0.71 inches
Special Feature	Lightweight
Connectivity Technology	Bluetooth

8. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided with your Magcubic projector or visit the official Magcubic website. Keep your purchase receipt as proof of purchase for any warranty claims.

Related Documents - HY300ULTRA HY310

	<p>Magcubic HY310 Smart Projector: Quick Installation Guide and Features</p> <p>Comprehensive guide to setting up and using the Magcubic HY310 Smart Projector, covering remote pairing, settings, wireless screen mirroring, and safety instructions.</p>
	<p>Magcubic HY310 Smart Projector Quick Installation Guide</p> <p>A comprehensive guide to setting up and operating the Magcubic HY310 Smart Projector, covering safety, remote control pairing, system settings, and wireless screen mirroring.</p>
	<p>MAGCUBIC HY300 Smart Projector Installation Guide</p> <p>This installation guide provides detailed instructions for setting up and operating the MAGCUBIC HY300 Smart Projector, covering features like networking, Bluetooth, projection settings, and safety precautions.</p>
	<p>Magcubic HY300pro+ Smart Projector Quick Installation Guide</p> <p>Concise guide to installing and setting up the Magcubic HY300pro+ smart projector, covering safety, device components, remote functions, settings, and connectivity.</p>
	<p>Magcubic HY300 Smart Projector Quick Installation Guide</p> <p>A concise guide to installing and operating the Magcubic HY300 Smart Projector, covering setup, connectivity, settings, and safety precautions.</p>
	<p>Magcubic Smart Projector Quick Installation Guide</p> <p>A comprehensive guide for the Magcubic Smart Projector, detailing setup, features, connectivity options like Wi-Fi, Bluetooth, Miracast, and Airplay, along with essential safety information and support contact.</p>

