

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Ovela](#) /

› **Ovela Washable Electric Heated Throw Blanket User Manual**

**Ovela OVELTHRWBPC**

# Ovela Washable Electric Heated Throw Blanket

User Manual

Model: OVELTHRWBPC

## INTRODUCTION

Thank you for choosing the Ovela Washable Electric Heated Throw Blanket. This manual provides essential information for the safe and efficient operation, maintenance, and care of your new heated blanket. Please read all instructions carefully before use and retain this manual for future reference.

### Important Safety Information:

- Do not use with infants, children, incapacitated persons, or persons insensitive to heat.
- Do not use if wet.
- Do not use with pointed or sharp objects.
- Do not use if folded or bunched.
- Always disconnect from power when not in use or before cleaning.
- Regularly inspect the blanket and power cord for any signs of damage.

## PRODUCT OVERVIEW

The Ovela Washable Electric Heated Throw Blanket is designed to provide warmth and comfort. It features an ultra-soft flannel material, multiple heat settings, and a convenient timer function.



Image: The Ovela Electric Heated Throw Blanket, folded, with its detachable controller visible. Accompanying icons highlight key features: Digital Display, Machine Washable, Overheat Protection, 9 Heat Settings, and Heat Boost Function.

## Components:

- Heated Throw Blanket
- Detachable Digital Controller
- Power Cord

---

## SETUP

Follow these steps for the initial setup of your heated throw blanket:

1. Unpack the blanket and controller from the packaging.
2. Lay the blanket flat on a bed, sofa, or chair, ensuring there are no folds or creases.
3. Connect the detachable digital controller to the blanket's connector port. Ensure the connection is firm and secure.
4. Plug the power cord into a standard electrical outlet.



Image: The Ovela Electric Heated Throw Blanket draped over a grey sofa, ready for use. The controller and power cord are visible, indicating proper setup for lounging.

## OPERATING INSTRUCTIONS

The digital controller allows you to easily manage the heat and timer settings.



Image: A close-up view of the Ovela Electric Heated Throw Blanket's digital controller, showing its buttons and display for heat and timer adjustments.

### Power On/Off:

- Press the **Power** button to turn the blanket on. The LED display will illuminate.
- Press the **Power** button again to turn the blanket off.

## Adjusting Heat Settings:

- The blanket offers 9 heat settings, with a maximum temperature of 55°C.
- Use the "+" and "-" buttons to cycle through the heat levels (1-9).
- The selected heat level will be displayed on the LED screen.
- The preheat function allows the blanket to quickly warm up within 10 minutes.

## Setting the Timer:

- The blanket features a 1 to 9-hour auto-off timer.
- Press the **Timer** button to activate the timer function.
- Each press will increase the timer by one hour. The selected duration will be shown on the LED display.
- The blanket will automatically turn off once the set time has elapsed.

---

## MAINTENANCE AND CARE

Proper care will extend the life of your heated blanket.

### Cleaning Instructions:

The Ovela Electric Heated Throw Blanket is machine washable for easy cleaning.

1. Ensure the blanket is unplugged from the power outlet.
2. Detach the digital controller and power cord completely from the blanket.
3. Machine wash the blanket on a gentle cycle with cold water. Do not bleach or iron.
4. Tumble dry on low heat or line dry. Ensure the blanket is completely dry before reattaching the controller or storing.
5. Do not dry clean.



Image: A detailed close-up of the soft, plush flannel fabric of the Ovela Electric Heated Throw Blanket, highlighting its texture and quality, which contributes to its washability.

## Storage:

When not in use, store the blanket in a cool, dry place. Avoid folding it tightly or placing heavy objects on top, which could damage the internal heating elements.

## TROUBLESHOOTING

If you encounter any issues with your heated blanket, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Blanket not heating.	Not plugged in, controller not connected securely, power outage, or internal fault.	Ensure power cord is fully plugged into outlet and controller. Check household circuit breaker. If problem persists, contact support.
Controller display not working.	Loose connection or power issue.	Check all connections. Try plugging into a different outlet.
Blanket feels too hot/cold.	Incorrect heat setting.	Adjust the heat setting using the "+" and "-" buttons on the controller.
Blanket automatically turns off.	Timer function activated or overheating protection.	Check the timer setting. If not timer related, unplug the blanket, let it cool down for 30 minutes, then try again. Ensure it's not folded or bunched during use.

## SPECIFICATIONS

Feature	Detail
Model	OVELTHRWBPC
Power	80W
Material	100% Polyester Flannel
Dimensions	160 x 130cm
Heat Settings	9 levels (up to 55°C)
Timer	1-9 hours auto-off
Safety Features	Overheating and overcurrent protection
Washable	Machine washable (detachable controller)

## WARRANTY AND SUPPORT

Your Ovela Washable Electric Heated Throw Blanket comes with a standard manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions.

For technical support, troubleshooting assistance, or warranty claims, please contact Ovela customer service. Contact details can typically be found on the product packaging or the official Ovela website.

*Note: Always provide your product model number (OVELTHRWBPC) and purchase details when contacting support.*