



Manuals.plus /

› Magcubic /

› Magcubic Projector Remote for HY300PRO+ User Manual

## Magcubic HY300PRO

# Magcubic Projector Remote for HY300PRO+ User Manual

## INTRODUCTION

---

This manual provides detailed instructions for the setup, operation, maintenance, and troubleshooting of your Magcubic Projector Remote, specifically designed for the HY300PRO+ projector. Please read this manual thoroughly before using the remote control to ensure optimal performance and longevity.

## PRODUCT OVERVIEW

---

The Magcubic Projector Remote is a lightweight, black remote control featuring Bluetooth connectivity and voice control capabilities, enhancing your interaction with the HY300PRO+ projector.



Image: A black remote control with various buttons, including a red power button at the top, a circular directional pad with an 'OK' button in the center, volume controls, a microphone button for voice control, a home button, and a settings button.

### Key Features:

- **Bluetooth Connectivity:** Ensures a stable and responsive connection to your projector.
- **Voice Control:** Allows for hands-free command execution.
- **Lightweight Design:** Comfortable to hold and easy to use.
- **Dedicated Buttons:** Quick access to essential projector functions.

## SETUP INSTRUCTIONS

---

### 1. Battery Installation

1. Locate the battery compartment cover on the back of the remote control.

2. Slide the cover downwards or press the latch to open it.
3. Insert two AAA batteries (not included), ensuring the correct polarity (+ and -) as indicated inside the compartment.
4. Replace the battery compartment cover until it clicks securely into place.

## 2. Pairing with HY300PRO+ Projector

The remote control uses Bluetooth for connection. Follow these steps to pair it with your HY300PRO+ projector:

1. Ensure your HY300PRO+ projector is powered on and within 5 meters of the remote control.
2. On the projector's interface, navigate to the *Settings* menu.
3. Select *Bluetooth or Remote & Accessories*.
4. Put the remote control into pairing mode. This is typically done by pressing and holding the **OK** button and the **Volume Down** button simultaneously for a few seconds until an indicator light on the remote starts flashing.
5. On the projector screen, select the remote control from the list of available Bluetooth devices (it may appear as "Magcubic Remote" or a similar name).
6. Once connected, the indicator light on the remote will stop flashing, and the projector will confirm the successful pairing.

## OPERATING INSTRUCTIONS

---

Familiarize yourself with the remote's buttons for seamless control of your HY300PRO+ projector.

- **Power Button ( )**: Press to turn the projector on or off.
- **Directional Pad (Up, Down, Left, Right)**: Navigate through menus and selections.
- **OK Button**: Confirm selections or open items.
- **Back Button (←)**: Return to the previous screen or menu.
- **Home Button ( )**: Go directly to the projector's main home screen.
- **Volume Up/Down Buttons (+ / -)**: Adjust the audio volume.
- **Mute Button ( )**: Mute or unmute the audio.
- **Microphone Button ( )**: Activate voice control. Press and hold while speaking your command.
- **Settings Button (⚙)**: Access the projector's settings menu.

## MAINTENANCE

---

### Cleaning

- Wipe the remote control with a soft, dry cloth.
- Do not use abrasive cleaners, waxes, or solvents.

### Battery Replacement

- Replace batteries when the remote's response becomes sluggish or if the indicator light does not illuminate.
- Always replace both batteries at the same time with new AAA batteries.
- Dispose of used batteries according to local regulations.

### Storage

- Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.
- If the remote will not be used for an extended period, remove the batteries to prevent leakage.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote not responding	Low or dead batteries; Remote not paired; Obstruction between remote and projector.	Replace batteries; Re-pair the remote (see Setup); Ensure clear line of sight (though Bluetooth is less sensitive to this, extreme obstructions can interfere).
Pairing fails	Remote not in pairing mode; Projector's Bluetooth off; Interference.	Ensure remote is in pairing mode; Check projector's Bluetooth settings; Move closer to the projector; Restart both devices.
Voice control not working	Microphone blocked; Remote not paired correctly; Projector's voice assistant not active.	Ensure microphone is clear; Re-pair the remote; Check projector's settings for voice assistant activation.

## SPECIFICATIONS

- **Model Name:** HY300PRO
- **Brand:** Magcubic
- **Connectivity Technology:** Bluetooth
- **Controller Type:** Voice Control
- **Compatible Devices:** Projector (specifically HY300PRO+)
- **Maximum Range:** 5 Meters
- **Item Weight:** 0.04 Kilograms
- **Color:** Black
- **Special Feature:** Lightweight

## WARRANTY AND SUPPORT

This Magcubic Projector Remote comes with a limited warranty. Please refer to the warranty information provided with your original projector purchase or contact Magcubic customer support for details regarding the specific warranty period and terms.

### Customer Support:

For technical assistance, troubleshooting, or warranty inquiries, please visit the official Magcubic website or contact their customer service department. Contact information can typically be found on the product packaging or the manufacturer's website.