

- Manuals.plus /
- > TANCHJIM /
- > TANCHJIM MINO ASANO Tench Wireless Earbuds (Mino AT) User Manual

TANCHJIM Mino AT

TANCHJIM MINO ASANO Tench Wireless Earbuds User Manual

Model: Mino AT

INTRODUCTION

This manual provides detailed instructions for the TANCHJIM MINO ASANO Tench Wireless Earbuds. Please read this manual carefully before using the product to ensure proper operation and to maximize your listening experience. Keep this manual for future reference.



Image: TANCHJIM MINO ASANO Tench Wireless Earbuds and charging case.

SETUP

1. Charging the Earbuds and Case

Before first use, fully charge the earbuds and the charging case. Place the earbuds into the charging case. Connect the charging case to a power source using a compatible USB-C cable. The indicator lights on the case will show the charging status.



Image: The charging case with earbuds, indicating up to 37 hours of total battery life.

2. Pairing with a Device

1. Open the charging case. The earbuds will automatically enter pairing mode.
2. On your device (smartphone, tablet, laptop), enable Bluetooth.
3. Search for "TANCHJIM MINO" or "MINO AT" in the list of available Bluetooth devices.
4. Select the device name to connect. Once connected, a confirmation sound will play.

For subsequent uses, the earbuds will automatically connect to the last paired device when taken out of the case.

3. Installing the Companion App

Download the official TANCHJIM app from your device's app store (iOS and Android compatible). The app allows for customization of sound effects, equalizer settings, and touch controls.



Image: The TANCHJIM companion app interface, displaying connection status and customization options.

OPERATING INSTRUCTIONS

1. Wearing the Earbuds

Gently insert the earbuds into your ear canals. Adjust them for a comfortable and secure fit to ensure optimal sound quality and noise cancellation performance.



Image: A person wearing the TANCHJIM MINO earbuds, demonstrating proper fit.

2. Touch Controls

The earbuds feature smart touch controls on the outer surface. Refer to the diagram below for specific functions:



Image: A detailed diagram illustrating the touch control area and functions on the TANCHJIM MINO earbuds.

- **Single Tap (Either earbud):** Play/Pause music, Answer/End call.
- **Double Tap (Left earbud):** Previous track.
- **Double Tap (Right earbud):** Next track.
- **Triple Tap (Either earbud):** Activate Voice Assistant (Siri, Xiao AI, Vivi, etc.).
- **Press and Hold for 2 Seconds (Left earbud):** Turn On/Off Noise Cancelling Mode.
- **Press and Hold for 2 Seconds (Right earbud):** Turn On/Off Transparency Mode.
- **Double Tap and Hold for 5 Seconds (Either earbud):** Re-pair device.

3. Noise Cancellation (ANC) and Transparency Modes

The earbuds feature Active Noise Cancellation (ANC) to reduce ambient noise and a Transparency Mode to allow you to hear your surroundings. Switch between modes using the touch controls or the companion app.



Image: Illustration of the 45dB Advanced Noise Cancellation feature, showing noise reduction.



Image: Illustration of ENC Noise Reduction technology, designed for clear voice calls by suppressing ambient noise.

4. Low Latency Game Mode

Activate Game Mode via the companion app to reduce audio latency to as low as 0.086 seconds, providing improved audio-visual synchronization for gaming and video playback.



Image: Earbuds shown with a smartphone, highlighting the ultra-low latency of 86ms for synchronized audio-visual experience.

MAINTENANCE

1. Cleaning

Regularly clean the earbuds and charging case with a soft, dry, lint-free cloth. Do not use harsh chemicals or abrasive materials. Remove ear tips and clean them separately with mild soap and water if necessary, ensuring they are completely dry before reattaching.

2. Water Resistance

The earbuds are rated IPX4 water-resistant, meaning they are protected against splashing water from any direction. They are suitable for workouts and light rain but should not be submerged in water or exposed to strong jets of water.

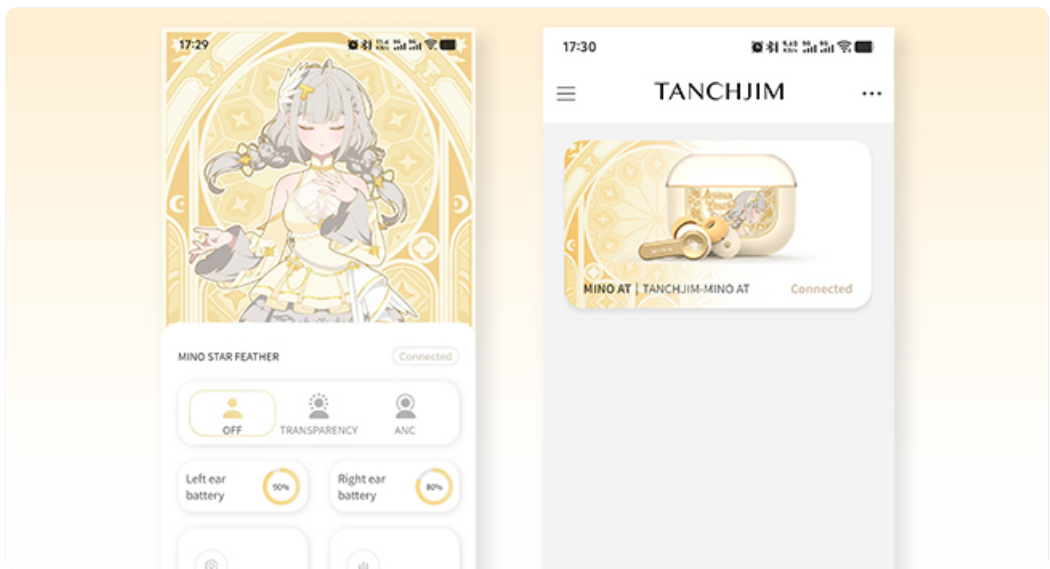


Image: The TANCHJIM MINO earbuds shown with water droplets, illustrating their IPX4 water-resistant design.

3. Storage

When not in use, store the earbuds in their charging case to protect them from dust, damage, and to keep them charged.

TROUBLESHOOTING

- **Earbuds not pairing:** Ensure both earbuds are in the charging case, then open the lid to activate pairing mode. Check your device's Bluetooth settings and try re-pairing. If issues persist, perform a factory reset (refer to the app or manufacturer's support for specific steps).
- **No sound or low volume:** Check the volume levels on both your device and the earbuds. Ensure the earbuds are properly seated in your ears. Try disconnecting and reconnecting the Bluetooth connection.
- **ANC not effective:** Ensure the earbuds are properly sealed in your ear canals. ANC performance can vary based on the type and frequency of ambient noise.
- **Earbuds not disconnecting/shutting off automatically:** If earbuds do not automatically disconnect when placed in the case, ensure the case is charged and the earbuds are correctly seated. Manually disconnect via your device's Bluetooth settings if necessary.
- **Touch controls unresponsive:** Ensure your fingers are clean and dry. Try restarting the earbuds by placing them in the case and taking them out again.
- **Battery life shorter than expected:** Ensure earbuds and case are fully charged. High volume levels and continuous ANC use can reduce battery life.

SPECIFICATIONS

Feature	Detail
Model Name	Mino AT
Brand	TANCHJIM
Ear Placement	In-Ear
Impedance	32 Ohms

Feature	Detail
Frequency Range	20-20,000 Hz
Bluetooth Version	5.3
Bluetooth Range	20 Meters
Battery Life (Earbuds)	Approx. 6 hours (standard mode), 5 hours (ANC mode)
Total Battery Life (with case)	Up to 37 hours (standard mode), 31 hours (ANC mode)
Water Resistance	IPX4 (Resistant to splashing water)
Audio Driver Type	Dynamic Driver (10mm)
Noise Control	Active Noise Cancellation (ANC), Environmental Noise Cancellation (ENC) for calls
Control Method	Touch, Application
Material	Plastic
Specific Uses	Gaming, Sports, Music, Travel



Image: Diagram illustrating the 10mm dynamic driver, responsible for the earbud's audio quality.

WARRANTY INFORMATION

For detailed warranty information, please refer to the warranty card included with your product or visit the official TANCHJIM website. Warranty terms and conditions may vary by region and retailer.

CUSTOMER SUPPORT

If you encounter any issues not covered in this manual or require further assistance, please contact TANCHJIM customer support through their official website or the contact information provided with your purchase. You can also check the TANCHJIM brand store on Amazon for additional resources.

TANCHJIM Brand Store: [Visit TANCHJIM Store](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0F6ND2863>

More documents and user manuals: <https://manuals.plus/>