

[Manuals.plus](#) /

> [jioeuinly](#) /

> Instruction Manual for Tibuta A30 Tablet Case

jioeuinly Tibuta A30 Tablet Case

Instruction Manual for Tibuta A30 Tablet Case

Brand: jioeuinly

INTRODUCTION

This manual provides comprehensive instructions for the proper use, installation, and maintenance of your jioeuinly Case Compatible with Tibuta A30 Tablet. This folio cover is designed to offer 360-degree rotation, multi-viewing angles, and robust protection for your tablet.

Please read this manual thoroughly before using the product to ensure optimal performance and longevity.

PRODUCT OVERVIEW

The jioeuinly tablet case is a durable and versatile accessory for your Tibuta A30 Tablet. It features a PU leather exterior, a soft anti-slip interior, and a design that protects against fingerprints, dirt, scratches, shocks, and dust. The case includes a 360-degree rotating stand and a reserved camera opening.



Figure 1: Overview of the Tibuta A30 Tablet Case in red and black, demonstrating its closed form and how a tablet fits into its standing configurations.

SETUP AND INSTALLATION

Follow these steps to properly install your tablet into the case:

- 1. Open the Case:** Unfold the folio case completely to reveal the tablet holding frame.
- 2. Insert Tablet:** Carefully align your Tibuta A30 Tablet with the frame. Gently press the tablet into the frame, ensuring all corners are securely seated. The case is designed with precise cutouts for ports and buttons.
- 3. Verify Fit:** Confirm that the tablet is snug and secure within the case. Ensure that all ports, speakers, and buttons are accessible and functional.
- 4. Camera Alignment:** The case features a reserved opening for the tablet's rear camera. Ensure your tablet's camera aligns with this opening for unobstructed use.



Figure 2: Illustration of a tablet being placed into the case, emphasizing the importance of verifying tablet compatibility and fit.

OPERATING INSTRUCTIONS

The case offers multiple functionalities to enhance your tablet experience:

Multi-Viewing Angles

The case features an anti-slip strip design that allows the tablet to be propped up securely at various viewing angles. This is ideal for watching videos, typing, or video calls.



Figure 3: The tablet case configured as a stand, highlighting the anti-slip stripe that provides stability for various viewing angles.

360-Degree Rotation

The tablet holder within the case can rotate 360 degrees, allowing you to switch between portrait and landscape orientations without removing the tablet from the case. This provides flexibility for different applications and viewing preferences.



Figure 4: Visual representation of the case's 360-degree rotation capability, enabling seamless switching between portrait and landscape orientations.

Camera Access

The case is designed with a specific cutout for the tablet's rear camera, ensuring that the camera can be used without obstruction while the tablet is in the case. Note that the case does not support auto-sleep/wake functions.



Figure 5: Detailed view of the camera cutouts on the case, designed to accommodate different tablet camera placements.

Storage Pocket

The case includes a convenient storage pocket, suitable for carrying cards, documents, or cash. This feature adds practicality to the folio design.



Figure 6: The integrated storage pocket within the case, demonstrating its capacity for small items like cards and cash.

MAINTENANCE AND CARE

To ensure the longevity and appearance of your tablet case, follow these care instructions:

- **Cleaning:** Wipe the exterior with a soft, damp cloth. For stubborn stains, use a mild soap solution and then wipe dry immediately. Avoid harsh chemicals or abrasive cleaners.
- **Protection:** Keep the case away from direct sunlight, extreme temperatures, and sharp objects to prevent damage to the PU leather.
- **Storage:** When not in use, store the case in a cool, dry place.



Figure 7: Visual representation of the case's all-over protection, highlighting its ability to protect against drops, its slim profile, and precise cutouts for device ports.

TROUBLESHOOTING

If you encounter any issues with your tablet case, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Tablet does not fit securely.	Incorrect tablet model or improper installation.	Ensure your tablet is a Tibuta A30. Re-insert the tablet, making sure all corners are fully seated in the frame.
Camera opening is misaligned.	Tablet not correctly positioned within the case.	Adjust the tablet's position within the frame until the camera aligns perfectly with the cutout.
Case stand is unstable.	Tablet not placed on the anti-slip strip or on an uneven surface.	Ensure the tablet's edge rests firmly on the anti-slip strip. Use the case on a flat, stable surface.

SPECIFICATIONS

Feature	Detail
Product Dimensions	0.39 x 0.39 x 0.39 inches
Item Weight	2.46 ounces
Form Factor	Flip Case
Color	Red
Material	Premium durable synthetic leather with soft anti-slip interior
Special Features	Card insertion, Thickened anti-drop corner protector, Folding stand, 360-degree rotation
What's in the Box	1*Tablet Case
Manufacturer	J-2504-SSPB-20
Country of Origin	China

WARRANTY AND SUPPORT

For information regarding warranty coverage or technical support, please refer to the seller's policy on the purchase platform or contact the manufacturer directly using the provided contact details on the product packaging or purchase invoice. This product is designed for durability and protection. Should you experience any manufacturing defects, please retain your proof of purchase for warranty claims.

