

[Manuals.plus](#) /

› [MOMIUCO](#) /

› MOMIUCO Candle Warmer Lamp Model MOMIUCO-CL4 User Manual

MOMIUCO MOMIUCO-CL4

MOMIUCO Candle Warmer Lamp Model MOMIUCO-CL4 User Manual

Enhance your space with flameless fragrance

1. INTRODUCTION

Thank you for choosing the MOMIUCO Candle Warmer Lamp. This device provides a flameless, smoke-free method to enjoy your favorite jar candles, releasing fragrance through gentle heat. This manual provides essential information for safe and effective use of your candle warmer lamp.



Image 1: The MOMIUCO Candle Warmer Lamp with an amber glass shade and wooden base.

2. SAFETY INSTRUCTIONS

- **Flameless Operation:** This device is designed to melt candles using heat from a bulb, eliminating the need for an open flame. **Do not light the candle wick while the warmer is in operation.**
- **Placement:** Place the candle warmer on a stable, flat, heat-resistant surface away from flammable materials, drafts, and out of reach of children and pets.
- **Electrical Safety:** Ensure the power cord is not pinched or damaged. Do not operate with wet hands. Unplug the device when not in use or before cleaning.
- **Bulb Safety:** The halogen bulb becomes hot during operation. Avoid touching the bulb directly. Allow the bulb to cool completely before replacing.
- **Candle Compatibility:** Use only jar candles that fit securely on the base and allow adequate clearance from the bulb. The lamp is suitable for candles under 5.6 inches in height.
- **Indoor Use Only:** This product is intended for indoor use only.

Usage Comparison



- ✓ Candles Last Longer
- ✓ Candles Have a Flat Surface
- ✓ Even Fragrance Release
- ✓ Avoid Flammable Accidents

- ✗ Candles Don't Last
- ✗ Dented Candles Surface
- ✗ Slow Fragrance Release
- ✗ Prone to Fire

Image 2: Visual comparison illustrating the benefits of flameless candle warming: no flame, no smoke, no soot, and extended candle life.

3. PRODUCT OVERVIEW

Components:

- Lamp Unit (Metal frame, glass shade, wooden base)
- GU10 Halogen Bulbs (2 included)
- In-line Control Switch (with dimmer and timer functions)

Key Features:

- **Adjustable Height:** Accommodates various candle sizes.
- **Dimmable Light:** Four brightness levels to control fragrance intensity and ambiance.
- **Built-in Timer:** Automatic shut-off options (2H/4H/8H) for convenience and safety.

- **Flameless Operation:** Melts candles from the top down without an open flame, reducing fire risk and soot.

Product Details



GU10 Bulbs



Lampshade



Dimmer



Timer Switch



Wooden Base



Adjustment Knob



Image 3: Product details highlighting the included bulbs, lampshade, dimmer, timer switch, wooden base, and height adjustment knob.

4. SETUP

1. **Unpack:** Carefully remove all components from the packaging.
2. **Insert Bulb:** Gently screw one of the provided GU10 halogen bulbs into the lamp socket located inside the lampshade. Ensure it is securely fastened.
3. **Place Candle:** Position your desired jar candle onto the wooden base.
4. **Adjust Height:** Loosen the adjustment knob on the vertical metal rod. Slide the lamp arm up or down to position the bulb approximately 1-2 inches above the candle wax. Tighten the knob to secure the height.
5. **Connect Power:** Plug the power cord into a standard electrical outlet.

Height Adjustable

Suitable for A Variety of Different Candles



Image 4: Illustration of the adjustable height feature, accommodating various candle sizes.

5. OPERATING INSTRUCTIONS

Use the in-line control switch to operate your candle warmer lamp:

- **Power On/Off:** Press the power button (usually indicated by a circle with a vertical line) to turn the lamp on or off.
- **Adjust Brightness:** Use the '+' and '-' buttons to cycle through the four brightness levels. Higher brightness melts the candle faster and releases more fragrance.
- **Set Timer:** Press the timer button (usually indicated by a clock icon) to select an automatic shut-off time: 2 hours, 4 hours, or 8 hours. The corresponding indicator light will illuminate.
- **Fragrance Release:** The heat from the bulb will gradually melt the top layer of the candle, releasing its scent into the room.



Image 5: The in-line control switch for brightness adjustment and timer settings.

6. MAINTENANCE

- **Cleaning:** Always unplug the lamp before cleaning. Wipe the lamp and base with a soft, dry cloth. Do not use abrasive cleaners or immerse the unit in water.
- **Bulb Replacement:** When a bulb burns out, unplug the lamp and allow the bulb to cool completely. Carefully unscrew the old GU10 bulb and replace it with a new one. Ensure the replacement bulb is of the correct type and wattage (50W GU10 halogen).
- **Wax Management:** Over time, the fragrance in the top layer of melted wax may diminish. You can pour off a small amount of the melted wax to expose a fresh layer, or replace the candle with a new one.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Lamp does not turn on.	No power; faulty bulb.	Check if the lamp is properly plugged in. Test the outlet with another device. Replace the bulb.
Candle is not melting or releasing fragrance effectively.	Lamp height too high; brightness too low; candle wax depleted.	Adjust the lamp height closer to the candle (1-2 inches). Increase the brightness setting. Pour off some melted wax or replace the candle.
Timer function not working.	Timer not set correctly.	Ensure the timer button has been pressed and the corresponding indicator light is on.

8. SPECIFICATIONS

Feature	Detail
Brand	MOMIUCO
Model Name	MOMIUCO-CLD
Item Model Number	MOMIUCO-CL4
Color	Amber Round
Material	Metal, Wood
Product Dimensions	6.9"D x 4.9"W x 9.8"H
Item Weight	2.69 pounds
Bulb Base	GU10
Finish Type	Unfinished
Mounting Type	Tabletop
UPC	762849866925

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the product packaging or contact MOMIUCO customer service directly. Keep your purchase receipt for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question