

## Haier H55K85FUX

# Haier H55K85FUX 55-inch 4K UHD Smart TV User Manual

Model: H55K85FUX

[Introduction](#) [Safety](#) [Contents](#) [Setup](#) [Operation](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Support](#)

## 1. INTRODUCTION

This manual provides essential information for the safe and efficient use of your Haier H55K85FUX 55-inch 4K UHD Smart TV. This television features a Direct LED panel, 4K UHD resolution with HDR10 support, and the Google TV operating system, offering access to a wide range of applications and content. It also includes integrated Google Assistant, Bluetooth 5.1 connectivity, and multiple HDMI 2.1 ports. Please read this manual thoroughly before operating your television and retain it for future reference.



Figure 1.1: Front view of the Haier H55K85FUX Smart TV.

## 2. IMPORTANT SAFETY INFORMATION

---

To reduce the risk of electric shock, fire, or damage, always follow these basic safety precautions:

- **Power Source:** Connect the TV only to an AC 100-240V, 50/60Hz power supply.
- **Ventilation:** Ensure adequate ventilation around the TV. Do not block ventilation openings.
- **Water and Moisture:** Do not expose the TV to rain or moisture. Do not place objects filled with liquids, such as vases, on the TV.
- **Heat Sources:** Keep the TV away from heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- **Cleaning:** Unplug the TV from the wall outlet before cleaning. Use a soft, dry cloth. Do not use liquid cleaners or aerosol cleaners.
- **Children:** Do not allow children to climb on the TV or stand.
- **Wall Mounting:** If wall-mounting the TV, ensure the mount is securely installed and capable of supporting the TV's weight. Consult a professional for installation.
- **Power Cord:** Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.

## 3. PACKAGE CONTENTS

---

Please check that all items listed below are included in your package. If any items are missing or damaged, contact your retailer.

- Haier H55K85FUX 55-inch 4K UHD Smart TV Unit
- Smart Remote Control
- Power Cable
- User Manual (this document)
- TV Stands (2 units)
- Screws for TV Stands

## 4. SETUP

---

### 4.1 Attaching the TV Stands

1. Carefully place the TV screen-down on a soft, flat surface (e.g., a blanket on a table) to prevent damage.
2. Identify the left and right stands.
3. Align each stand with the corresponding screw holes on the bottom of the TV.
4. Secure each stand using the provided screws. Do not overtighten.
5. Carefully lift the TV to an upright position and place it on a stable, level surface.



Figure 4.1: Haier Smart TV with stands attached.

## 4.2 Wall Mounting (Optional)

If you choose to wall-mount your TV, it is recommended to use a VESA-compatible wall mount kit (not included). For safe installation, it is strongly advised to consult a qualified professional. Ensure the wall can support the weight of the TV and the mount.

## 4.3 Connecting External Devices

Your Haier Smart TV offers various ports for connecting external devices.



Figure 4.2: Rear view of the TV showing connection ports.

- **HDMI Ports (x4):** Connect Blu-ray players, game consoles, set-top boxes, or other HDMI-enabled devices. This model features HDMI 2.1 ports for enhanced capabilities.
- **USB Ports (x2):** Connect USB storage devices for media playback or software updates.
- **Ethernet Port:** For a wired internet connection.
- **Antenna/Cable Input:** Connect an antenna or cable TV signal.
- **Audio Output:** For connecting external audio systems.

#### 4.4 Power Connection and Initial Setup

1. Connect the power cable to the TV's power input and then to a wall outlet.
2. Press the Power button on the remote control or on the TV itself to turn it on.
3. Follow the on-screen instructions to complete the initial setup, which typically includes:
  - Language selection.
  - Network connection (Wi-Fi or Ethernet).
  - Google account login (required for Google TV features).
  - Channel scanning.

## 5. OPERATING INSTRUCTIONS

---

### 5.1 Using the Smart Remote Control

The included Smart Remote Control allows you to navigate the TV's features. Key functions include:

- **Power Button:** Turns the TV on or off.
- **Navigation Pad (Up/Down/Left/Right/OK):** Navigates menus and selects items.
- **Back Button:** Returns to the previous screen.
- **Home Button:** Accesses the Google TV home screen.
- **Google Assistant Button:** Activates voice control.
- **Volume Up/Down:** Adjusts the volume.
- **Channel Up/Down:** Changes TV channels.
- **App Shortcut Buttons:** Direct access to popular streaming services (e.g., Netflix, YouTube).

## 5.2 Google TV Interface

The Google TV interface organizes your content from various streaming services and apps into a personalized home screen. You can browse recommendations, access your watch list, and discover new content.

- **Home Screen:** Displays recommended content, installed apps, and personalized suggestions.
- **Apps:** Access the Google Play Store to download and install additional applications.
- **Library:** Find your purchased movies and shows.

## 5.3 Chromecast Built-in

Your TV has Chromecast built-in, allowing you to cast content (videos, photos, music) from compatible mobile devices or computers directly to your TV screen. Ensure your device and TV are connected to the same Wi-Fi network.

## 5.4 Google Assistant

Press the Google Assistant button on your remote and speak into the microphone to control your TV, search for content, get answers, and manage smart home devices.

## 5.5 Bluetooth Connectivity

To pair Bluetooth devices (e.g., headphones, soundbars) with your TV:

1. Go to the TV's Settings menu.
2. Select 'Remotes & Accessories' or 'Bluetooth'.
3. Enable Bluetooth on the TV and put your device into pairing mode.
4. Select your device from the list on the TV screen to pair.

# 6. MAINTENANCE

---

## 6.1 Cleaning the TV

- **Screen:** Gently wipe the screen with a soft, lint-free cloth. For stubborn marks, slightly dampen the cloth with water or a specialized screen cleaner (ensure it's safe for TV screens) and wipe gently. Do not spray liquid directly onto the screen.
- **Cabinet:** Wipe the TV cabinet with a soft, dry cloth. Avoid using abrasive cleaners, waxes, or solvents.
- Always unplug the TV before cleaning.

## 6.2 Software Updates

Your TV may receive software updates periodically to improve performance and add new features. Ensure your TV is connected to the internet to receive these updates. You can usually check for updates in the TV's Settings menu under 'About' or 'System Update'.

# 7. TROUBLESHOOTING

---

If you encounter issues with your TV, refer to the following common problems and solutions:

Problem	Possible Solution
No power	Ensure the power cable is securely connected to both the TV and the wall outlet. Check if the outlet is working by plugging in another device.
No picture, but sound is present	Check the input source. Ensure external devices are powered on and connected correctly. Try restarting the TV.
No sound, but picture is present	Check the volume level and ensure the TV is not muted. If using external audio, check its connections and power.
Remote control not working	Replace the batteries. Ensure there are no obstructions between the remote and the TV's IR sensor. Re-pair the remote if it's a Bluetooth remote.
Cannot connect to Wi-Fi	Ensure your Wi-Fi router is on and working. Re-enter the Wi-Fi password. Try restarting both the TV and the router.
Apps are slow or freezing	Close unused applications. Clear the cache of problematic apps in the TV's settings. Restart the TV.

## 8. SPECIFICATIONS

Feature	Detail
Brand	Haier
Model Number	H55K85FUX (36200105)
Screen Size	55 Inches
Display Technology	Direct LED 4K UHD
Resolution	3840 x 2160 (4K UHD)
Refresh Rate	60 Hz
Operating System	Google TV
Processor	Quad Core
Memory (RAM + ROM)	2 GB RAM + 32 GB ROM
Connectivity	Wi-Fi, Ethernet, Bluetooth 5.1
HDMI Ports	4 (HDMI 2.1)
USB Ports	2
Special Features	HDR10, Google Assistant, Chromecast Built-in, Frameless Design
Product Dimensions (W x H x D, with stand)	122.8 cm x 74.8 cm x 26.5 cm
Product Dimensions (W x H x D, without stand)	122.76 cm x 71.27 cm x 8.13 cm

## 9. WARRANTY AND SUPPORT

Your Haier H55K85FUX Smart TV is covered by a manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions, including the warranty period and coverage details.

For technical assistance, troubleshooting beyond this manual, or to inquire about warranty service, please contact Haier customer support. Contact information can typically be found on the Haier official website or on your warranty documentation.