

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [MUDDY](#) /
- › [MUDDY Trifecta 180 Cellular Trail Camera User Manual](#)

MUDDY Trifecta 180 Cellular Trail Camera (FC-CR1_K2502)

MUDDY Trifecta 180 Cellular Trail Camera User Manual

Model: FC-CR1_K2502

1. INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your MUDDY Trifecta 180 Cellular Trail Camera. This bundle includes the Trifecta 180 Cellular Camera, a SanDisk 32GB Ultra SDHC UHS-I Memory Card, and a Focus All-In-One High Speed Card Reader. Please read this manual thoroughly before using the product to ensure optimal performance and longevity.





Figure 1.1: MUDDY Trifecta 180 Cellular Trail Camera bundle, including the camera, a SanDisk 32GB memory card, and a Focus card reader.

2. PRODUCT COMPONENTS

The MUDDY Trifecta 180 Cellular Trail Camera bundle consists of the following main components:

- **MUDDY Trifecta 180 Cellular Trail Camera:** The primary device for capturing photos and videos.
- **SanDisk 32GB Ultra SDHC UHS-I Memory Card:**For storing captured images and videos.
- **Focus All-In-One High Speed Card Reader:** For transferring data from the memory card to a computer.

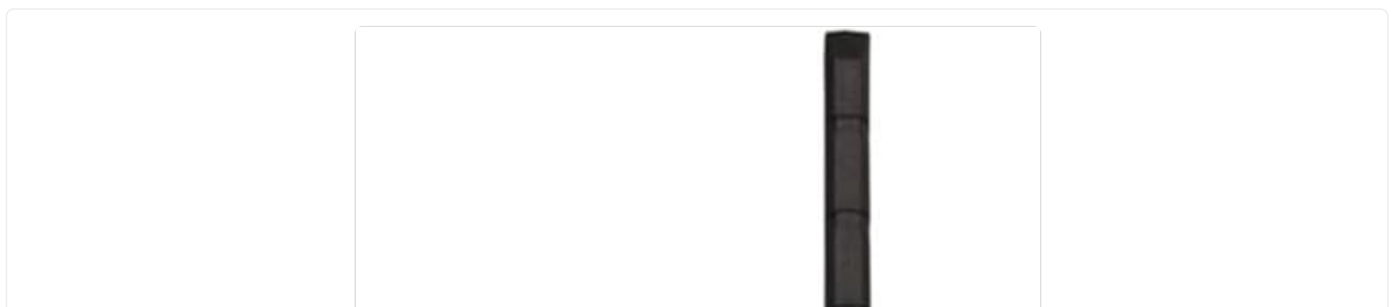




Figure 2.1: Front view of the MUDDY Trifecta 180 Cellular Trail Camera, showing the lens and sensors.

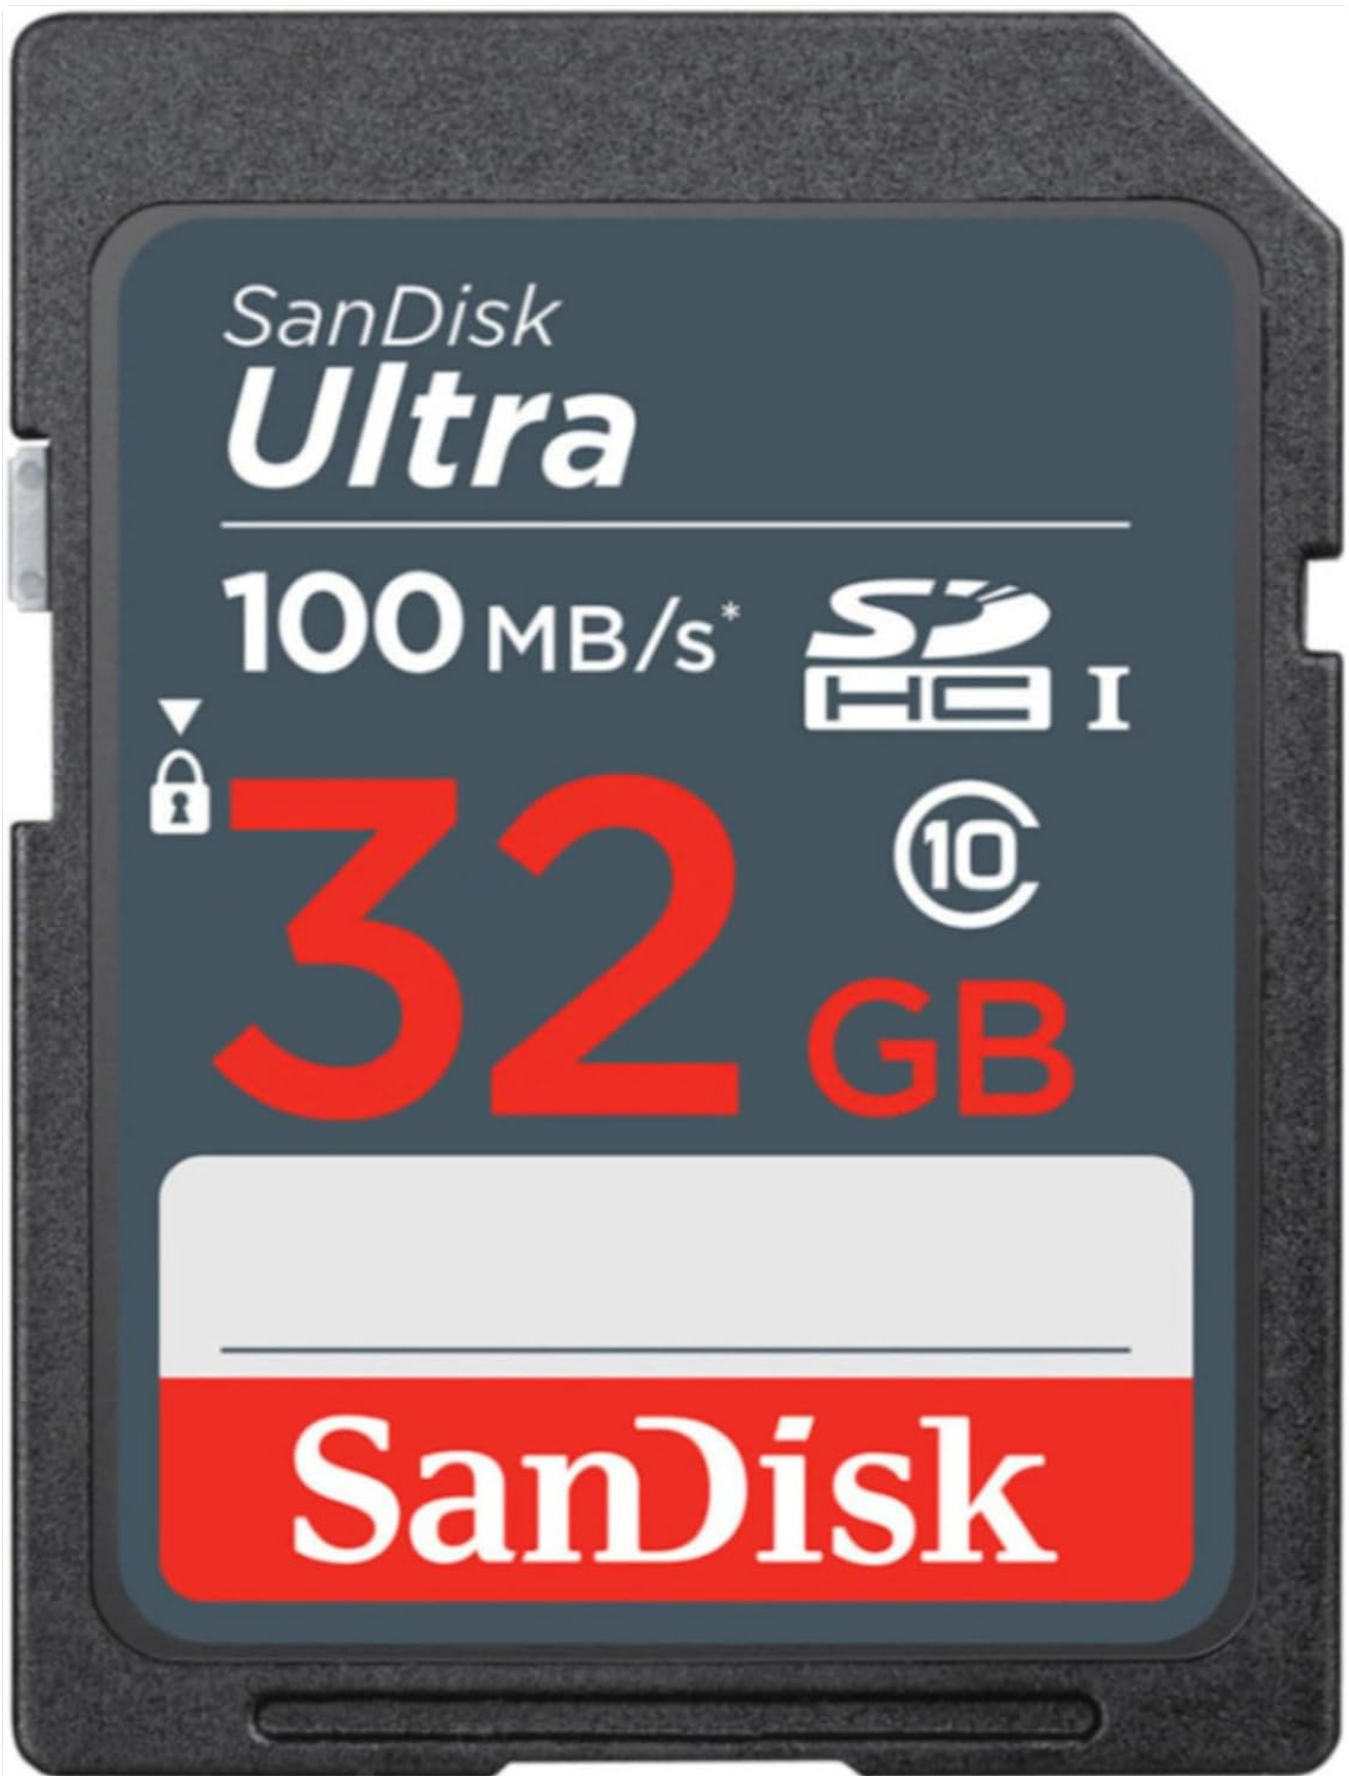


Figure 2.2: SanDisk 32GB Ultra SDHC UHS-I Memory Card, used for data storage.

focus

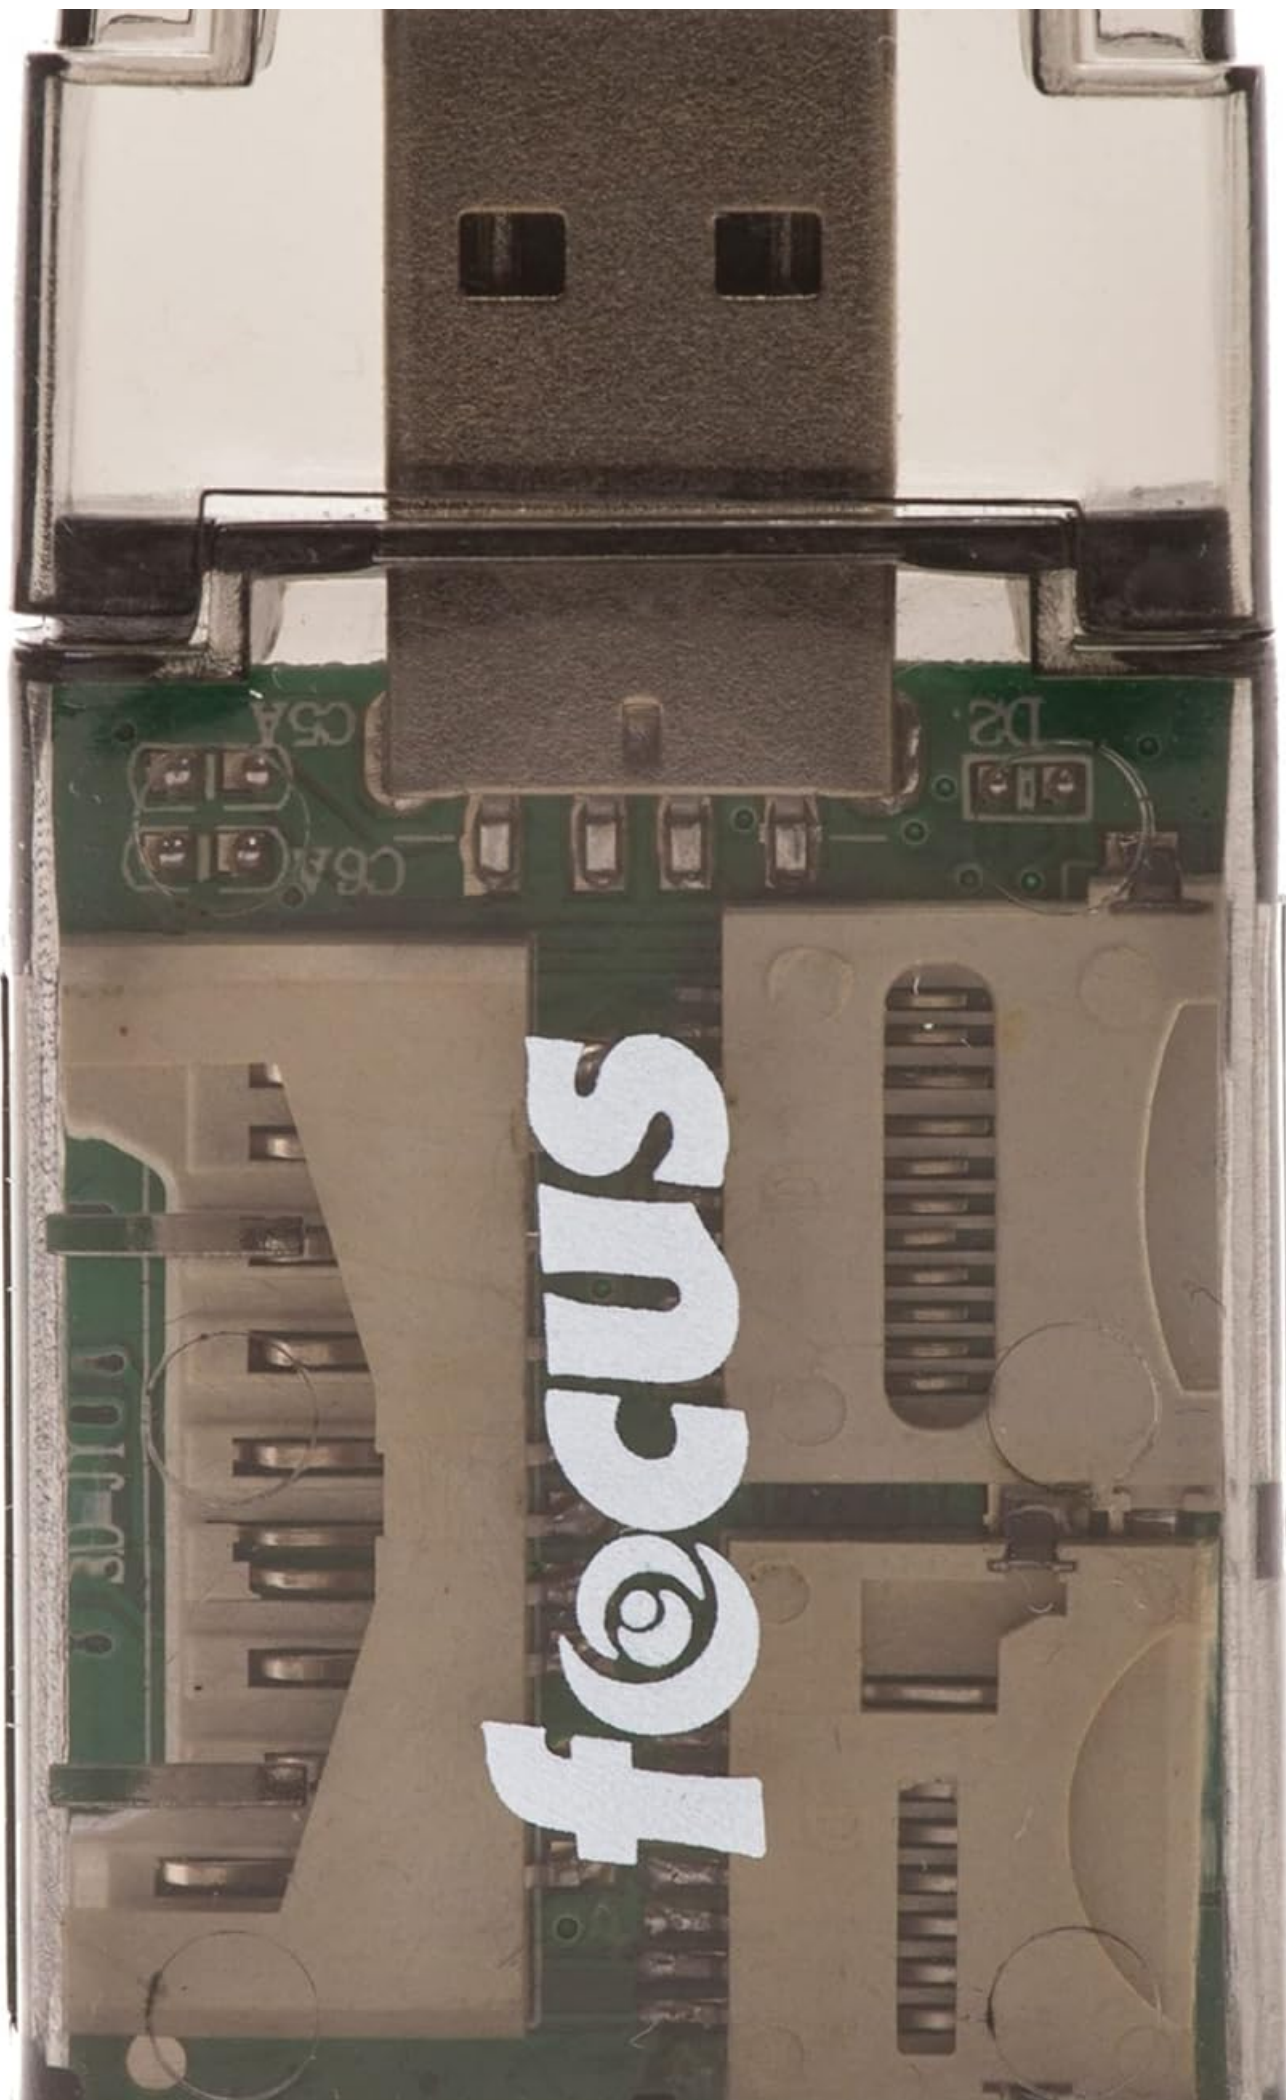




Figure 2.3: Focus All-In-One High Speed Card Reader, for transferring files to a computer.

3. SETUP

3.1. Battery Installation

The MUDDY Trifecta 180 camera requires 16 AA batteries for operation. For optimal performance and extended field use, it is recommended to use high-quality alkaline or lithium batteries. The camera also supports external 12V DC input.

1. Open the camera housing by unlatching the side clips.
2. Locate the battery tray inside the camera.
3. Insert 16 AA batteries into the tray, ensuring correct polarity (+/-) as indicated.
4. Close the battery tray securely.



Figure 3.1: Interior view of the camera showing the battery compartment and status indicators.

3.2. Memory Card Installation

A SanDisk 32GB Ultra SDHC UHS-I Memory Card is included in your bundle. This card is essential for storing captured data.

1. With the camera housing open, locate the SD card slot.
2. Insert the SanDisk 32GB SD card into the slot with the label facing the correct direction until it clicks into place.
3. To remove, gently push the card in until it springs out.

3.3. SIM Card Installation (Not Included)

As a cellular trail camera, the Trifecta 180 requires a compatible SIM card (not included) for cellular data transmission. Consult your cellular provider for a suitable data plan and SIM card.

1. Locate the SIM card slot, typically near the SD card slot or battery compartment.
2. Insert the SIM card according to the diagram near the slot.

3.4. Mounting the Camera

The camera features a multi-position mount and a 1/4-20 threaded insert for flexible mounting options. A python cable security option is also available for added security (cable sold separately).

- **Strap Mounting:** Use the included strap to secure the camera to a tree or pole. Thread the strap through the designated slots on the back of the camera.
- **Tripod/Mounting Arm:** Utilize the 1/4-20 threaded insert on the bottom of the camera to attach it to a tripod or compatible mounting arm.
- **Security:** For theft deterrence, a python cable can be routed through the security slot on the camera housing.

4. OPERATING INSTRUCTIONS

4.1. Powering On/Off

Locate the power switch inside the camera housing. Slide the switch to "ON" to power on the camera and to "OFF" to power it off.

4.2. Basic Operation and Settings

The Trifecta 180 is designed for automatic operation once configured. Key operational features include:

- **Trigger Speed:** The camera boasts a fast 0.4-second trigger speed to capture quick movements.
- **Photo Burst Mode:** Captures 1-3 photos in quick succession per trigger event.
- **Time-Out Delays:** Customizable delays ranging from 2-59 seconds or 1-59 minutes between trigger events. This setting helps manage battery life and storage space.
- **Detection and Flash Range:** Features an 80-foot detection and flash range for effective monitoring.

4.3. Command App Integration

The camera is compatible with the Command App, allowing for remote control and data access. This app enables:

- **On-Demand Photo and Video:** Request and view captured media remotely.
- **Zone-Specific Control:** Manage settings and monitor specific areas.
- **Synchronization:** Press the "SYNC" button inside the camera to initiate a test photo and synchronize with the Command App. If successful, the photo will appear in your Command Pro app.

4.4. Photo and Video Modes

The camera supports high-resolution imaging and video recording:

- **Photo Resolution:** Up to 36 Megapixels (MP).
- **Video Recording:** 1080p Full HD video with audio.
- **Panoramic View:** Unique 180-degree panoramic view powered by three independent PIR sensors.

5. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your trail camera.

- **Cleaning:** Gently wipe the camera lens, PIR sensors, and housing with a soft, dry cloth. Avoid abrasive materials or harsh chemicals.

- **Battery Replacement:** Replace all 16 AA batteries when the low battery indicator is active or when performance degrades. Do not mix old and new batteries.
- **Memory Card Management:** Regularly check the memory card for available space. Format the SD card periodically (after backing up data) to maintain optimal performance and prevent data corruption.
- **Firmware Updates:** Check the MUDDY website or Command App for any available firmware updates to ensure your camera has the latest features and bug fixes.

6. TROUBLESHOOTING

Refer to the status codes inside the camera housing (Figure 3.1) for quick diagnostics. Below are common issues and their solutions:

Indicator/Issue	Description	Solution
All Green Lights	Connection is successful. Upload is in progress. Lights off: Ready to take photos.	Normal operation. No action required.
SD Card Error	Problem detected with the memory card.	Reinsert the SD card. Try a different, compatible SD card. Format the SD card (backup data first).
Low Battery	Battery power is critically low.	Replace all 16 AA batteries with new ones. Consider using an external 12V DC power source.
Weak Signal	Cellular signal strength is poor.	Relocate the camera to an area with better cellular reception. Check for obstructions.
SIM Card Error	Problem detected with the SIM card.	Reinsert the SIM card. Ensure the SIM card is active and correctly provisioned by your cellular provider. Try a different SIM card if available.
No Active Data Plan	The cellular data plan for the SIM card is inactive or expired.	Contact your cellular provider to activate or renew your data plan.
Connection Error	General error establishing cellular connection.	Check SIM card and data plan status. Power cycle the camera. If issues persist, contact MUDDY support.

7. SPECIFICATIONS

Feature	Detail
Model Number	FC-CR1_K2502
Photo Resolution	36 Megapixels (MP)
Video Resolution	1080p Full HD with Audio
Trigger Speed	0.4 seconds
Detection Range	80 feet
Flash Range	80 feet
PIR Sensors	Three independent sensors for 180-degree panoramic view

Feature	Detail
Burst Mode	1-3 photos per trigger
Time-Out Delay	Adjustable (2-59 seconds or 1-59 minutes)
Power Source	16 AA batteries or 12V DC input
Memory Card Support	SDHC (up to 32GB included)
Connectivity	Cellular (SIM card required), Command App compatible
Mounting Options	Multi-position mount, 1/4-20 threaded insert, Python cable security option
Product Dimensions	10.3 x 8.4 x 6.7 inches
Item Weight	2.31 pounds
UPC	196271875710

8. WARRANTY AND SUPPORT

8.1. Warranty Information



Specific warranty details for the MUDDY Trifecta 180 Cellular Trail Camera are typically provided with the product packaging or available on the manufacturer's official website. Please retain your proof of purchase for warranty claims.





8.2. Customer Support

For technical assistance, troubleshooting beyond this manual, or warranty inquiries, please contact MUDDY customer support. Refer to the official MUDDY website for the most current contact information, including phone numbers, email addresses, or online support portals.

Note: Always refer to the manufacturer's official resources for the most accurate and up-to-date information regarding your product.

Related Documents - Trifecta 180 Cellular Trail Camera (FC-CR1_K2502)

	<p>Muddy Cellular Instruction Manual: Setup, Features & Support</p> <p>Comprehensive instruction manual for the Muddy Cellular trail camera, powered by Stealth Cam COMMAND. Learn setup, configuration, features, accessories, and troubleshooting.</p>
	<p>Muddy MTC100K Trail Camera Instruction Manual</p> <p>This manual provides instructions for setting up, configuring, and using the Muddy MTC100K trail camera. It covers features such as detection range, trigger speed, water resistance, and IR LEDs, along with detailed steps for battery and SD card installation, camera configuration modes, viewing and deleting images, frequently asked questions, product care, and warranty information.</p>

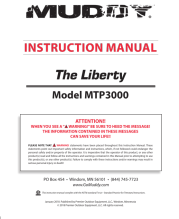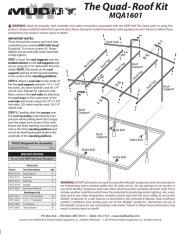 <p>The 4 Foot Extension Kit for Liberty Model MTA3004-EX</p>	<p>Muddy MTA3004-EX 4 Foot Extension Kit for Liberty Instruction Manual</p> <p>Instruction manual for the Muddy MTA3004-EX 4 Foot Extension Kit for Liberty, providing essential safety warnings, detailed assembly steps, and a comprehensive parts list for treestand users.</p>
 <p>MUD-RBI Remote Beacon Illuminator</p>	<p>Muddy MUD-RBI Remote Beacon Illuminator User Manual</p> <p>User manual for the Muddy MUD-RBI Remote Beacon Illuminator, detailing installation, setup, operation, pairing, and warranty information.</p>
 <p>INSTRUCTION MANUAL The Liberty Model MTP3000</p>	<p>Muddy The Liberty MTP3000 Instruction Manual</p> <p>Comprehensive instruction manual for the Muddy The Liberty MTP3000 treestand, detailing safety warnings, usage instructions, parts list, hardware list, assembly steps, installation, removal, and care.</p>
 <p>The Quad-Roof Kit MQA1601</p>	<p>Muddy MQA1601 Quad-Roof Kit Assembly Instructions</p> <p>Step-by-step assembly guide for the Muddy MQA1601 Quad-Roof Kit, an accessory for the MQP1600 Quad Quadpod. Includes parts list, hardware details, and critical safety warnings regarding weather conditions.</p>