

AVERA HPF01

AVERA HPF01 25L Air Fryer and Electric Oven User Manual

Model: HPF01 | Brand: AVERA

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your AVERA HPF01 25L Air Fryer and Electric Oven. Please read all instructions carefully before first use and retain this manual for future reference.

2. IMPORTANT SAFETY INSTRUCTIONS

- Always place the appliance on a stable, heat-resistant surface, away from walls and other appliances to ensure proper ventilation.
- Do not immerse the appliance, cord, or plug in water or other liquids.
- Supervise children closely when the appliance is in use.
- Do not operate the appliance if the cord or plug is damaged, or if the appliance malfunctions.
- Use only accessories recommended by the manufacturer.
- Avoid touching hot surfaces. Use oven mitts or handles.
- Unplug the appliance from the outlet when not in use and before cleaning.
- Do not block any ventilation openings.
- This appliance is for household use only.

3. PRODUCT OVERVIEW AND COMPONENTS

The AVERA HPF01 is a versatile 25-liter air fryer and electric oven featuring French doors and a digital control panel. It combines the benefits of air frying with traditional oven functions.

MODELO: HPF01

Versátil para hornear, freír con aire y más.



Panel de control digital



Voltaje 127 V
Frecuencia 60 Hz
Potencia 1700 W



Temperatura entre
30 - 200 °C



Apagado automático



25L **EXTRA GRANDE**
de capacidad

7 Accesorios
incluidos

2  **AÑOS**
DE GARANTÍA


Image: AVERA HPF01 Air Fryer Oven showing its dimensions (Height 35.4 cm, Width 31.9 cm, Depth 40.4 cm) and weight (8.9 kg).

Included Accessories (7 total):

- Crumb Tray / Oil Tray
- Wire Rack
- Mesh Basket
- Rotisserie Fork
- Extraction Tool
- Tray Handle

- Additional Rack (implied by images)

 
Accesorios incluidos

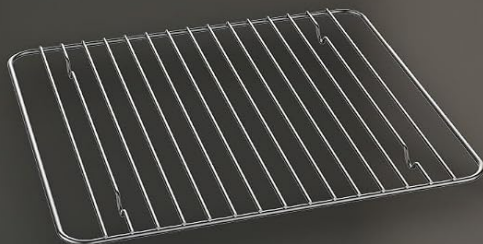

Rejilla de alambre



 
Charola para migas

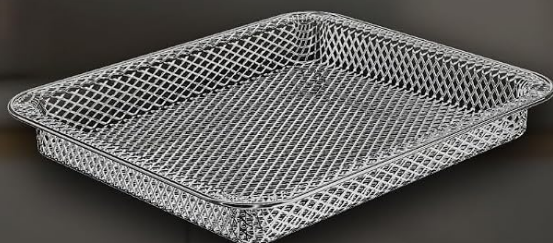

Cesta de malla



 Charola para aceite

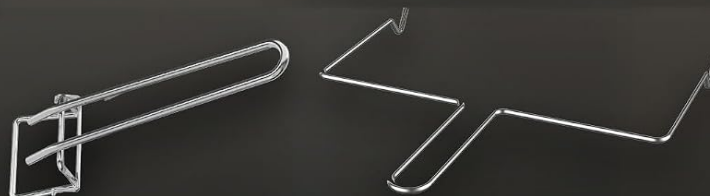

Asas



Rostizador

Image: All 7 included accessories: wire rack, crumb tray, mesh basket, oil tray, handles, and rotisserie fork.

4. SETUP

1. **Unpacking:** Carefully remove all packaging materials and any promotional labels.
2. **Placement:** Place the oven on a flat, stable, heat-resistant surface. Ensure there is at least 10 cm (4 inches) of space on all sides for proper air circulation.
3. **Initial Cleaning:** Before first use, wipe the interior and accessories with a damp cloth and mild detergent. Dry thoroughly. Run the oven empty for about 15 minutes at 180°C (350°F) to burn off any manufacturing residues. A slight odor or smoke is normal during this process.

4. **Power Connection:** Plug the appliance into a grounded 127V electrical outlet.

5. OPERATING INSTRUCTIONS

The AVERA HPF01 features an intuitive digital control panel for easy operation.

Ten el control al cocinar



Image: Detailed view of the digital control panel, showing temperature, timer, menu options, interior light, and rotation function.

Basic Operation:

1. **Power On/Off:** Press the **On/Off** button to turn the appliance on or off.
2. **Selecting a Function:** Use the **Menu** button or rotate the dial to select one of the 18 preset cooking functions.
3. **Adjusting Temperature:** Use the **+** and **-** buttons to set the desired temperature between 30°C and 200°C.
4. **Setting the Timer:** Use the **+** and **-** buttons to set the cooking time (up to 90 minutes).

5. **Start/Pause:** Press the **Start** button to begin cooking. The appliance features an automatic shut-off function once the timer completes.
6. **Interior Light:** Press the **Light** button to illuminate the interior and check cooking progress.
7. **Rotation Function:** For rotisserie cooking, activate the **Rotation** function.

6. COOKING FUNCTIONS

Your AVERA HPF01 offers 18 preset cooking functions, providing versatility for various dishes. These functions are optimized for specific cooking methods and food types.



Image: Visual representation of various dishes that can be prepared using the 18 preset functions, including cookies, roasted vegetables, potato wedges, pizza, pastries, and roasted chicken.

Key Cooking Modes:

- **Air Fry:** Utilizes rapid hot air circulation for crispy results with up to 80% less fat. Ideal for fries, chicken wings, and other fried foods.
- **Bake:** Perfect for cakes, cookies, and casseroles.
- **Roast:** For cooking meats like chicken, beef, and vegetables to perfection.
- **Toast:** Quickly toasts bread, bagels, and pastries.
- **Dehydrate:** Low-temperature setting for drying fruits, vegetables, and making jerky.
- **Convection:** Ensures even cooking and browning by circulating hot air.

Tecnología de horneado dual

Convección

Envuelve tus platillos en aire caliente para lograr una textura más crujiente, sabores intensos y carnes jugosas por dentro.

Freidora de aire

Cocina saludable y crujiente, circulación de aire caliente para alimentos dorados por fuera y suaves por dentro, con menos aceite.



Luz interior

Image: Illustration of the dual baking technology, highlighting convection for crispy textures and juicy meats, and air frying for healthy, crispy foods with less oil.

Video Demonstration:

Video: A close-up demonstration of the AVERA HPF01 Air Fryer and Electric Oven, showcasing its features and operation.

7. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your appliance.

- Unplug:** Always unplug the oven and allow it to cool completely before cleaning.
- Exterior:** Wipe the exterior with a damp cloth. Do not use abrasive cleaners or scouring pads.
- Interior:** Clean the interior with a damp cloth and mild detergent. For stubborn stains, use a non-abrasive sponge.
- Accessories:** Wash all accessories (wire rack, mesh basket, trays, rotisserie fork) with warm, soapy water. Rinse thoroughly and dry. **Note:** The item is not dishwasher safe.
- Crumb Tray:** Regularly remove and empty the crumb tray to prevent grease buildup and potential fire hazards.

8. TROUBLESHOOTING

If you encounter issues with your AVERA HPF01, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet malfunction; appliance fault.	Ensure the power cord is securely plugged into a working outlet. Check the circuit breaker. If the issue persists, contact customer support.
Food is not cooking evenly.	Overcrowding; incorrect temperature/time; accessories placement.	Avoid overcrowding the basket/tray. Adjust temperature and time as needed. Ensure accessories are placed correctly for optimal air circulation. Flip or shake food halfway through cooking.
White smoke coming from the appliance.	Grease residue; fatty foods.	Clean the appliance and accessories thoroughly. For fatty foods, place a small amount of water in the drip tray to reduce smoke.
Appliance emits a burning smell.	Food residue; new appliance odor.	Clean the interior and accessories. If it's the first use, a slight odor is normal and will dissipate. If the smell persists or is strong, unplug and contact support.

9. SPECIFICATIONS

Feature	Detail
Model Name	HPF01

Feature	Detail
Brand	AVERA
Capacity	25 Liters
Dimensions (D x W x H)	40.4 cm x 31.9 cm x 35.4 cm
Weight	8.9 Kilograms
Material	Stainless Steel, Metal, Glass
Color	Grey
Power Output	1700 Watts (1.7 KW)
Voltage	127 Volts
Temperature Range	30°C - 200°C
Control Method	Touch (Digital Panel)
Special Features	Automatic Shut-off, Temperature Control, Programmable, Timer, Air Frying Technology
Recommended Uses	Roasting, Defrosting, Frying, Baking, Reheating, Rotisserie, Toasting
Dishwasher Safe	No

10. WARRANTY AND SUPPORT

Your AVERA HPF01 Air Fryer and Electric Oven comes with a manufacturer's warranty. Please refer to the warranty card included in your packaging for specific terms and conditions. For technical support, replacement parts, or any inquiries, please contact AVERA customer service through their official channels.

© 2026 AVERA. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question