

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [realme](#) /

› [realme C75 User Manual](#)

realme RMX3943

realme C75 User Manual

Model: RMX3943

INTRODUCTION

This user manual provides comprehensive instructions for the realme C75 smartphone. It covers setup, operation, maintenance, and troubleshooting to help you maximize your device's potential. Please read this manual carefully before using your device.

SETUP GUIDE

1. Unboxing and Initial Inspection

Carefully remove all components from the packaging. Verify that all items are present:

- realme C75 Smartphone
- USB Type-C Cable
- Power Adapter
- SIM Ejector Tool
- Quick Start Guide
- Safety Information



Image: Front view of the realme C75 smartphone, showcasing its display and sleek design.

2. Inserting SIM Card and microSD Card

1. Locate the SIM card tray on the side of the device.

2. Insert the SIM ejector tool into the small hole next to the tray and push gently until the tray pops out.
3. Place your Nano-SIM card(s) and/or microSD card into the designated slots on the tray. Ensure the gold contacts face downwards.
4. Carefully reinsert the tray into the phone until it clicks into place.





Image: Side view of the realme C75, highlighting the SIM card tray and physical buttons.

3. Charging the Battery

Before first use, fully charge the device. Connect the USB Type-C cable to the phone's charging port and the other end to the power adapter. Plug the adapter into a wall outlet. The charging indicator will appear on the screen.

TOP-TIER 6000mAh BATTERY & 45W CHARGING COMBO

One Charge for All-Day Using



Image: Visual representation of the realme C75 charging, emphasizing its 6000mAh battery and 45W fast charging capability.

4. Powering On and Initial Setup

Press and hold the Power button until the realme logo appears. Follow the on-screen prompts to complete the initial setup, including language selection, Wi-Fi connection, Google account setup, and security settings.

OPERATING INSTRUCTIONS

Basic Navigation

- **Power Button:** Press to turn the screen on/off, press and hold to power off or restart.
- **Volume Buttons:** Adjust media volume, call volume, or notification volume.
- **Touchscreen Gestures:** Tap, swipe, pinch-to-zoom for various functions.

Camera Usage

The realme C75 features a 50MP AI Camera. Open the Camera app from the home screen or app drawer. Select your desired mode (Photo, Video, Portrait, Night, etc.) and tap the shutter button to capture images or start recording.



Realme

AI CAMERA



Image: Rear view of the realme C75, highlighting the triple camera setup with the 50MP AI Camera.

Connectivity

- **Wi-Fi:** Go to Settings > Network & internet > Wi-Fi to connect to available networks.
- **Bluetooth:** Go to Settings > Connected devices > Bluetooth to pair with other devices.
- **Mobile Data:** Ensure your SIM card is active and mobile data is enabled in Settings > Network & internet > Mobile network.

MAINTENANCE AND CARE

Cleaning Your Device

Use a soft, lint-free cloth to clean the screen and body of the phone. Avoid using harsh chemicals or abrasive materials. For stubborn smudges, slightly dampen the cloth with water or a screen cleaner designed for electronics.

Battery Care

- Avoid extreme temperatures, as they can degrade battery life.
- Use only the original charger and cable provided with the device.
- Do not fully drain the battery regularly; partial charges are better for longevity.

Software Updates

Regularly check for software updates to ensure optimal performance and security. Go to Settings > About phone > Software update to check for and install available updates.

TROUBLESHOOTING

Problem	Possible Solution
Device not turning on	Ensure the battery is charged. Press and hold the Power button for at least 10 seconds to force restart.
Apps crashing or freezing	Clear app cache (Settings > Apps > [App Name] > Storage & cache > Clear cache). Restart the device. Update the app or the phone's software.
Poor battery life	Reduce screen brightness, disable unnecessary features (Bluetooth, GPS, Wi-Fi when not in use). Close background apps. Check battery usage in Settings.
Network connectivity issues	Toggle Airplane mode on/off. Restart the device. Check SIM card insertion. Reset network settings (Settings > System > Reset options > Reset Wi-Fi, mobile & Bluetooth).

SPECIFICATIONS

Feature	Detail
Model Number	RMX3943
Operating System	Android 14
RAM	6 GB
Internal Storage	128 GB (as per product title, though not explicitly in specs list)
Battery Capacity	6000mAh
Display Size	6.72 inches FHD+
Main Camera	50MP AI Camera
Dimensions (LxWxH)	16.6 x 7.6 x 0.8 Centimeters
Weight	480 g
Network Service	Unlocked for All Carriers

realme C75 ^{5G}

Top-tier Battery & Charging Combo



Lily-Inspired Design



Sleek Design

7.94mm



MediaTek Dimensity 6300 5G+



Up to 18GB Dynamic RAM + 128GB ROM




Military-Grade Shock Resistance



IP64 Dust & Water Resistance



120Hz Eye-Comfortable Display

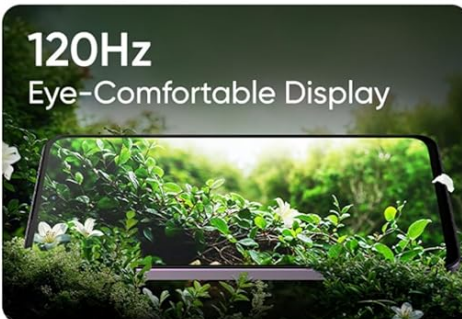

300% Ultra - Volume Mode



Image: Infographic summarizing key specifications and features of the realme C75, such as battery, design, RAM, and processor.

WARRANTY AND SUPPORT

Warranty Information

Your realme C75 device comes with a standard manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms, conditions, and duration. Keep your purchase receipt as proof of purchase for warranty claims.

Additional protection plans may be available for purchase, such as screen damage protection or extended warranty. Please check with your retailer for details.

Customer Support

For technical assistance, service, or further inquiries, please contact realme customer support. You can find contact details on the official realme website or in the support section of your device's settings.

Note: Always provide your device's model number (RMX3943) and serial number when contacting support.

© 2025 realme. All rights reserved.
For more information, visit the official [realme Store](#).