

manuals.plus /

- › [DigiLand](#) /
- › [DigiLand MID1057-MX 10.1-inch Android 14 Tablet User Manual](#)

DigiLand MID1057-MX

DigiLand MID1057-MX 10.1-inch Android 14 Tablet

User Instruction Manual

INTRODUCTION

This manual provides essential information for the proper setup, operation, and maintenance of your DigiLand MID1057-MX 10.1-inch Android 14 Tablet. Please read this manual thoroughly before using the device to ensure optimal performance and longevity.



Image: DigiLand MID1057-MX Android 14 Tablet.

SETUP

1. Package Contents

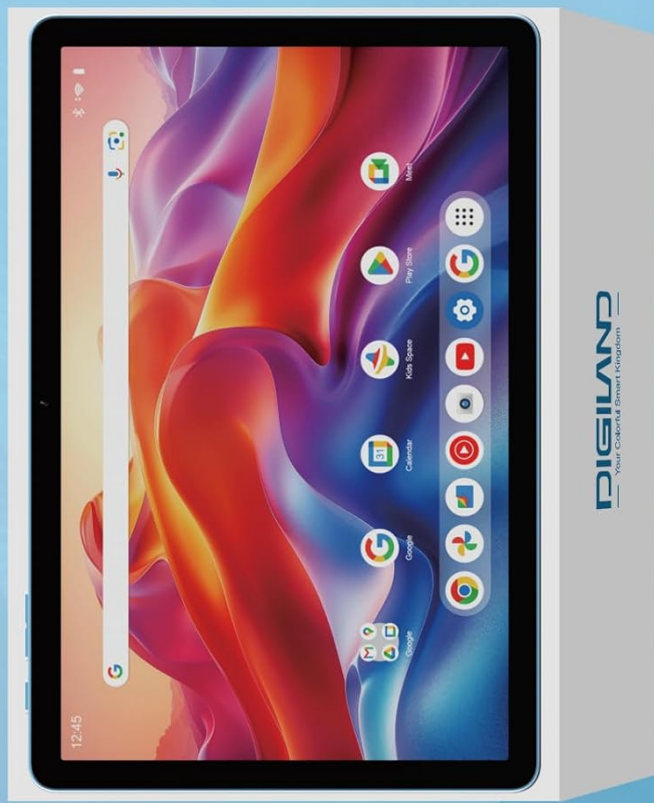 
Verify that all items are present in the package:

- DigiLand MID1057-MX Tablet
- USB Type-C Cable
- Power Adapter
- Protective Case
- Quick Start Guide

What's in the box



Main Product



Box



Accessories

Image: Package contents of the DigiLand MID1057-MX Tablet.

2. Device Layout

Familiarize yourself with the tablet's physical features:

- **Power Button:** Located on the side, used to turn the device on/off or wake/sleep the screen.
- **Volume Buttons:** Adjust audio levels.
- **USB Type-C Port:** For charging and data transfer.
- **Headset Jack:** For connecting headphones.
- **MicroSD Card Slot:** For expandable storage (up to 1TB).
- **Front Camera:** For video calls and selfies.
- **Rear Camera:** For capturing photos and videos.



Image: Overview of tablet ports and buttons.

3. Initial Charge

Before first use, fully charge the tablet. Connect the USB Type-C cable to the tablet's port and the power adapter to a wall outlet. The battery indicator on the screen will show charging status.

4. Power On/Off

- **To Power On:** Press and hold the Power button until the DigiLand logo appears.
- **To Power Off:** Press and hold the Power button until the power options menu appears, then select "Power off."
- **To Sleep/Wake:** Briefly press the Power button.

5. Initial Setup

Upon first power-on, follow the on-screen prompts to:

1. Select your language.
2. Connect to a Wi-Fi network.
3. Sign in with your Google account or create a new one.
4. Set up screen lock and other security features.

OPERATING

1. Touchscreen Gestures

Navigate the tablet using standard Android gestures:

- **Tap:** Select an item or open an application.
- **Tap and Hold:** Access contextual menus or move icons.
- **Swipe:** Scroll through pages or navigate between screens.
- **Pinch:** Zoom in or out on images and web pages.

2. Connecting to Wi-Fi

1. Go to **Settings > Network & internet > Wi-Fi**.
2. Toggle **Wi-Fi On**.

3. Select your desired network from the list.
4. Enter the password if prompted, then tap **Connect**.

3. Bluetooth Pairing

1. Go to **Settings > Connected devices > Bluetooth**.
2. Toggle Bluetooth **On**.
3. Ensure your Bluetooth device is in pairing mode.
4. Select the device from the list and follow any on-screen prompts to complete pairing.

4. Installing and Uninstalling Applications

- **Install:** Open the Google Play Store app, search for the desired application, and tap **Install**.
- **Uninstall:** Go to **Settings > Apps > See all apps**, select the app, then tap **Uninstall**.

5. Managing Storage

Your tablet comes with 128GB of internal storage. You can expand this by up to 1TB using a MicroSD card (not included).

- **To Insert MicroSD Card:** Locate the MicroSD card slot, gently insert the card until it clicks into place.
- **To Remove MicroSD Card:** Go to **Settings > Storage**, tap on the SD card, and select **Eject** before physically removing it.

Store All You Want!

PHOTO

FILM

MUSIC



12GB
RAM



128GB
ROM



1TB
EXPANSION



Image: Storage capacity and expansion.

6. Camera Usage

The tablet features a 13MP rear camera and an 8MP front camera.

1. Open the **Camera** app.
2. Tap the shutter button to take a photo.
3. Tap the video icon to record a video.
4. Use the camera switch icon to toggle between front and rear cameras.

Dual Camre



8 MP
Front camera



13 MP
Rear camera



Record Your Wonderful Life



Image: Dual camera features and examples.

7. Battery Management

The 6000mAh battery provides extended usage time. To optimize battery life:

- Adjust screen brightness to a comfortable level.
- Turn off Wi-Fi and Bluetooth when not in use.
- Close unused applications running in the background.
- Enable battery saver mode in **Settings > Battery**.

Long Battery Life

keep you entertained all day

6000mAh



9 h
Video



14 h
Music



15 h
Browings



32 Days
Video



Type-C
Charge



Image: Battery capacity and usage estimates.

MAINTENANCE

1. Cleaning the Device

Use a soft, lint-free cloth to clean the screen and body of the tablet. Avoid using harsh chemicals or abrasive materials.

2. Software Updates

Regularly check for and install system updates to ensure your tablet has the latest features and security patches. Go to **Settings > System > System update**.

3. Storage Optimization

Periodically review and delete unnecessary files, photos, and applications to free up storage space and maintain performance. Consider moving large media files to an external MicroSD card.

TROUBLESHOOTING

Refer to the table below for common issues and their solutions:

Issue	Possible Solution
Tablet won't turn on	Ensure the battery is charged. Connect to the charger for at least 30 minutes, then try powering on again.
Wi-Fi connection issues	Restart the tablet and your Wi-Fi router. Forget the network in settings and reconnect.
Slow performance	Close unused apps. Clear cache for frequently used apps. Check for system updates. Free up storage space.
Battery drains quickly	Reduce screen brightness. Disable Wi-Fi/Bluetooth when not in use. Limit background app activity.
Apps crashing or freezing	Restart the app. Clear the app's cache and data in settings. Reinstall the app.

SPECIFICATIONS

Key technical specifications for the DigiLand MID1057-MX Tablet:

Feature	Specification
Model	MID1057-MX
Operating System	Android 14
Screen Size	10.1 inches
Screen Resolution	1280 x 800 pixels (IPS HD)
Processor	MTK Helio G80 Octa-Core (A523, Cortex A55@1.8 GHz, 22nm)
RAM	12GB (4GB physical + 8GB expansion)
Internal Storage	128GB ROM
Expandable Storage	Up to 1TB via MicroSD card (TF card slot)
Battery Capacity	6000mAh
Front Camera	8MP
Rear Camera	13MP
Connectivity	Dual-band Wi-Fi (2.4G+5G), Bluetooth 5.0, USB Type-C (OTG)
Dimensions (LxWxH)	9.5 x 6.3 x 0.3 inches
Item Weight	2.79 pounds (485g for tablet only)

Android 14



Up to 1TB

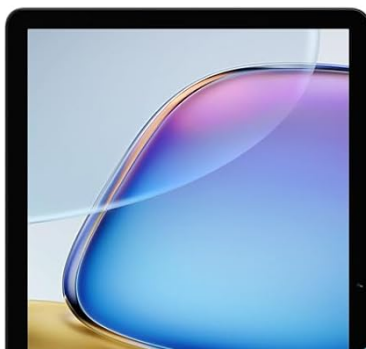 


**12GB RAM
128GB ROM**

**MTK Helio G80
Octa-Core Processor**



**10.1 inch
HD 1280x800**



8 MP
Front camera

13 MP
Rear camera



485g



7.9mm

Image: Detailed product specifications.

WARRANTY AND SUPPORT

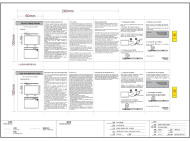 
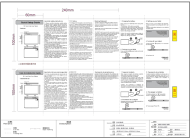 
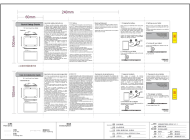 


1. Warranty Information

Please refer to the warranty card included with your product for specific warranty terms and conditions. DigiLand provides after-sales support to address any product-related concerns.

2. Customer Support

For technical assistance, troubleshooting, or any questions regarding your DigiLand MID1057-MX Tablet, please contact DigiLand customer support through the contact information provided in your Quick Start Guide or on the official DigiLand website.

Related Documents - MID1057-MX

	<p>DIGILAND 10.1 Inch Octa Core Tablet Quick Setup Guide</p> <p>Comprehensive quick setup guide for the DIGILAND 10.1 Inch Octa Core Tablet, covering safety instructions, FCC compliance, charging, setup, and shutdown procedures.</p>
	<p>Digi-Land 10.1 Inch Octa Core Tablet Quick Setup Guide and Safety Information</p> <p>Concise guide for setting up and safely using the Digi-Land 10.1 Inch Octa Core Tablet, including FCC compliance details and important safety instructions.</p>
	<p>DIGILAND 10.1 Inch Quad Core Tablet Quick Setup Guide MID1016</p> <p>Concise setup guide for the DIGILAND 10.1 Inch Quad Core Tablet (Model MID1016), covering safety instructions, FCC compliance, charging, setup, and shutdown procedures.</p>
	<p>Digiland M11 Pro Quick Start Guide</p> <p>A quick start guide for the Digiland M11 Pro tablet, covering initial setup, charging, basic operations, and important FCC compliance information.</p>
	<p>Digiland Limited Product Warranty Information</p> <p>Official limited product warranty details for Digiland electronics, covering terms, exclusions, and claim procedures. Includes 90-day parts and labor warranty.</p>