

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [BLACK+DECKER](#) /
- › [BLACK+DECKER Multicooker 7QT Family Size Instruction Manual](#)

BLACK+DECKER MC900MADX

BLACK+DECKER Multicooker 7QT Family Size

Model: MC900MADX

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury, including the following:

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer service for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

PRODUCT OVERVIEW

The BLACK+DECKER Multicooker 7QT Family Size is a versatile 5-in-1 appliance designed for various cooking tasks. It features Neat 'N Clean™ Technology for easy cleanup, a durable PFAS-Free ceramic coating, and cool-touch handles for safe handling.

- **5-in-1 Functions:** Slow Cook, Steam/Boil, Precision Roast, Sear/Saute, & Rice.
- **7-Quart Capacity:** Ideal for family-sized meals.
- **Ceramic Coating:** 8X more durable, PFAS-Free, and dishwasher-safe.
- **Cool-Touch Handles:** For safe and convenient carrying and serving.
- **Steaming/Roasting Rack:** Included for versatile cooking options.



This image displays the BLACK+DECKER Multicooker filled with a cooked meal, highlighting its sleek black design and user-friendly digital interface.



A close-up view of the BLACK+DECKER Multicooker, showing a prepared dish and the clear glass lid.

SETUP

1. **Unpack:** Carefully remove all packaging materials, stickers, and labels from the multicooker. Retain the instruction manual.
2. **Wash Components:** Before first use, wash the cooking pot, glass lid, and steaming/roasting rack in warm, soapy water. Rinse thoroughly and dry completely. The cooking pot and lid are dishwasher safe.
3. **Assemble:** Place the clean cooking pot securely into the base of the multicooker. Ensure the control panel is properly attached to the base.
4. **Placement:** Place the multicooker on a stable, level, heat-resistant surface, away from walls and cabinets to allow for proper ventilation.

OPERATING INSTRUCTIONS

The BLACK+DECKER Multicooker offers five distinct cooking functions, easily selectable via the control dial or digital interface (depending on model variation). Always ensure the multicooker is plugged into a standard electrical outlet before operation.



Easy to Use Dial

This image illustrates the ease of use with a hand turning the control dial to select different cooking modes on the multicooker.

1. Slow Cook Function

Ideal for tenderizing meats and simmering stews over extended periods.

- Add ingredients to the cooking pot and cover with the lid.
- Select the "Slow Cook" setting. Choose between "Low" or "High" temperature settings.
- Set the desired cooking time using the timer controls.
- The multicooker will automatically switch to "Keep Warm" mode once cooking is complete.

2. Steam/Boil Function

Perfect for steaming vegetables, seafood, or boiling pasta and other foods.

- For steaming, add the appropriate amount of water to the pot and place the steaming/roasting rack inside. Arrange food on the rack.
- For boiling, add water and ingredients directly to the pot.
- Select the "Steam/Boil" function.
- Set the desired cooking time.



Steaming & Roasting Rack

Great for Veggies, Roasts, and More

This image demonstrates the versatility of the multicooker, showing the included rack used for steaming or roasting vegetables.

3. Precision Roast Function

Achieve perfectly roasted meats and vegetables with precise temperature control.

- Place food on the steaming/roasting rack or directly in the pot with a small amount of liquid, if desired.
- Select the "Precision Roast" function.
- Adjust the temperature and cooking time as per your recipe.

4. Sear/Saute Function

Brown meats and sauté vegetables directly in the multicooker before slow cooking or for standalone dishes.

- Add a small amount of cooking oil to the pot.
- Select the "Sear/Saute" function. Allow the pot to preheat.
- Add ingredients and cook until desired browning is achieved.
- Turn off the function or switch to another cooking mode as needed.

5. Rice Function

Cook perfect rice with minimal effort.

- Add rice and the appropriate amount of water to the cooking pot. Refer to rice packaging for water-to-rice ratios.

- Select the "Rice" function.
- The multicooker will automatically adjust cooking time and switch to "Keep Warm" when done.

CLEANING AND MAINTENANCE (NEAT 'N CLEAN™ TECHNOLOGY)

The BLACK+DECKER Multicooker features Neat 'N Clean™ Technology, making cleanup simple and efficient. Always unplug the appliance and allow it to cool completely before cleaning.

Neat 'N Clean Technology

Remove Control Panel

Load into Dishwasher



This visual guide highlights the multicooker's easy cleaning process, detailing how to detach the control panel and place the cooking pot into a dishwasher.

1. **Remove Control Panel:** Gently slide and remove the control panel from the multicooker base. This allows the pot and lid to be fully submersible.
2. **Dishwasher Cleaning:** The cooking pot and glass lid are dishwasher safe. Place them on the top rack of your dishwasher for thorough cleaning.
3. **Hand Washing:** If washing by hand, use warm, soapy water and a non-abrasive sponge or cloth. Rinse thoroughly and dry completely before reassembly or storage.
4. **Clean Base:** Wipe the exterior of the multicooker base with a damp cloth. Do not immerse the base or control panel in water.
5. **Storage:** Ensure all parts are dry before storing the multicooker. Store in a cool, dry place.

TROUBLESHOOTING

If you encounter issues with your multicooker, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet malfunction; control panel not properly connected.	Ensure the power cord is securely plugged into a working outlet. Check if the control panel is fully inserted into the base.
Food not cooking evenly.	Overfilling the pot; uneven distribution of ingredients; lid not sealed properly.	Do not overfill the pot beyond the maximum fill line. Stir ingredients occasionally if possible. Ensure the lid is seated correctly.
Food sticking to the pot.	Insufficient oil/liquid; cooking at too high a temperature for too long.	Ensure adequate oil or liquid is used, especially for searing. Adjust cooking temperature and time as needed. The ceramic coating is designed to be non-stick.
Steam escaping excessively from lid.	Lid not properly seated; lid gasket damaged.	Ensure the lid is placed correctly and securely on the pot. Inspect the lid gasket for any damage.

SPECIFICATIONS

Brand	BLACK+DECKER
Model Number	MC900MADX
Capacity	7 Quarts
Wattage	800 watts
Voltage	120 Volts
Material	Ceramic (coating)
Product Dimensions	18.35"D x 8.74"W x 13.5"H
Item Weight	6.87 Pounds
Dishwasher Safe	Yes (Pot and Lid)
Control Method	Touch / Hand Control
Number of Settings	5



7-Quart Capacity



This image provides a clear view of the multicooker's dimensions and highlights its generous 7-quart capacity, suitable for family-sized meals.

WARRANTY AND SUPPORT

This BLACK+DECKER Multicooker is covered by a manufacturer's warranty. For detailed warranty information, product registration, or customer support, please visit the official BLACK+DECKER website or contact their customer service department.

Please retain your proof of purchase for warranty claims.

Online Support: www.blackanddecker.com/support