

## PAXA M100


# PAXA M100 Open Ear Clip-On Earbuds User Manual

Model: M100 | Brand: PAXA


## INTRODUCTION

This manual provides essential instructions for the proper setup, operation, and maintenance of your PAXA M100 Open Ear Clip-On Earbuds. Please read this guide thoroughly before using the product to ensure optimal performance and longevity. The PAXA M100 earbuds combine advanced audio technology with a unique, jewelry-inspired design, featuring a removable butterfly earring and an intuitive LCD touchscreen charging case.

## WHAT'S IN THE BOX

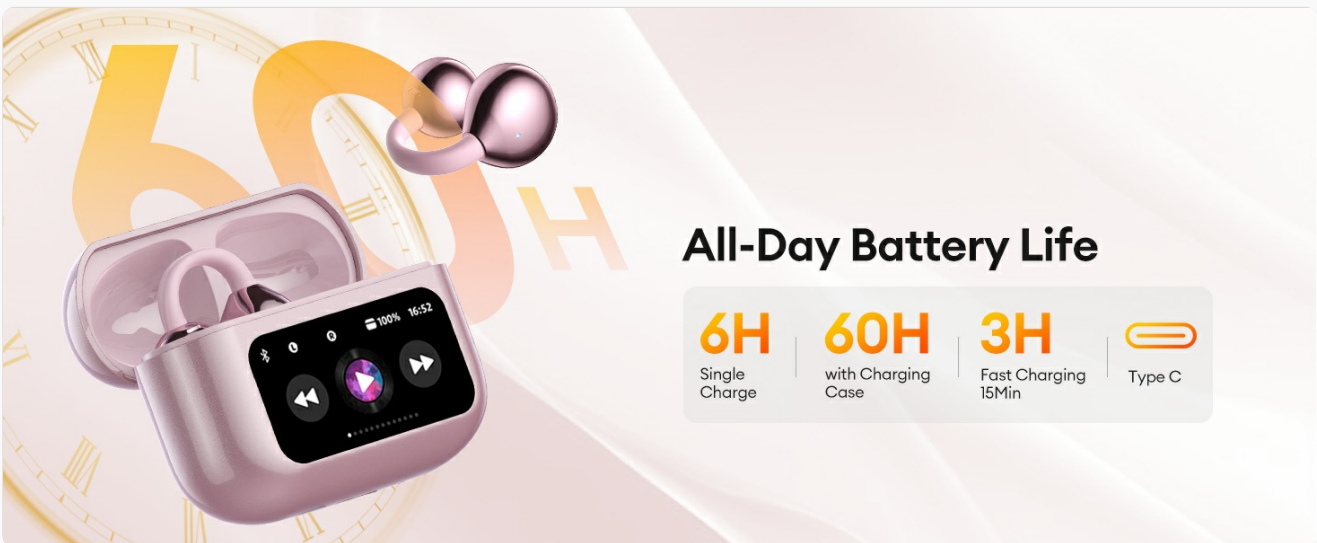

**All-Day Battery Life**

<b>6H</b> Single Charge	<b>60H</b> with Charging Case	<b>3H</b> Fast Charging 15Min	 Type C
----------------------------	----------------------------------	----------------------------------	---

**Image Description:** This image displays all items included in the PAXA M100 product package: the two open-ear clip-on earbuds, the smart touchscreen charging case, two removable butterfly-style ear clips, and a USB-C charging cable.

- PAXA M100 Clip-On Earbuds (1 pair)
- Clip-On Headphones Charging Case (1)
- Removable Butterfly-Style Ear Clips (1 pair)

- USB-C Charging Cable (1)
- User Manual (this document)

## SETUP

### 1. Charging the Earbuds and Case



**Image Description:** The PAXA M100 Open Ear Clip-On Earbuds, presented in a rose gold finish, are shown within their charging case. The case features an LCD touch screen. Each earbud is adorned with a removable butterfly-shaped earring, highlighting the product's unique design.

1. **Initial Charge:** Before first use, fully charge the earbuds and the charging case.
2. **Charging the Case:** Connect the provided USB-C cable to the charging port on the case and to a USB power adapter (not included). The LCD screen will indicate charging status.
3. **Charging the Earbuds:** Place the earbuds into their respective slots in the charging case. Ensure they are correctly seated. The case will automatically begin charging the earbuds. The LCD screen will display the earbud battery levels.
4. **Battery Life:** A single charge provides approximately 6 hours of playback. The charging case extends total listening time to up to 60 hours. A 15-minute fast charge can provide 3 hours of use.



**Image Description:** A graphic representation of the PAXA M100 earbuds' battery performance. It indicates 6 hours of playback on a single charge, up to 60 hours total with the charging case, and 3 hours of use from a 15-minute fast charge via Type-C.

## 2. Bluetooth Pairing

1. **Power On:** Open the charging case. The earbuds will automatically power on and enter pairing mode.
2. **Activate Bluetooth:** On your device (smartphone, tablet, etc.), enable Bluetooth.
3. **Select Device:** Look for "PAXA M100" in the list of available Bluetooth devices and select it to connect.
4. **Confirmation:** A voice prompt will confirm successful pairing. The earbuds are now ready for use.
5. **Automatic Reconnection:** Once paired, the earbuds will automatically connect to the last paired device when removed from the case, provided Bluetooth is enabled on the device.

## OPERATING INSTRUCTIONS

### 1. Wearing the Earbuds

## Not Just Earbuds A Wearable Work of Art



## Open Fit Comfort



## Stylish Jewelry Ear Cuff



**Image Description:** This image illustrates a woman wearing one of the PAXA M100 earbuds, showcasing its open-ear clip-on design and the attached butterfly earring. The design emphasizes comfort and the aesthetic integration of the earbud as a fashion accessory.

- Open-Ear Design:** The PAXA M100 earbuds feature an open-ear clip-on design, resting gently on your ear without entering the ear canal. This provides comfort for extended wear and allows awareness of your surroundings.
- Secure Fit:** The ergonomic design with a flexible C-bridge and four-point support ensures a stable and comfortable fit for various ear shapes and activities.



## Featherlight Comfort

The ultra-lightweight design ensures a comfortable, barely-there wearing experience for longer, pressure-free listening - so light you'll forget you're wearing them.

**Image Description:** A step-by-step visual guide demonstrates how to attach the decorative butterfly earring to the PAXA M100 earbud. It shows opening the earcuff, clipping it onto the earbud's stem, and then positioning the combined unit on the ear.

1. **Attaching Butterfly Earring:** If desired, gently open the butterfly ear clip. Carefully clip it onto the stem of the earbud.
2. **Positioning:** Place the earbud onto your ear, ensuring the clip-on mechanism is secure and comfortable. Adjust as needed.

## 2. Touch Controls



## Four-Point Secure Fit Design

Ergonomic non-slip structure ensures a stable and comfortable fit that stays in place with every activity and movement

**Image Description:** This diagram details the touch control functions of the PAXA M100 earbuds. It visually explains gestures for music playback (volume, play/pause, track skip) and call management (answer, end call, factory reset).

- **Music Playback:**
  - **Single Tap L/R:** Volume Up/Down (Left for Down, Right for Up)
  - **Double Tap L/R:** Play/Pause
  - **Triple Tap L/R:** Previous/Next Track (Left for Previous, Right for Next)
- **Call Management:**
  - **Double Tap L/R:** Answer Call
  - **Press and Hold L/R for 2s:** End Call
- **Factory Reset:**

- **Five Taps L/R (after disconnecting Bluetooth):** Reset to factory settings

### 3. LCD Touch Screen Functions



**Image Description:** A close-up image of the PAXA M100 charging case's LCD touch screen, displaying various menu options such as equalizer settings, screen brightness control, language selection, wallpaper customization, and a 'Find my earphone' feature. The charging case features an LCD touch screen for convenient control without needing your phone. Navigate the interface by swiping and tapping.

- **Volume Control:** Adjust audio output directly from the case.
- **Track Navigation:** Skip forward or backward through your music.
- **Battery Status:** View the remaining battery life for both the case and individual earbuds.
- **EQ Modes:** Select from various equalizer presets to customize your sound experience.
- **Settings:** Access options for language, screen brightness, wallpaper, and 'Find my earphone' feature.

## MAINTENANCE

- **Cleaning:** Regularly wipe the earbuds and charging case with a soft, dry, lint-free cloth. Avoid using abrasive materials or harsh chemicals.
- **Storage:** When not in use, store the earbuds in their charging case to protect them from dust and damage. Keep the case in a cool, dry place.
- **Water Resistance:** The earbuds are IPX5 water resistant, meaning they can withstand splashes and sweat. Do not submerge them in water or expose them to heavy rain. Ensure they are dry before placing them back in the charging case.
- **Battery Care:** To preserve battery life, avoid fully discharging the earbuds and case frequently. Charge them regularly, even if not in constant use.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Earbuds not pairing	Bluetooth is off on device; earbuds not in pairing mode; out of range.	Ensure Bluetooth is on. Place earbuds in case, close, then open to re-enter pairing mode. Move closer to device.
No sound	Volume too low; earbuds not connected; media paused.	Increase volume on device and earbuds. Reconnect Bluetooth. Check media playback status.

Problem	Possible Cause	Solution
Charging issues	Cable or adapter faulty; earbuds not seated correctly; charging port dirty.	Try a different USB-C cable and adapter. Ensure earbuds are properly placed in the case. Clean charging contacts gently.
Touch controls unresponsive	Temporary software glitch; dirty touch sensor.	Restart earbuds by placing them in the case and closing it. Clean the touch sensor area.
Poor call quality	Weak signal; environmental noise.	Move to an area with better signal. Utilize the dual-flow wind noise reduction feature.

## SPECIFICATIONS



**Image Description:** This image provides an exploded view of the 14.2mm dynamic driver found in the PAXA M100 earbuds. It visually represents the internal components responsible for delivering high-fidelity audio, emphasizing sound clarity and depth.

Feature	Detail
---------	--------

Feature	Detail
Model Name	M10019 (PAXA-M100)
Brand	PAXA
Connectivity Technology	Wireless (Bluetooth 5.4)
Ear Placement	Open Ear
Form Factor	True Wireless
Control Type	Touch Control, App
Audio Driver Type	Dynamic Driver (14.2mm)
Frequency Range	20Hz - 20,000Hz
Impedance	32 Ohm
Water Resistance Level	IPX5 (Water Resistant)
Batteries	3 Lithium Polymer batteries (included)
Item Weight	3.52 ounces
Material	Plastic

## WARRANTY AND SUPPORT

For warranty information, please refer to the documentation included with your purchase or visit the official PAXA website. Warranty terms and conditions may vary by region and retailer.

For technical support, troubleshooting assistance beyond this manual, or to inquire about replacement parts, please visit the PAXA support section on their official website or contact their customer service directly. Contact details are typically available on the manufacturer's website or product packaging.