

Newise EWO003

Newise EWO003 Rechargeable Electric Wine Opener Instruction Manual

Model: EWO003 | Brand: Newise

1. INTRODUCTION

Thank you for choosing the Newise EWO003 Rechargeable Electric Wine Opener. This comprehensive set is designed to simplify your wine opening and preservation experience. It includes an electric wine opener, a foil cutter, an aerating pourer, vacuum stoppers, and a convenient charging base. Please read this manual carefully before use to ensure proper operation and maintenance.

2. SAFETY INFORMATION

- Keep the device out of reach of children.
- Do not immerse the electric opener in water or other liquids.
- Avoid touching the corkscrew spiral with fingers or other objects during operation.
- Use only the provided charging cable and base.
- Do not attempt to open bottles with damaged or synthetic corks that are not designed for corkscrews.
- Store the product in a cool, dry place when not in use.

3. PACKAGE CONTENTS

Verify that all items are present in your package:

- 1 x Newise Electric Wine Opener
- 1 x Charging Base
- 1 x Foil Cutter
- 1 x Aerating Pourer
- 2 x Vacuum Stoppers
- 1 x USB Charging Cable

Convenient and Practical Design



Image 3.1: Complete Newise Electric Wine Opener Set.

4. PRODUCT OVERVIEW

Familiarize yourself with the components of your Newise Electric Wine Opener set:

- **Electric Wine Opener:** The main device for automatic cork removal. Features a transparent shell to view the corkscrew mechanism.
- **Charging Base:** Provides power to the electric opener and organizes all accessories.
- **Foil Cutter:** Used to quickly and safely remove the foil seal from wine bottles.
- **Aerating Pourer:** Enhances wine flavor by aerating it as it's poured, also prevents spills.
- **Vacuum Stoppers:** Designed to preserve the freshness of opened wine by removing air from the bottle.



Image 4.1: Components of the Newise Electric Wine Opener Set.

5. SETUP

5.1 Charging the Electric Wine Opener

1. Connect the USB charging cable to the charging base and a suitable power adapter (not included).
2. Place the electric wine opener onto the charging base. Ensure it is seated correctly.
3. The indicator light on the opener will illuminate (typically blue or green) to show it is charging.
4. Allow the opener to charge fully before first use. A full charge can open up to 60 bottles.



Image 5.1: Charging the Electric Wine Opener.

5.2 Assembling Accessories on the Base

The charging base provides designated slots for the foil cutter, aerating pourer, and vacuum stoppers for organized storage.

Easy To Use



Image 5.2: Accessories stored on the charging base.

6. OPERATING INSTRUCTIONS

6.1 Using the Foil Cutter

1. Place the foil cutter on top of the wine bottle, gripping the neck firmly.
2. Squeeze the sides of the cutter and rotate it around the bottle neck to cut the foil.
3. Remove the cut foil.



Image 6.1: Removing foil with the cutter.

6.2 Using the Electric Wine Opener

1. After removing the foil, place the electric wine opener vertically over the cork.
2. Press and hold the lower button (down arrow). The corkscrew will automatically penetrate the cork and pull it out of the bottle. This typically takes about 6 seconds.
3. Once the cork is fully removed, lift the opener from the bottle.
4. To release the cork from the opener, press and hold the upper button (up arrow). The cork will be ejected.



Image 6.2: Step-by-step guide for opening a wine bottle.

6.3 Using the Aerating Pourer

1. Insert the aerating pourer firmly into the neck of the opened wine bottle.
2. Pour wine slowly into a glass. The pourer will aerate the wine as it flows, enhancing its aroma and flavor.



Image 6.3: Using the aerating pourer.

6.4 Using the Vacuum Stoppers

1. Place a vacuum stopper firmly into the neck of the wine bottle.
2. Pump the top of the stopper repeatedly until resistance is felt, indicating that air has been removed from the bottle. This helps preserve the wine's freshness.



Image 6.4: Preserving wine with a vacuum stopper.

6.5 Product Demonstration Video

Your browser does not support the video tag.

Video 6.5: Official demonstration of the Newise Electric Wine Opener and accessories in use. This video shows the unboxing, setup, and operation of the electric opener, foil cutter, aerator pourer, and vacuum stopper.

7. MAINTENANCE

7.1 Cleaning

- Wipe the exterior of the electric wine opener and charging base with a soft, damp cloth. Do not use abrasive cleaners or immerse in water.
- The foil cutter, aerating pourer, and vacuum stoppers can be rinsed with warm water and mild soap. Ensure they are completely dry before storing.

7.2 Storage

Store the Newise Electric Wine Opener set on its charging base in a dry, cool place, away from direct sunlight and moisture.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Opener does not turn on.	Low battery.	Place the opener on the charging base and allow it to charge fully.
Cork is not removed.	Opener not aligned correctly; cork is too fragile or synthetic.	Ensure the opener is centered over the cork. For very old or synthetic corks, manual assistance may be needed.
Cork stuck in opener.	Cork did not fully eject.	Press the upper button (up arrow) to eject the cork. If it remains stuck, gently assist by holding the cork and pressing the button.

9. SPECIFICATIONS

Feature	Detail
Model Number	EWO003

Feature	Detail
Brand	Newise
Material	Aluminum, Plastic
Color	Black
Item Weight	1.1 Pounds (approx. 0.5 kg)
Product Dimensions	10.94"L x 2.44"W (approx. 27.8 cm L x 6.2 cm W)
Battery Type	Rechargeable (4 Nonstandard Battery batteries included)
Cork Removal Time	Approximately 6 seconds
Bottles per Charge	Up to 60 bottles

10. WARRANTY AND SUPPORT

Newise stands behind the quality of its products. This Electric Wine Opener comes with a **365-day hassle-free warranty** from the date of purchase.

For any questions, concerns, or warranty claims, please contact Newise customer support. Refer to the product packaging or the retailer's website for the most current contact information.