

[Manuals.plus](#) /

> [DAMOACAM](#) /

> DAMOACAM 2.5K Keyless Spy Camera CK400FQHD Instruction Manual

DAMOACAM CK400FQHD

DAMOACAM 2.5K Keyless Spy Camera

Model: CK400FQHD | Brand: DAMOACAM

1. INTRODUCTION

Thank you for purchasing the DAMOACAM 2.5K Keyless Spy Camera (Model: CK400FQHD). This ultra-compact, covert camera is designed for discreet video recording, surveillance, and evidence collection. Its keyless fob design ensures complete stealth, making it ideal for various scenarios including personal safety, home/office monitoring, and meeting recording. This manual provides detailed instructions to help you set up, operate, and maintain your device.



Figure 1.1: The DAMOACAM CK400FQHD Keyless Spy Camera, designed for discreet recording.

2. PRODUCT FEATURES

- **Crystal Clear 2.5K QHD Video:** Supports video recording at 2560x1440px and 1920x1080px resolutions, providing clear and detailed footage.
- **Ultra-Compact & Covert Design:** Disguised as a common car key fob, featuring a specially manufactured camouflage plate that conceals the lens, ensuring discreet operation.
- **Wide Angle Lens:** Equipped with an 80-degree wide-angle lens, capturing a broader field of view compared to many other mini cameras.
- **Built-in 64GB Storage:** Comes with 64GB of internal memory, providing ample space for recordings.
- **Long-Lasting Battery Life:** Built-in lithium-ion rechargeable battery supports approximately 70 minutes of continuous recording on a full charge.
- **USB Type-C Connectivity:** Features a Type-C port for convenient charging and data transfer.
- **Loop Recording Function:** Automatically overwrites the oldest files when the memory is full, ensuring continuous recording.
- **External Power Support:** Can operate while connected to an external power source for extended recording times.
- **Built-in Microphone:** Records audio along with video.



Figure 2.1: Key features of the DAMOACAM CK400FQHD.

DAMOACAM キーレス 隠しカメラ 最新スパイカム

QHD 2560x1440p

超小型カメラでありながら、2560x1440 QHD高解像度記録に対応し、HD 1080Pに比べて鮮明で鮮やかな画質を提供します。



Figure 2.2: Visual comparison of QHD (2560x1440p) and FHD (1920x1080p) video quality.

80度広角撮影

ほとんどの隠しビデオカメラは角度レンズが限られています。しかし、DAMOACAMキーレス隠しビデオカメラは、80度の広角レンズを備えており、画像全体を確実に撮影できます。

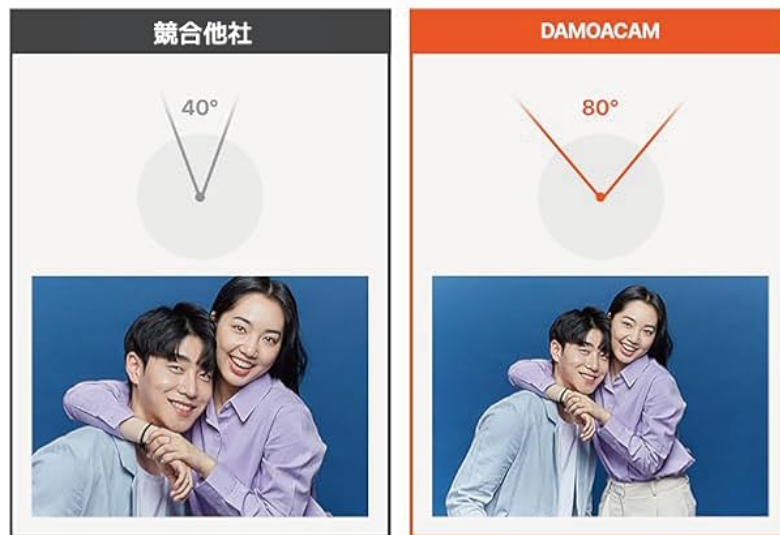


Figure 2.3: The 80-degree wide-angle lens captures a significantly larger area.

3. PACKAGE CONTENTS

Ensure all the following items are included in your package:

- DAMOACAM CK400FQHD Main Unit
- Key Holder

- USB Type-C Cable
- Instruction Manual (PDF download version)
- Product Warranty Card (PDF download version)



Figure 3.1: Included accessories: Key holder and USB Type-C cable.

4. GETTING STARTED (SETUP)

4.1 Initial Charging

Before first use, fully charge the device. Connect the included USB Type-C cable to the camera's Type-C port and the other end to a USB power source (e.g., computer USB port, USB wall adapter - sold separately). The indicator light will show charging status (refer to Section 5.1 for indicator light details).



Figure 4.1: Charging and data transfer via USB Type-C.

5. OPERATION

5.1 Device Layout and Indicator Lights



Figure 5.1: Key components and controls of the camera.

The device features a hidden lens, a Power Button, an FHD Button, a QHD Button, a USB Type-C port for charging and data transfer, and an operation indicator light.

5.2 Video Recording

The camera supports two video resolutions: 2560x1440px (QHD) and 1920x1080px (FHD).

1. **Power On:** Press and hold the Power Button until the indicator light turns on.
2. **Select Resolution:**
 - For QHD (2560x1440px) recording, press the QHD Button.
 - For FHD (1920x1080px) recording, press the FHD Button.

The indicator light will change to confirm the selected mode.

3. **Start Recording:** Once the desired resolution is selected, the camera will automatically begin recording. The indicator light will typically blink or change color to indicate active recording.
4. **Stop Recording:** Press the Power Button briefly to stop recording. The camera will save the current video file and return to standby mode.
5. **Power Off:** Press and hold the Power Button until the indicator light turns off completely.

5.3 Data Transfer

To access recorded files, connect the camera to a computer using the provided USB Type-C cable. The camera will appear as a removable storage device. You can then copy video files to your computer.

6. MAINTENANCE

- Keep the device clean by wiping it with a soft, dry cloth.
- Avoid exposing the camera to extreme temperatures, humidity, or direct sunlight.
- Do not attempt to disassemble or modify the device, as this will void the warranty.
- Store the camera in a cool, dry place when not in use.

7. TROUBLESHOOTING

7.1 Common Issues

- **Device not turning on:** Ensure the battery is sufficiently charged. Connect to a power source and try again.
- **Cannot record video:** Check if the internal memory is full. Transfer files to a computer to free up space. Ensure the battery has enough charge.
- **Computer not recognizing the device:** Try a different USB port or cable. Ensure the camera is powered on when connected.
- **Device becomes warm during use:** It is normal for the device to generate some heat during operation. This is not an abnormality.

If you encounter issues not listed here, please refer to the warranty and support section for assistance.

8. SPECIFICATIONS

Feature	Specification
Model Number	CK400FQHD
Video Resolution	2560x1440px (QHD), 1920x1080px (FHD)
Compression Method	H.264 (High Profile L4.1)
Frame Rate	Up to 30 FPS
Field of View	Approx. 80°
Internal Memory	64GB
Recording Time (Full Charge)	Approx. 70 minutes (theoretical value, may vary)
Battery Type	Lithium-ion rechargeable battery
Charging Method	USB Bus Power / AC Adapter (sold separately)
Product Dimensions	Approx. 40 x 75 x 16 mm
Weight	Approx. 71g

Feature	Specification
Waterproof	No
Operating Temperature	10°C 40°C
Operating Humidity	20 80% RH (non-condensing)
Supported OS	Microsoft Windows
Country of Origin	Korea

9. IMPORTANT SAFETY INFORMATION

- Do not use this product for any malicious acts that violate privacy laws or nuisance prevention ordinances.
- Keep the device away from water and moisture, as it is not waterproof.
- Avoid dropping or subjecting the device to strong impacts.
- Do not expose the device to open flames or extreme heat.
- Keep out of reach of children.

10. WARRANTY AND SUPPORT

This product comes with a warranty period of 6 months from the date of product arrival.

For technical support, troubleshooting assistance, or warranty claims, please contact your retailer or the DAMOACAM customer service. Please have your product model number (CK400FQHD) and purchase information ready when contacting support.