

[Manuals.plus](#) /

› [UltraPro](#) /

› UltraPro BigEZ OneTouch Universal TV Remote Instruction Manual

UltraPro 85053

UltraPro BigEZ OneTouch Universal TV Remote

Model: 85053

INTRODUCTION

The UltraPro BigEZ OneTouch Universal TV Remote is designed for simplicity and ease of use, making it ideal for seniors, individuals with visual impairments, or anyone seeking a straightforward TV control solution. This remote offers OneTouch programming for popular TV brands and can control an additional auxiliary device.



Image: The UltraPro BigEZ OneTouch Universal TV Remote shown with its product packaging, highlighting its large buttons and key features.

KEY FEATURES

- **OneTouch Programming:** Preprogrammed for Samsung, LG, Vizio, Sony, and Roku TVs for immediate control.
- **Vision-Friendly Design:** Extra-large, white remote with fully backlit buttons for easy visibility in various lighting conditions. Features colorblind-friendly blue volume and orange channel buttons.
- **Multi-Device Control:** Operates your TV and one additional auxiliary device such as a Blu-ray/DVD player,

soundbar, cable/satellite box, or streaming media player.

- **Simplified Setup:** Quick and easy setup process requiring only battery insertion and a single button press for TV brand recognition.
- **Master Volume:** Adjusts volume regardless of which device is currently being controlled.

**BIG
BUTTONS**



EASY TO SEE

Perfect for seniors
or those who are
visually impaired



Requires 2 AA batteries
(not included)

*Not compatible with Roku Streaming Sticks® and Amazon Fire TV Sticks

Image: Two individuals, likely seniors, are shown comfortably using the remote, emphasizing its large, clearly visible buttons designed for ease of use.

SETUP

1. Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards to open.
3. Insert two (2) AA batteries (not included), ensuring the positive (+) and negative (-) terminals align with the indicators inside the compartment.
4. Replace the battery cover by sliding it upwards until it clicks into place.

2. OneTouch TV Programming

The UltraPro BigEZ remote is preprogrammed for quick setup with several popular TV brands.

1. Ensure your TV is powered on.
2. Point the remote at your TV.
3. Press and hold the dedicated TV brand button corresponding to your television (e.g., **Samsung**, **LG**, **Sony**, **Vizio**, or **Roku TV**).
4. While holding the brand button, press the **Power** button once.
5. Release both buttons. The remote should now control your TV.

If your TV brand is not listed or the OneTouch programming does not work, refer to the full programming instructions available on the UltraPro support website.



Image: A detailed view of the remote's top section, highlighting the preprogrammed OneTouch buttons for Samsung, LG, Sony, Vizio, and Roku TV.

Button Functions

The UltraPro BigEZ remote features a simplified layout with large, clearly labeled buttons for essential functions.

- **Power Button:** Turns your TV or selected device on/off.
- **TV Brand Buttons (Samsung, LG, Sony, Vizio, Roku TV):** Selects the TV to be controlled.
- **AUX Button:** Controls your auxiliary device (preset for Roku boxes, but programmable).
- **Directional Pad (Up, Down, Left, Right, OK):** Navigates menus and confirms selections.
- **Volume Up/Down (+VOL / -VOL):** Adjusts the volume.
- **Channel Up/Down (+CH / -CH):** Changes channels.
- **Number Pad (0-9, Enter):** Direct channel entry.
- **Source Button:** Cycles through input sources on your TV.
- **Guide Button:** Accesses the program guide.
- **Setup Button:** Used for advanced programming.
- **Back/Return Button:** Returns to the previous screen or menu.
- **Home Button:** Accesses the smart TV or streaming device home screen.
- **Mute Button:** Mutes/unmutes audio.
- **Menu Button:** Opens the device's menu.





Image: A clear view of the remote from the front and side, illustrating its ergonomic design and button layout.

AUX Device Programming

The AUX button is preset for Roku boxes. To program it for another device (e.g., soundbar, DVD player):

1. Turn on the device you wish to program (e.g., soundbar).
2. Press and hold the **AUX** button.
3. While holding **AUX**, press the **Power** button once.
4. Release both buttons. The **AUX** button light will remain lit.
5. Enter the 4-digit code for your device brand (refer to the code list in the full manual or online support).
6. If the device turns off, the code is correct. Press **AUX** again to save the code.
7. If the device does not turn off, try the next code for your brand.

Note: The remote retains the AUX device code for approximately 10 minutes without batteries. Re-programming may be necessary after extended battery removal.



Fully backlit for easy navigation in dark or dimly lit rooms

Image: A user's hand holding the remote in a low-light environment, demonstrating the effectiveness of the fully backlit buttons for easy navigation.

COMPATIBILITY

The UltraPro BigEZ OneTouch Universal TV Remote is designed to work with a wide range of devices:

- Roku boxes
- Roku TV
- Samsung, LG, Sony, Vizio TVs
- All major TV brands
- **Other devices:** Blu-ray/DVD players, set-top boxes, cable/satellite boxes, streaming media players, soundbars.

Important Note:

This remote is NOT compatible with Roku Streaming Sticks or Amazon Fire TV Sticks.

- ✔ Roku boxes
- ✔ Roku TV
- ✔ Samsung, LG, Sony, Vizio
- ✔ All major TV brands
- ✘ Roku streaming sticks



Image: A visual chart indicating the remote's compatibility with various devices, clearly marking what it works with and what it does not.

MAINTENANCE AND CARE

- Clean the remote with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Avoid exposing the remote to extreme temperatures, humidity, or direct sunlight.
- Do not drop the remote or subject it to strong impacts.
- If the remote will not be used for an extended period, remove the batteries to prevent leakage.

TROUBLESHOOTING

Remote Not Responding

- **Check Batteries:** Ensure batteries are inserted correctly with proper polarity (+/-) and are not depleted.

Replace with fresh AA batteries if necessary.

- **Line of Sight:** Ensure there is a clear line of sight between the remote and the device's infrared sensor. Obstructions can block the signal.

Remote Not Controlling TV/Device

- **Re-program TV:** If the remote stops controlling your TV, repeat the OneTouch TV Programming steps (Section 2.2).
- **Re-program AUX Device:** If the AUX device is not responding, repeat the AUX Device Programming steps (Section 3.2).
- **Correct Device Mode:** Ensure you have pressed the correct TV brand button or AUX button to select the device you intend to control.

Missing Specific Functions (e.g., Pause, Fast Forward)

- The UltraPro BigEZ remote is designed for simplified control with essential functions. It may not include all advanced or specific buttons found on original equipment manufacturer (OEM) remotes.
- Some functions might be accessible through menu navigation using the directional pad.

SPECIFICATIONS

Feature	Detail
Model Number	85053
Package Dimensions	8.74 x 2.52 x 1.34 inches
Item Weight	3.68 ounces
Batteries Required	2 AA batteries (not included)
Manufacturer	Jasco Products Company, LLC
Brand	UltraPro
Special Features	Backlit, Big Buttons, No Programming Required (for OneTouch TVs), Pre Programmed, Universal
Color	White
Max Number of Supported Devices	2 (TV + 1 AUX device)
Compatible Devices	DVD/Blu-ray Player, Streaming Device (Roku boxes), Television



Image: A diagram illustrating the physical dimensions of the remote control, including its length, width, and thickness.

SUPPORT INFORMATION

For additional assistance, programming codes, or troubleshooting, please contact UltraPro technical support.

- **U.S.-based Technical Support:** Available Monday-Friday.
- **Online Resources:** Step-by-step programming videos and comprehensive FAQs are available on the UltraPro website.

Please visit the official UltraPro website for the most current support information and contact details.

