

[Manuals.plus](#) /

> [VERMESS](#) /

> VERMESS 46.5" Dresser for Bedroom with Clothes Rack, 5 Drawers Dresser with Charging Station & LED Lights, Storage Chest of Drawers with PU Finish Storage Organizer, for Bedroom Closet (White) - Instruction Manual

VERMESS 5CYMJ-WH

VERMESS 46.5" Dresser with Clothes Rack, 5 Drawers, Charging Station & LED Lights - Instruction Manual

Model: 5CYMJ-WH | Brand: VERMESS

1. INTRODUCTION

Thank you for choosing the VERMESS 46.5" Dresser. This versatile furniture piece is designed to enhance your bedroom or closet with ample storage, including five deep drawers, a convenient clothes rack, and bottom shelves. It also features a built-in charging station and integrated RGB LED lighting to add functionality and ambiance to your space. This manual provides detailed instructions for assembly, operation, maintenance, and troubleshooting to ensure you get the most out of your new dresser.

2. SAFETY INFORMATION

Please read all safety warnings and instructions carefully before assembly and use. Keep this manual for future reference.

- Always assemble the dresser on a soft, clean surface to prevent scratches.
- Ensure all screws and fasteners are securely tightened before use. Periodically check and re-tighten as needed.
- Do not overload the drawers or hanging rack. Refer to the specifications for weight capacities.
- Keep small parts and packaging materials away from children to prevent choking hazards.
- For electrical components (charging station, LED lights):
 - Only use the dresser with a compatible power outlet.
 - Do not expose the charging station or LED lights to water or excessive moisture.
 - Unplug the dresser from the power outlet before cleaning or if it will be unused for an extended period.
 - Do not attempt to modify or repair the electrical components yourself. Contact qualified personnel for service.
- To prevent tipping, especially in households with children, consider anchoring the dresser to the wall using appropriate anti-tip hardware (if included or recommended).

3. PACKAGE CONTENTS

Before beginning assembly, please verify that all components and hardware are present and undamaged. Refer to the included

parts list in your assembly guide for a complete inventory. If any parts are missing or damaged, please contact customer service.

4. SETUP AND ASSEMBLY

The VERMESS dresser is designed for easy assembly. Each part is numbered, and clear instructions are provided to guide you through the process. An installation video is also available to assist you.

4.1 Assembly Steps

1. Unpack all components and lay them out on a clean, soft surface to prevent damage.
2. Identify each part using the numbering system provided in the assembly guide.
3. Follow the step-by-step instructions in the manual, ensuring all fasteners are tightened securely at each stage.
4. Assemble the main frame, then attach the clothes rack and shelves.
5. Insert the five fabric drawers into their respective compartments.
6. Install the charging station and route its power cord as instructed.
7. Attach the LED light strip according to the guide.
8. Once assembled, carefully move the dresser to its desired location. The adjustable feet can be used to level the unit on uneven surfaces.



3 in 1 (Dresser + Hanging Rack + Shoe Rack) Dresser for Bedroom

5 Drawer Dresser with Clothes Rack and Shoes Rack

This dresser can hold:



T-shirts



Coats



Trousers



Socks



Hats



Handbags



Scarves



Towels

Figure 4.1: Dresser Dimensions and Weight Capacities. The overall dimensions are 46.5"D x 15.7"W x 46.9"H. The top surface can hold up to 110 lbs, the hanging rack 50 lbs, and the bottom shelf 40 lbs. Each drawer can hold up to 20 lbs.



Figure 4.2: Dresser in a Bedroom Setting. This image illustrates the dresser's appearance and how it fits into a typical bedroom environment, highlighting its practical design.

5. OPERATING INSTRUCTIONS

5.1 Charging Station

The dresser is equipped with a built-in charging station for your convenience.

- It features 3 standard AC power outlets and 2 USB ports.
- Simply plug the dresser's power cord into a wall outlet.
- You can then plug in and charge various electronic devices such as mobile phones, tablets, headphones, watches, laptops, or desk lamps directly from the dresser.



LED Dresser with RGB Lights



21 Colors Change Remote Control



Remote Control

Figure 5.1: Integrated Charging Station. This image highlights the convenience of the built-in power outlets and USB ports for charging multiple devices simultaneously.

5.2 LED Lights

The integrated RGB LED light strip offers customizable lighting options to suit your mood and decor.

- The LED lights are controlled by a remote control.
- **Color Options:** Choose from 20 different static colors.
- **Dynamic Modes:** Select from 21 dynamic modes for various lighting effects.
- **Speed Adjustment:** Adjust the speed of dynamic modes with 8 different speed settings.
- **Brightness Adjustment:** Control the brightness with 8 different levels.
- Point the remote control towards the LED receiver to change settings.



Figure 5.2: LED Lighting Features. This image demonstrates the dresser's LED lighting capabilities, including multiple color options and the remote control for easy adjustments.

5.3 Storage Utilization

Maximize the ample storage space provided by your VERMESS dresser.

- **Drawers:** The five deep drawers are ideal for folded clothing such as t-shirts, trousers, socks, and other personal items.
- **Clothes Rack:** Use the integrated clothes hanger for items that need to be hung, such as shirts, coats, or dresses, keeping them wrinkle-free.
- **Bottom Shelves:** The bottom shelves are perfect for shoes, handbags, hats, or other accessories.
- **Top Surface:** The large top surface can be used for decorative items, lamps, books, or frequently accessed essentials.



Figure 5.3: 3-in-1 Storage Solution. This graphic highlights the dresser's versatile storage capabilities, including drawers, a hanging rack, and shoe storage, suitable for various clothing and accessories.

6. MAINTENANCE AND CARE

Proper care will help maintain the appearance and longevity of your dresser.

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners, as they may damage the finish.
- **Spills:** Clean spills immediately with a dry cloth to prevent staining.
- **Dusting:** Regularly dust the dresser with a soft, dry cloth.
- **Drawer Care:** The fabric drawers can be spot cleaned with a mild detergent and water. Allow them to air dry completely before reinserting.
- **Electrical Components:** Ensure the charging station and LED lights are unplugged before cleaning. Wipe with a dry cloth only.
- **Stability Check:** Periodically check all screws and connections to ensure they remain tight. Re-tighten if necessary.

7. TROUBLESHOOTING

If you encounter any issues with your VERMESS dresser, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Dresser is wobbly or unstable.	Loose fasteners; uneven floor.	Ensure all screws are tightened. Adjust the adjustable feet on the bottom of the dresser to level it.
Drawers do not slide smoothly.	Improper assembly; drawer overloaded.	Check drawer assembly and ensure they are inserted correctly. Reduce the weight in the drawer.
Charging station not working.	Not plugged in; power outage; faulty device.	Ensure the dresser's power cord is securely plugged into a working wall outlet. Check if the wall outlet has power. Test with a different device.
LED lights not turning on or responding to remote.	Power issue; remote battery low; remote not aimed correctly.	Ensure the dresser is plugged in. Check the remote control battery and replace if necessary. Point the remote directly at the LED receiver.
Missing parts during assembly.	Packaging error.	Double-check all packaging materials. Contact customer service with the specific part number from the assembly guide.

If the problem persists after trying these solutions, please contact VERMESS customer service for further assistance.

8. SPECIFICATIONS

Feature	Detail
Brand	VERMESS
Model Name	5CYMJ-WH
Product Dimensions (D x W x H)	46.5" x 15.7" x 46.9"
Color	White
Mounting Type	Floor Mount
Room Type	Bedroom
Special Feature	Adjustable Feet
Assembly Required	Yes
Item Weight	43.2 pounds
Charging Station	3 AC Power Outlets, 2 USB Ports
LED Lights	RGB, 20 Colors, 21 Dynamic Modes, 8 Speed Modes, 8 Brightness Modes
Storage Capacity	5 Deep Drawers, Clothes Hanging Rack, Bottom Shelves

9. WARRANTY AND SUPPORT

VERMESS is committed to providing satisfactory customer service. If you have any questions, concerns, or require assistance with your dresser, please do not hesitate to contact us.

- Our customer service team aims to reply to all inquiries within 24 hours.
- Please have your model name (5CYMJ-WH) and purchase information ready when contacting support.
- For contact information, please refer to the seller's details on your purchase platform or the VERMESS official website.