

[Manuals.plus](#) /

› [HOOBRO](#) /

› HOOBRO LED TV Stand with Storage (Model BB123DDS01) Instruction Manual

HOOBRO BB123DDS01

HOOBRO LED TV Stand with Storage Instruction Manual

Model: BB123DDS01

INTRODUCTION

Thank you for choosing the HOOBRO LED TV Stand with Storage, Model BB123DDS01. This entertainment center is designed to accommodate TVs up to 55 inches and features integrated LED lighting, open shelves, and two non-woven drawers for comprehensive storage. This manual provides essential information for safe assembly, operation, and maintenance of your new TV stand.



Image: The HOOBRO LED TV Stand with Storage, featuring purple LED lighting, holding a television, game controllers, and speakers in a modern living room setting.

SAFETY INFORMATION

Please read and understand all safety instructions before assembly and use. Failure to follow these instructions may result in injury or damage to the product.

- Always assemble the TV stand according to the provided instructions.
- Do not overload the top shelf. The maximum weight capacity for the tabletop is 100 lb (45 kg).
- Do not overload the metal mesh shelf. The maximum weight capacity for the mesh shelf is 22 lb (10 kg).
- Utilize the included anti-tip device to secure the TV stand to a wall. This prevents accidental tip-over, especially important in households with children or pets.
- Keep the TV stand away from direct heat sources, open flames, and excessive moisture.
- Ensure all connections are secure before placing items on the stand.

- Do not allow children to climb on or play with the TV stand.

PACKAGE CONTENTS

Before beginning assembly, verify that all components listed in the separate assembly instruction manual are present and undamaged. Typically, your package will include:

- Top Panel
- Side Frames (Metal)
- Middle Support Frame (Metal)
- Metal Mesh Shelf
- Non-Woven Drawers (2 units)
- Adjustable Feet
- LED Light Strip with Controller
- Assembly Hardware (screws, bolts, Allen wrench, etc.)
- Anti-Tip Device
- Detailed Assembly Instruction Manual

If any parts are missing or damaged, please contact customer support immediately.

ASSEMBLY INSTRUCTIONS

Assembly is required for this product. Please refer to the separate, detailed assembly instruction manual included in your package for step-by-step guidance. Each component is labeled for clarity, and all necessary tools are provided.

1. **Preparation:** Clear a spacious area for assembly. Lay out all components and hardware. Ensure you have the included Allen wrench and any other necessary tools.
2. **Frame Assembly:** Begin by assembling the metal frame structure. Follow the diagrams in the manual to connect the side frames and middle support frame using the provided screws.
3. **Shelf Installation:** Attach the top panel and the metal mesh shelf to the assembled frame. Ensure all screws are tightened securely.
4. **Drawer Insertion:** Insert the two non-woven drawers into their designated compartments.
5. **Adjustable Feet:** Screw in the adjustable feet at the bottom of the stand. Adjust them to ensure the stand is level on uneven floors.
6. **LED Light Strip Installation:** Carefully attach the LED light strip to the designated areas, typically along the inner edges of the shelves, following the specific instructions for the LED system.
7. **Anti-Tip Device:** Securely attach the anti-tip device to the back of the TV stand and to a wall stud, as per the instructions. This is a critical safety step.

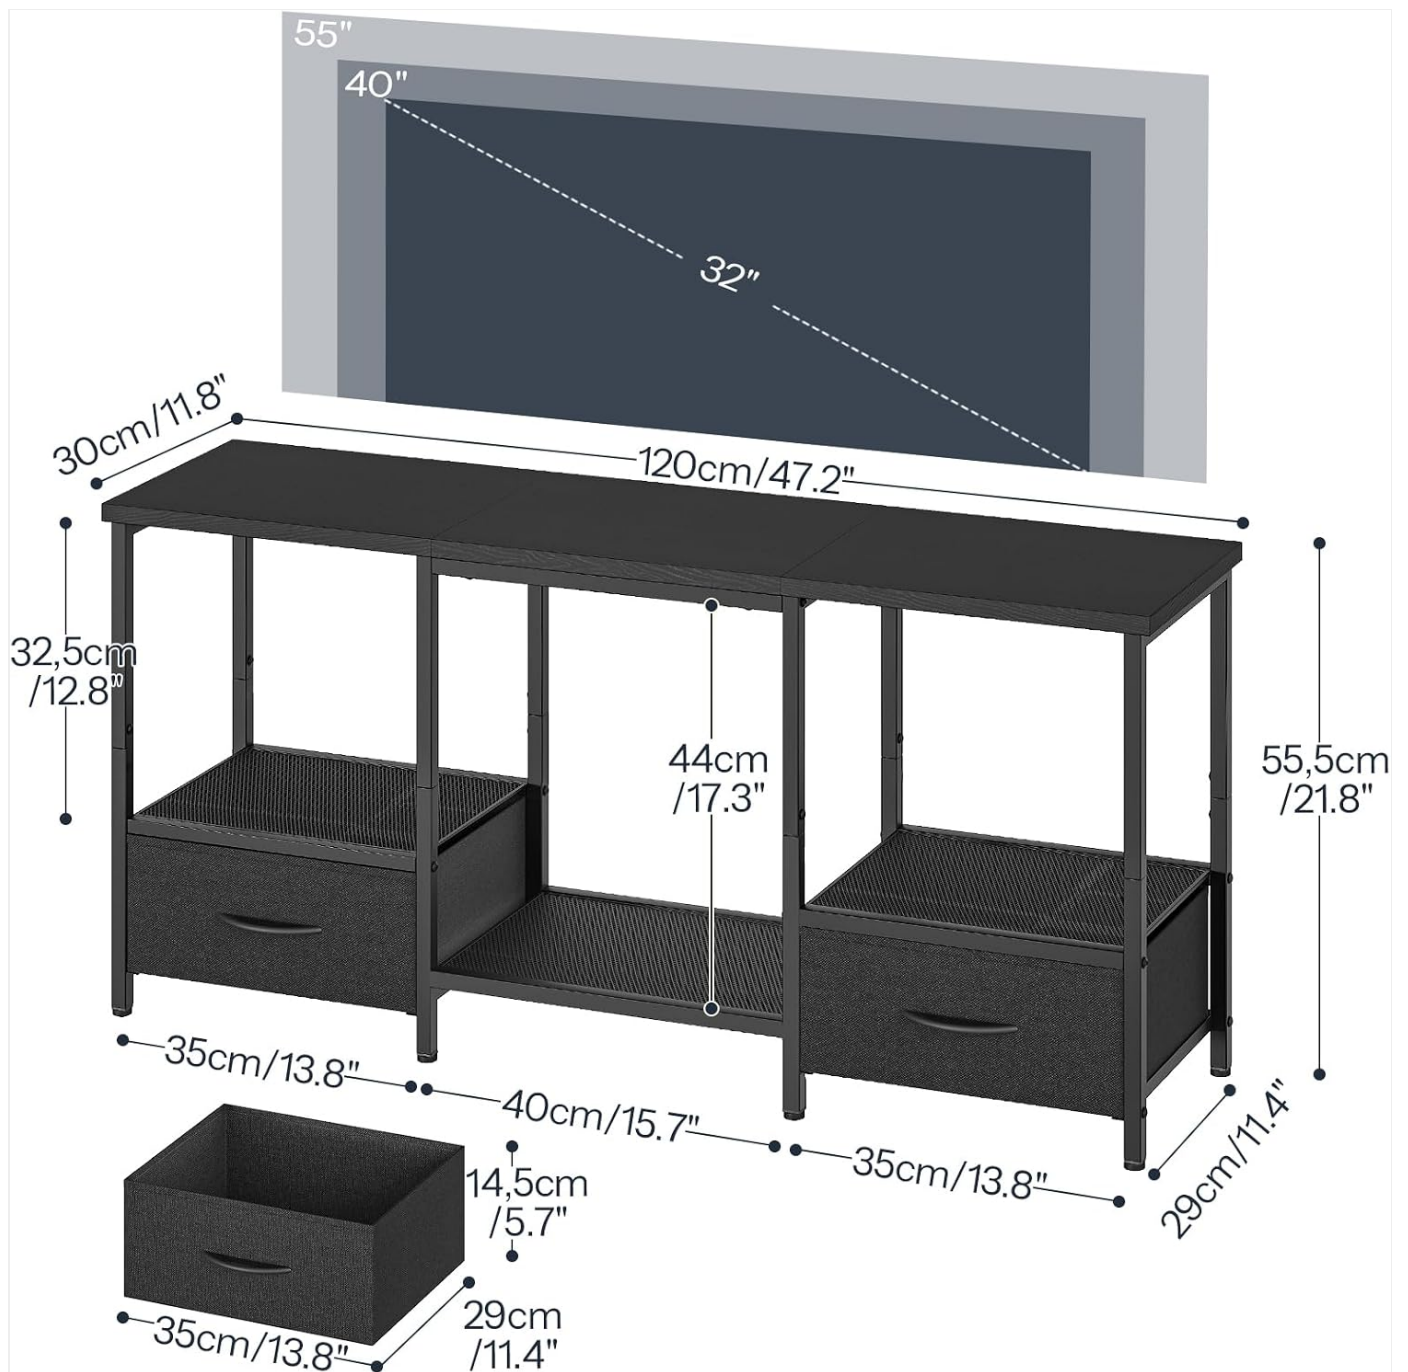


Image: A detailed diagram illustrating the dimensions of the HOOBRO LED TV Stand (47.2"L x 11.8"W x 21.8"H) and its individual drawer components, indicating suitability for TVs up to 55 inches.



Large Capacity Drawers



Practical Handles



Dense Mesh Shelving



Adjustable Feet

Image: A collage of close-up views highlighting key features: spacious non-woven drawers, ergonomic handles, the durable dense mesh shelving, and the adjustable leveling feet for stability.

OPERATING INSTRUCTIONS (LED LIGHTING)

Your HOOBRO LED TV Stand includes an adjustable LED lighting system to enhance your entertainment experience. The LED strip is controlled via a remote control.

- **Power On/Off:** Use the "ON" and "OFF" buttons on the remote to turn the LED lights on or off.
- **Color Selection:** The remote offers multiple color options. Press the desired color button to change the light color.
- **Brightness Adjustment:** Use the brightness up/down buttons to adjust the intensity of the LED lights.
- **Mode Selection:** The LED system features various lighting modes (e.g., flash, strobe, fade, smooth). Press the mode buttons to cycle through these effects.
- **Remote Control Battery:** Ensure the remote control has a working battery. Replace if necessary.



Image: The HOOBRO LED TV Stand illuminated with blue LED lights, showcasing its aesthetic appeal and functionality in a living room setting.

MAINTENANCE

Proper maintenance will ensure the longevity and appearance of your TV stand.

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners, which can damage the finish.
- **Dusting:** Regularly dust the stand to prevent buildup.
- **Hardware Check:** Periodically check all screws and connections to ensure they remain tight. Retighten if necessary.
- **Drawer Care:** The non-woven drawers can be spot cleaned with a mild detergent if needed. Allow to air dry completely.
- **LED Strip:** Ensure the LED strip and its connections are free from dust and moisture.

Troubleshooting

Problem	Possible Cause	Solution
LED lights not turning on.	Power connection loose; remote battery dead; LED strip damaged.	Check power adapter connection. Replace remote battery. Inspect LED strip for visible damage.
Stand feels unstable or wobbly.	Screws loose; adjustable feet uneven; anti-tip device not installed.	Tighten all assembly screws. Adjust the leveling feet. Install the anti-tip device as instructed.
Drawers do not slide smoothly.	Drawer fabric caught; drawer overloaded.	Ensure no fabric is obstructing the drawer movement. Reduce the weight inside the drawer.

Specifications

Brand	HOOBRO
Model Number	BB123DDS01
Color	Black
Material	Particleboard, Metal, Non-Woven Fabric
Overall Dimensions (L x W x H)	47.2" x 11.8" x 21.8" (120 cm x 30 cm x 55.5 cm)
Item Weight	17.2 Pounds (7.8 kg)
Max. Load Capacity (Tabletop)	100 lb (45 kg)
Max. Load Capacity (Mesh Shelf)	22 lb (10 kg)
Number of Drawers	2
Number of Shelves	3 (1 mesh, 2 open compartments)
Assembly Required	Yes
Special Features	LED Lighting (multiple colors/modes), Adjustable Feet, Anti-Tip Device

Warranty and Support

For warranty information or if you encounter any issues not covered in this manual, please contact HOOBRO customer support. Refer to your purchase documentation for specific warranty terms and contact details. You can typically find support information on the HOOBRO official website or through the retailer where you purchased the product.

Online Support: Visit the HOOBRO store on Amazon:[HOOBRO Store](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0F6T4QZMY>

More documents and user manuals: <https://manuals.plus/>