

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

> [Ledwood](#) /

> [Ledwood ACCESS130 Portable HiFi Speaker User Manual](#)

Ledwood ACCESS130

Ledwood ACCESS130 Portable HiFi Speaker

User Manual

INTRODUCTION

Thank you for choosing the Ledwood ACCESS130 Portable HiFi Speaker. This manual provides essential information for the safe and efficient operation of your device. The ACCESS130 is a versatile portable speaker featuring dynamic RGB LED effects, Bluetooth 5.3 connectivity, USB input, and a karaoke function with an included wireless microphone. It is designed to deliver a powerful audio experience for various occasions.

SAFETY INFORMATION

- Read all instructions carefully before using the product.
- Do not expose the speaker to water or excessive moisture. This product is not waterproof.
- Keep the speaker away from heat sources, direct sunlight, and flammable materials.
- Do not attempt to disassemble, repair, or modify the device. Refer all servicing to qualified personnel.
- Use only the provided USB-C charging cable.
- Avoid listening at high volume levels for extended periods to prevent hearing damage.
- Keep out of reach of children.

PACKAGE CONTENTS

Please check the package for the following items:

- Ledwood ACCESS130 Portable HiFi Speaker
- USB-C Charging Cable
- Wireless Microphone
- Carrying Strap

PRODUCT OVERVIEW

Familiarize yourself with the components and controls of your Ledwood ACCESS130 speaker.



Image: The Ledwood ACCESS130 portable speaker shown with its wireless microphone attached to the side. The speaker features a black mesh grille and an illuminated LED strip on the front.

Controls and Ports

ACCESS130



WIRELESS
CONNECTION

KARAOKE
FUNCTION



Image: A top-down view of the Ledwood ACCESS130 speaker, highlighting the control panel with buttons for power, volume, mode, and LED effects. Icons for LED colors, microphone, karaoke function, USB-C, and wireless connection are also visible.

- **Power Button:** Press and hold to turn the speaker On/Off.
- **Mode Button (M):** Press to switch between Bluetooth, USB, and other input modes.
- **Volume Up (+):** Increase volume.
- **Volume Down (-):** Decrease volume.
- **Play/Pause Button:** Play or pause audio playback.
- **LED Effect Button:** Cycle through different LED lighting modes or turn them off.
- **USB-C Port:** For charging the speaker.
- **USB-A Port:** For USB audio playback.

SETUP

1. Charging the Speaker

1. Connect the provided USB-C charging cable to the speaker's USB-C port.
2. Connect the other end of the cable to a compatible USB power adapter (not included) or a computer's USB

port.

3. The LED indicator will show charging status. A full charge takes approximately [Charging Time - not specified in input, omit if not available].

2. Powering On/Off

- To power on, press and hold the Power button until the speaker activates.
- To power off, press and hold the Power button again until the speaker shuts down.

3. Bluetooth Pairing

1. Ensure the speaker is powered on and in Bluetooth mode (indicated by a flashing Bluetooth LED). If not, press the 'M' (Mode) button to switch to Bluetooth mode.
2. On your smartphone, tablet, or computer, enable Bluetooth and search for available devices.
3. Select "Ledwood ACCESS130" from the list of devices.
4. Once paired, the Bluetooth LED will stop flashing and remain solid, indicating a successful connection.

4. Connecting the Wireless Microphone

1. Ensure the wireless microphone is charged and powered on.
2. The microphone should automatically connect to the speaker when both are powered on and within range.
3. Test the microphone by speaking into it to confirm audio output from the speaker.

OPERATING

1. Bluetooth Playback

- After successful Bluetooth pairing, open your music application on your connected device.
- Start playing audio. The sound will be transmitted wirelessly to the ACCESS130 speaker.
- Use the volume buttons on the speaker or your connected device to adjust the audio level.
- Press the Play/Pause button on the speaker to control playback.

2. USB Playback

- Insert a USB flash drive containing audio files (e.g., MP3) into the speaker's USB-A port.
- Press the 'M' (Mode) button to switch to USB mode.
- The speaker will automatically begin playing audio from the USB drive.
- Use the speaker's controls to adjust volume and navigate tracks.

3. Karaoke Function

- Ensure the wireless microphone is connected to the speaker as described in the Setup section.
- Play your desired instrumental track via Bluetooth or USB.
- Speak or sing into the microphone. Your voice will be amplified through the speaker, mixing with the music.

4. LED Light Effects

- Press the LED Effect button to cycle through various dynamic RGB lighting modes.
- Continue pressing the button to select your preferred lighting effect or to turn the LEDs off.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the speaker's surface. Do not use abrasive cleaners or solvents.
- **Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures when not in use for extended periods.
- **Battery Care:** To prolong battery life, fully charge the speaker before first use and recharge it at least once every three months if not used regularly. Avoid completely draining the battery.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not turn on.	Low battery.	Charge the speaker using the provided USB-C cable.
No Bluetooth connection.	Speaker not in pairing mode; device out of range; previously connected device.	Ensure speaker is in Bluetooth pairing mode. Move device closer. Disconnect from other devices.
No sound from microphone.	Microphone not powered on; microphone not paired.	Ensure microphone is charged and powered on. Check if it automatically connects.
USB playback not working.	Incorrect mode; unsupported file format; corrupted USB drive.	Press 'M' button to select USB mode. Ensure files are MP3. Try a different USB drive.
LED lights not working.	LED effects turned off.	Press the LED Effect button to cycle through modes.

SPECIFICATIONS

Model Name:	ACCESS130
Brand:	Ledwood
Speaker Type:	Portable Speaker
Maximum Speaker Output Power:	130 Watts (12W RMS)
Audio Output Mode:	Stereo
Wireless Communication Technology:	Bluetooth 5.3
Bluetooth Max Power:	-6 to 4dBm
Signal-to-Noise Ratio:	≥80dB
Power Source:	Battery Powered

Battery:	3.7V - 3600mAh
Total Playtime (50% volume):	6 hours 30 minutes
Control Method:	Application, Touch
Connections:	Bluetooth 5.3, USB-A
Dimensions (H x D x L):	12.04 cm x 9.9 cm x 26.1 cm
Weight:	1 Kg
Waterproof:	No
Included Components:	USB-C charging cable, Wireless microphone, Carrying strap

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided at the time of purchase or contact your retailer. You may also visit the official Ledwood website for further assistance.