

Manuals.plus /

› Ströme /

› Ströme PowerClean D1 Bagless Vacuum Cleaner User Manual

Ströme D1

Ströme PowerClean D1 Bagless Vacuum Cleaner User Manual

Model: D1 | Brand: Ströme

1. SAFETY INFORMATION

Please read these instructions carefully before using the appliance. Keep this user manual for future reference.

- Ensure the power supply voltage matches the rating label on the vacuum cleaner.
- Do not use the appliance to vacuum water, liquids, hot ashes, sharp objects, or flammable materials.
- Always unplug the vacuum cleaner from the power outlet before cleaning or performing maintenance.
- Do not operate the vacuum cleaner with a damaged cord or plug. Contact qualified service personnel for repair.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.

2. PRODUCT OVERVIEW

The Ströme PowerClean D1 is a bagless vacuum cleaner designed for efficient daily cleaning. It features a powerful 750W motor, 19 kPa suction power, a 1.5L dust container, and HEPA filtration for improved air quality. The adjustable suction power allows for versatile cleaning on various surfaces.

Components Included:

- Main Vacuum Unit
- Flexible Suction Hose
- Telescopic Locking Tube
- Floor Nozzle
- Dust Brush
- Crevice Nozzle



Figure 2.1: Overview of the Ströme PowerClean D1 vacuum cleaner with its main components assembled.

3. SETUP

3.1 Unpacking

Carefully remove all components from the packaging. Retain the packaging for future storage or transport.

3.2 Assembling the Vacuum Cleaner

1. Insert the flexible suction hose into the suction inlet on the main unit until it clicks into place.
2. Attach the telescopic locking tube to the handle end of the flexible hose. Ensure it is securely fastened.
3. Connect the floor nozzle to the end of the telescopic tube. Press firmly until it locks.



Figure 3.1: Attaching the floor nozzle to the telescopic tube.

3.3 Attaching Accessories

The dust brush and crevice nozzle can be attached directly to the handle end of the flexible hose or the telescopic tube for specialized cleaning tasks.

3.4 Connecting to Power

Extend the power cord to its full length and plug it into a suitable 230V AC power outlet. The cord has an 8-meter total reach, including the 5-meter cable.

4. OPERATING INSTRUCTIONS

4.1 Powering On/Off

Press the On/Off button located on the main unit to start or stop the vacuum cleaner.

4.2 Adjusting Suction Power

The vacuum cleaner features adjustable suction power. Use the control dial or slider on the main unit or hose handle (if present) to increase or decrease suction as needed for different surfaces. Lower suction is suitable for delicate fabrics, while higher suction is ideal for deep cleaning carpets or hard floors.

4.3 Using the Floor Nozzle

The floor nozzle is designed for general cleaning of hard floors and carpets. Adjust the brush setting on the nozzle for optimal performance on each surface type.

4.4 Using Accessories

- **Dust Brush:** Ideal for cleaning delicate surfaces, furniture, and curtains.
- **Crevice Nozzle:** Perfect for reaching narrow gaps, corners, and edges.





Figure 4.1: Operating the vacuum cleaner on a hard floor.

5. MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your vacuum cleaner.

5.1 Emptying the Dust Container

The 1.5L dust container should be emptied regularly, especially when the 'MAX' indicator is reached. To empty:

1. Ensure the vacuum cleaner is unplugged.
2. Press the release button to detach the dust container from the main unit.
3. Position the container over a waste bin and press the bottom release latch to open and empty the contents.
4. Close the bottom latch securely and reattach the dust container to the main unit until it clicks.



Figure 5.1: Removing the dust container for emptying.

5.2 Cleaning the Filters

The vacuum cleaner is equipped with a HEPA filter and pre-motor filters. These filters are washable and should be cleaned periodically (e.g., every 3-6 months, depending on usage) to maintain suction power and air quality.

1. Unplug the vacuum cleaner.
2. Remove the dust container. The filters are typically located within or near the dust container assembly.
3. Carefully remove the HEPA filter and pre-motor filters.
4. Tap the filters gently to remove loose dust. If washable, rinse them under cold running water until the water runs clear. Do not use detergents.
5. Allow the filters to air dry completely for at least 24 hours before reinserting them. Do not use a hairdryer or other heating devices.
6. Reassemble the filters and dust container.

5.3 Cleaning Accessories

Wipe down the hose, tubes, and nozzles with a damp cloth. Ensure they are dry before reattaching.

6. STORAGE

When not in use, store the vacuum cleaner in a dry, cool place, away from direct sunlight and out of reach of children. The telescopic tube can be retracted, and the hose can be wrapped around the unit for compact storage.



Figure 6.1: The vacuum cleaner stored compactly.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Vacuum cleaner does not turn on.	No power supply.	Check if the plug is securely inserted into the outlet. Check the power outlet with another appliance.
Low suction power.	Dust container full. Clogged filters. Obstruction in hose/nozzle.	Empty the dust container. Clean or replace filters. Check hose and nozzles for blockages.
Unusual noise.	Obstruction in fan/motor area. Loose parts.	Unplug and check for obstructions. Ensure all parts are securely assembled. If noise persists, contact customer support.
Overheating.	Clogged filters. Blocked airflow.	Clean all filters. Check for any blockages in the hose or nozzles that restrict airflow. Allow the unit to cool down before restarting.

8. SPECIFICATIONS

- Brand:** Ströme
- Model Name:** D1
- Motor Power:** 750 watts
- Suction Power:** 19 kPa
- Dust Container Capacity:** 1.5 Liters
- Filtration:** HEPA
- Noise Level:** 78 dB
- Power Source:** Electric with cord
- Voltage:** 230 Volts (AC)
- Cord Length:** 5 meters
- Total Reach:** 8 meters
- Product Weight:** 7.5 Kilograms
- Special Features:** Bagless design, adjustable suction, versatile accessories, cleanable filters, long reach
- Recommended Surfaces:** Hard floors, carpets
- Included Components:** Locking tube, suction hose, dust brush, crevice nozzle

9. WARRANTY AND CUSTOMER SUPPORT

For warranty information, technical support, or service inquiries, please refer to the warranty card included with your product or contact Ströme customer service through their official website or the retailer where the product was purchased. Please have your model number (D1) and purchase date available when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0F6VH1R4Z>

More documents and user manuals: <https://manuals.plus/>