

[Manuals.plus](#) /

› [ELYKEN](#) /

› ELYKEN Laundry Cart with Clothes Rack HLC08M1 User Manual

## ELYKEN HLC08M1

# ELYKEN Laundry Cart with Clothes Rack HLC08M1 User Manual

Model: HLC08M1

## INTRODUCTION

---

Thank you for choosing the ELYKEN Laundry Cart with Clothes Rack, Model HLC08M1. This manual provides detailed instructions for the assembly, operation, and maintenance of your new laundry cart. Please read this manual thoroughly before assembly and use to ensure proper function and longevity of the product. Keep this manual for future reference.



Image: The ELYKEN Laundry Cart with Clothes Rack (HLC08M1) in a living room, showcasing its design and functionality.

## PACKAGE CONTENTS

---

Before beginning assembly, ensure all parts are present and undamaged. If any parts are missing or damaged, please contact ELYKEN customer support.

- Metal Frame Components (various rods and connectors)
- Hanging Clothes Rack Bar
- Removable Liner Bag with Handles
- Bottom Storage Shelf
- 4 Casters (Wheels), 2 with Brakes
- Assembly Hardware (screws, wrench, etc. - specific items may vary)

## SETUP AND ASSEMBLY

---

Follow these steps to assemble your ELYKEN Laundry Cart. It is recommended to assemble on a soft, clean surface to prevent scratches.

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out. Verify

against the package contents list.

2. **Assemble Base Frame:** Connect the lower metal rods to form the base of the cart. Secure with provided hardware.
3. **Attach Casters:** Insert the 4 casters into the designated holes at the bottom of the base frame. Ensure the 2 casters with brakes are positioned on the same side for easy access.
4. **Install Bottom Storage Shelf:** Place the metal grid shelf onto the lower frame supports.
5. **Assemble Vertical Supports:** Attach the vertical metal rods to the base frame, extending upwards.
6. **Install Clothes Rack Bar:** Connect the top horizontal bar, which serves as the clothes rack, to the vertical supports. Ensure the anti-slip ball design is facing upwards.
7. **Place Liner Bag:** Insert the removable liner bag into the designated frame area. Secure the bag's handles or clasps to the frame if applicable.

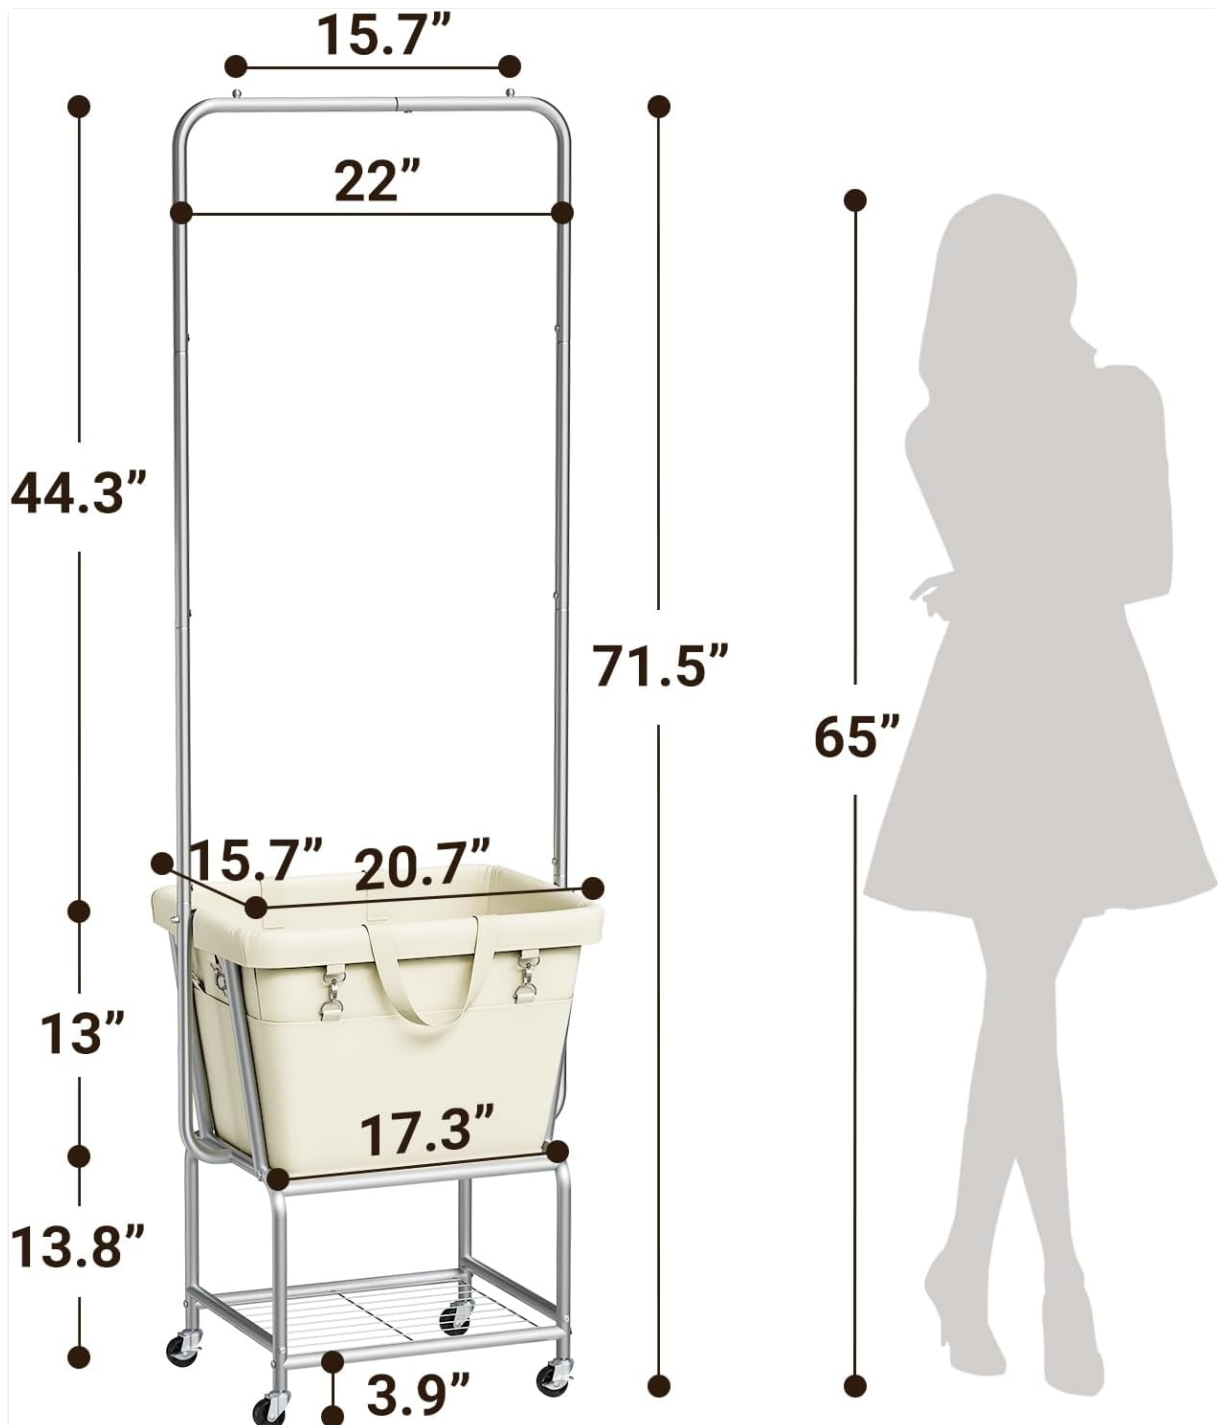


Image: Dimensional diagram of the ELYKEN Laundry Cart, illustrating height, width, and depth measurements for assembly reference.

# Multi Functional Design

Easily move this laundry cart anywhere  
or keep it in place



**Additional Bottom  
Storage Design**



**2 Wheels with  
Brakes**



Image: Close-up view of the ELYKEN Laundry Cart's multi-functional design, highlighting the additional bottom storage shelf and the casters, including those with brakes.

## OPERATING INSTRUCTIONS

The ELYKEN Laundry Cart is designed for convenient laundry management and clothing organization.

- **Using the Laundry Hamper:** Place dirty clothes into the removable liner bag. The bag is designed to hold a substantial amount of laundry.
- **Using the Clothes Rack:** Hang wet or dry clothes on the top rack. The rack features an anti-slip ball design to help prevent hangers from sliding off.
- **Mobility and Braking:** To move the cart, simply push or pull it using the frame. To secure the cart in place, press down on the levers of the two casters equipped with brakes until they lock. To release, lift the levers.
- **Utilizing Bottom Storage:** The bottom shelf provides additional space for laundry supplies, folded clothes, or other items.
- **Removing the Liner Bag:** The liner bag can be easily detached from the frame using its handles or clasps, allowing for convenient transport of laundry to the washing machine.

# Anti-slip Ball Design

Prevent hanger from slipping from the rolling laundry cart

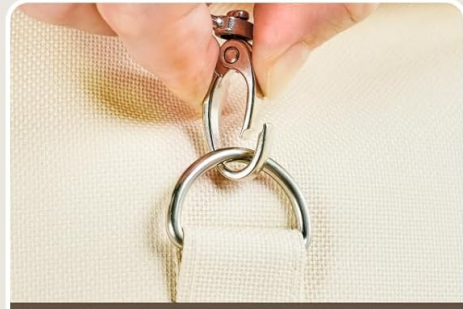


Image: Detail of the anti-slip ball design on the clothes rack, intended to prevent hangers from slipping.



## Removable Liner Bag with Handles

Can be carried by hand or shoulders



Upgraded stainless steel clasp



Waterproof fabric



Machine Washable

Image: The removable liner bag with handles, showcasing its waterproof fabric and upgraded stainless steel clasps for easy removal and transport.

## MAINTENANCE

---

Regular maintenance will help prolong the life and appearance of your laundry cart.

- **Cleaning the Frame:** Wipe the metal frame with a soft, damp cloth and mild detergent. Dry thoroughly to prevent rust. Avoid abrasive cleaners.
- **Cleaning the Liner Bag:** The removable liner bag is made of polyester and is indicated as machine washable. For best results and to maintain its integrity, wash on a gentle cycle with cold water and mild detergent. Air dry or tumble dry on low heat. *Note: A user review indicated potential peeling when machine washed; exercise caution and consider hand washing for longevity.*
- **Caster Maintenance:** Periodically check the casters for lint or debris that may hinder smooth rolling. Clean as needed. Ensure brakes engage and disengage properly.
- **Hardware Check:** Occasionally check all screws and connections to ensure they remain tight. Tighten if necessary.

## TROUBLESHOOTING

---

If you encounter any issues with your ELYKEN Laundry Cart, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Cart does not roll smoothly.	Caster brakes are engaged, or debris is caught in wheels.	Ensure brakes are disengaged. Check wheels for lint, hair, or other obstructions and remove them.
Cart feels unstable or wobbly.	Loose connections or uneven assembly.	Check all screws and connections. Tighten any loose hardware. Ensure all frame components are fully inserted.
Hangers slip off the clothes rack.	Hangers are not compatible with the anti-slip design, or rack is overloaded.	Ensure hangers are placed correctly on the anti-slip balls. Reduce the number of items if the rack is overloaded.
Liner bag does not fit correctly.	Incorrect placement or bag is overfilled.	Ensure the bag is properly seated within the frame and its clasps/handles are secured. Do not overfill the bag beyond its capacity.

## SPECIFICATIONS

---

Feature	Detail
Model	HLC08M1
Brand	ELYKEN
Product Dimensions (L x W x H)	55.9L x 39.9W x 181.6H Centimetres (22" L x 15.7" W x 71.5" H)
Item Weight	11.02 Pounds
Material (Frame)	Metal
Material (Liner Bag)	Polyester
Color	Silver+cream
Special Features	Removable Liner, Wheeled, Clothes Rack, Bottom Storage Shelf, 2 Casters with Brakes
Specific Uses	Indoor use, storage of dirty clothes, transportation of laundry, bedroom or bathroom organization

## WARRANTY AND SUPPORT

---

ELYKEN products are manufactured to high-quality standards. For any questions, concerns, or support needs regarding your HLC08M1 Laundry Cart, please contact ELYKEN customer service. Please retain your proof of purchase for warranty claims.

For further assistance, visit the official ELYKEN website or contact their customer support channels.

