



Manuals.plus /

› Seizeen /

› ENYOPRO 24V Kids UTV Electric Ride-On Car Instruction Manual

Seizeen 24V Kids UTV Electric Ride-On Car

ENYOPRO 24V Kids UTV Electric Ride-On Car Instruction Manual

Model: 24V Kids UTV Electric Ride-On Car

Brand: Seizeen

IMPORTANT SAFETY INFORMATION

Please read this entire manual before assembly or use of the ENYOPRO 24V Kids UTV Electric Ride-On Car. Failure to follow these instructions could result in serious injury or property damage.

- Adult supervision is required at all times.
- Ensure all assembly steps are completed correctly and all fasteners are secure before first use.
- Always use the provided seatbelt.
- Do not operate the vehicle near roads, motor vehicles, steep inclines, swimming pools, or other bodies of water.
- Wear appropriate safety gear, such as a helmet, when operating the vehicle.
- The maximum weight capacity for this vehicle is 132 lbs. Do not exceed this limit.
- Suitable for ages 37+ months.

PRODUCT OVERVIEW

The ENYOPRO 24V Kids UTV Electric Ride-On Car is designed to provide a realistic and exciting off-road adventure for children. It features a robust design, powerful dual motors, and an integrated entertainment system, ensuring a fun and safe driving experience.



Figure 1: Front view of the ENYOPRO 24V Kids UTV Electric Ride-On Car in pink.

Key Features:

- **Realistic Off-Road Design:** Mimics a real off-road vehicle with oversized, rugged tires, vibrant LED headlights, and a sturdy frame.
- **Powerful Dual Motors:** Equipped with 2 x 100W motors for ample torque on various surfaces.
- **Enhanced Safety Features:** Includes lockable doors, a secure seatbelt, low-speed start, and an anti-collision bumper.
- **Built-In Entertainment System:** Features pre-installed music, Bluetooth connectivity, and MP3/AUX compatibility.
- **Parental Remote Control:** A 2.4GHz remote allows adults to control speed and direction for added supervision.
- **Spring Suspension:** Ensures a smooth and steady ride over uneven terrain.

PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- 1 x 2 Seater Ride on UTV
- 1 x Remote Control
- 1 x UL Charger
- 1 x Instruction Manual (this document)

ASSEMBLY INSTRUCTIONS

Assembly should be performed by an adult. Please follow these steps carefully.

1. **Unpack Components:** Carefully remove all parts from the packaging. Lay them out on a clean, flat surface.

2. **Install Wheels:** Attach the four wheels to the axles. Ensure they are securely fastened with the provided hardware. The anti-skid PP tires are designed for various terrains.
3. **Connect Battery:** Locate the battery compartment, typically under the seat. Connect the battery terminals according to the positive (+) and negative (-) indicators. Ensure a secure connection.
4. **Attach Steering Wheel:** Secure the steering wheel to the steering column. Make sure it clicks into place or is fastened with the designated screw.
5. **Install Seats and Seatbelt:** Place the 2-seater seats into their designated slots and secure them. Fasten the safety belt mechanism.
6. **Attach Rear Wing (if applicable):** If a separate rear wing is included, attach it to the rear of the vehicle as per the diagram. This enhances driving stability.
7. **Final Check:** Before first use, inspect all connections, screws, and moving parts to ensure they are properly assembled and secure.



Figure 2: Key safety and design features including the 2-seater configuration with safety belt, lockable doors, anti-skid tires, and anti-collision bumper.

**DECORATION REAR WING,
INCREASE DRIVING STABILITY**



**REAR WHEEL METAL
SPRING SHOCK ABSORBER**



Figure 3: The rear of the UTV, highlighting the decorative rear wing for stability and the metal spring shock absorbers for a smooth ride.

OPERATING INSTRUCTIONS

Charging the Battery:

- Before first use, charge the battery for 8-12 hours.
- Plug the UL Charger into the charging port on the vehicle.
- Plug the charger into a standard wall outlet.
- Do not overcharge the battery. Typical running time is 1-2 hours per full charge.

Driving the Vehicle (Manual Mode):

1. Ensure the vehicle is fully charged.
2. Have the child sit in the seat and fasten the seatbelt.
3. Press the power button to turn on the vehicle.
4. Select the desired speed setting (2 speeds available).
5. Use the forward/backward switch to select direction.

6. Press the foot pedal to accelerate. Release the pedal to brake.
7. Steer using the steering wheel.

Using the Parental Remote Control:

The 2.4GHz remote control allows parents to override manual controls for safety or to assist younger children.

- Insert 2 x 1.5V AAA Batteries (Not Included) into the remote control.
- **Pairing:** Follow the remote control's specific instructions for pairing with the vehicle.
- **Controls:** The remote typically features buttons for forward, backward, left, right, speed selection, and an emergency brake function.
- When the remote control is active, the child's manual controls will be overridden.



Figure 4: The UTV can be operated in manual mode by the child or controlled by a parent using the remote, offering 3 speed options and an emergency brake.

Entertainment System:

The vehicle includes an integrated multimedia player.

- **Pre-installed Music:** Play built-in tunes.
- **Bluetooth Connectivity:** Pair your device to play custom music.

- **MP3/AUX Compatibility:** Connect external audio devices via USB or AUX port.
- Use the control panel on the dashboard to manage music playback and volume.



Figure 5: The multi-function dashboard with controls for music, Bluetooth, USB/AUX, horn, LED headlights, battery display, and driving modes.

Your browser does not support the video tag.

Video 1: Demonstration of the ENYOPRO 24V Kids Ride On UTV in action, showcasing its features and movement on various terrains.

MAINTENANCE

- **Cleaning:** Wipe the vehicle with a soft, damp cloth. Do not use abrasive cleaners or solvents. Avoid direct water spray.
- **Battery Care:** Recharge the battery after each use. If storing for an extended period, charge the battery once a month to prolong its lifespan. Disconnect the battery when not in use for long periods.
- **Storage:** Store the vehicle in a dry, cool place away from direct sunlight and moisture.
- **Inspection:** Regularly check all screws, nuts, and bolts to ensure they are tight. Inspect tires for wear and tear.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Vehicle does not move.	Battery is low or disconnected. Fuse is blown. Power switch is off.	Charge the battery. Check battery connections. Check and replace fuse if necessary. Turn on the power switch.
Vehicle moves slowly.	Battery is low. Overloaded vehicle. Operating on rough terrain.	Recharge the battery. Reduce weight. Operate on smoother surfaces.
Remote control not working.	Remote batteries are dead. Remote not paired. Interference.	Replace remote batteries. Re-pair the remote control. Move to an area with less interference.
Lights or music not working.	Battery low. Loose connection.	Charge the battery. Check wiring connections to the entertainment system and lights.

SPECIFICATIONS

Feature	Detail
Color	Pink (also available in Black/Orange)
Material	PP Plastic, Metal
Overall Dimensions (L x W x H)	47.6" x 32.7" x 25.2"
Net Weight	25 kg / 55.1 lbs
Weight Capacity	132 lbs
Suitable Age	37+ Months (Manufacturer recommended: 3 years and up)
Speed	3.7-6.2 mph
Battery	24V/7Ah
Motor	2 x 100W
Charging Time	8-12 Hours
Running Time	1-2 Hours
Remote Control Battery Type	2 x 1.5V AAA Batteries (Not Included)



Figure 6: Product dimensions and capacity details.

WARRANTY AND SUPPORT

For warranty information or technical support, please contact Seizeen customer service. Refer to your purchase documentation for specific warranty terms and contact details.

Customer Service: Please refer to the contact information provided with your purchase or visit the official Seizeen website.