

Manuals.plus /

› Farberware /

› Farberware 0.9 Cu. Ft. 900-Watt Compact Countertop Microwave Oven User Manual

Farberware 0.9 Cu. Ft. 900-Watt

Farberware 0.9 Cu. Ft. 900-Watt Compact Countertop Microwave Oven

Model: 0.9 Cu. Ft. 900-Watt

PRODUCT OVERVIEW

This manual provides essential information for the safe and efficient operation of your Farberware 0.9 Cu. Ft. 900-Watt Compact Countertop Microwave Oven. Please read all instructions carefully before use and retain for future reference.



Figure 1: Front view of the Farberware 0.9 Cu. Ft. 900-Watt Compact Countertop Microwave Oven.

Key Features

- **Compact Size, Big Power:** 0.9 cu. ft. capacity with 900 watts of cooking power for efficient heating and cooking.
- **Auto Cook Menus:** Pre-programmed settings for pizza, popcorn, beverages, and more for effortless meal prep.
- **Defrost Options:** Time and weight defrost functions ensure even thawing of frozen foods.
- **Express Cooking:** +30-second quick start button allows for fast and easy heating.
- **Digital Control Panel:** Easy-to-use LED display with intuitive touch controls.
- **Child Safety Lock:** Provides peace of mind by preventing unintended operation.



Figure 2: Overview of key specifications including capacity, power levels, and wattage.

SETUP AND INSTALLATION

Unpacking

Carefully remove the microwave oven from its packaging. Retain the packaging materials for future transport or storage. Check for any damage during transit. If any damage is observed, do not operate the appliance and contact customer support.

Placement

Place the microwave oven on a flat, stable surface that can support its weight. Ensure adequate ventilation around the unit. Maintain the following minimum clearances:

- **Sides and Back:** At least 3 inches (7.6 cm) of clearance.
- **Top:** At least 12 inches (30.5 cm) of clearance.

Do not block any ventilation openings. Do not place the microwave oven near heat sources such as stoves or radiators, or in areas with high humidity.

Get the Perfect Fit.

compact size to
make the most of
your space



Figure 3: Microwave oven dimensions for proper placement.

Power Connection

Plug the microwave oven into a grounded 120V AC, 60Hz electrical outlet. Ensure the outlet is dedicated to the microwave oven and is not overloaded with other appliances.

OPERATING INSTRUCTIONS

Familiarize yourself with the control panel and its functions before operating the microwave oven.



Figure 4: Detailed view of the intuitive control panel.

Setting the Clock

1. Press the "Clock" button.
2. Use the number pad to enter the current time (e.g., 12:30 for 12:30 PM).
3. Press the "Clock" button again to confirm.

Microwave Cooking

To cook with microwave power:

1. Place food in a microwave-safe container.
2. Close the microwave door securely.
3. Press the "Time Cook" button.

4. Enter the desired cooking time using the number pad.
5. (Optional) To adjust power level, press "**Power Level**" and then enter a number from 1 (lowest) to 10 (highest). Default is 10.
6. Press the "**START**" button to begin cooking.

Auto Cook Menus

The microwave features pre-programmed settings for common foods:

- **Potato:** For baking potatoes.
- **Popcorn:** For popping microwave popcorn.
- **Pizza:** For reheating pizza slices.
- **Beverage:** For heating drinks.
- **Frozen Vegetable:** For cooking frozen vegetables.
- **Dinner Plate:** For reheating a dinner plate.

To use an Auto Cook Menu, simply press the corresponding button (e.g., "**Popcorn**"). The microwave will automatically set the cooking time and power level. Press "**START**" to begin.

Defrost Options

The microwave offers two defrost methods:

- **Time Defrost:**
 - a. Press "**Time Defrost**".
 - b. Enter the desired defrosting time.
 - c. Press "**START**".
- **Weight Defrost:**
 - a. Press "**Weight Defrost**".
 - b. Enter the weight of the food in ounces (oz).
 - c. Press "**START**".

Express Cooking (+30 Sec)

For quick heating, simply press the "**START/+30 SEC**" button. Each press adds 30 seconds of cooking time at full power. This function can also be used to add time during cooking.

Child Safety Lock

To activate the child safety lock, press and hold the "**STOP/Cancel**" button for 3 seconds until "LOCK" appears on the display. To deactivate, press and hold the "**STOP/Cancel**" button again for 3 seconds until "LOCK" disappears.

MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your microwave oven.

Easy, Clean, Convenient.

easy-to-clean
interior is perfect for
the home and office



FARBERWARE®

Figure 5: The microwave's interior is designed for easy cleaning.

Cleaning the Interior

- Wipe the interior cavity with a damp cloth after each use to remove food splatters.
- For stubborn stains, place a bowl of water with a few lemon slices inside and microwave on high for 2-3 minutes. The steam will loosen the stains, making them easier to wipe away.
- Do not use abrasive cleaners, steel wool, or harsh chemicals, as these can damage the interior surfaces.

Cleaning the Exterior

- Wipe the exterior surfaces with a soft, damp cloth.
- For the control panel, wipe gently with a soft, dry cloth. Avoid excessive moisture.

Turntable Care

- The glass turntable and roller ring can be removed for cleaning. Wash them in warm, soapy water or in the dishwasher.

- Ensure the turntable and roller ring are completely dry before placing them back in the microwave.
- Ensure the turntable is correctly seated on the rotating mechanism before operating the microwave.

TROUBLESHOOTING

If you encounter issues with your microwave oven, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Microwave does not start.	Door is not closed properly; Power cord is unplugged; Circuit breaker tripped; Child safety lock is activated.	Ensure door is firmly closed. Check power cord connection. Reset circuit breaker. Deactivate child safety lock (see Operating Instructions).
Food is not heating.	Incorrect cooking time/power level set; Magnetron issue.	Increase cooking time or power level. If problem persists, contact customer support.
Turntable is not rotating.	Turntable or roller ring is not correctly placed; Debris under turntable.	Ensure turntable and roller ring are properly seated. Clean any debris from under the turntable.
Excessive steam inside the oven.	Normal condensation from food.	This is normal, especially with high-moisture foods. Wipe interior after use.
Microwave beeps continuously after cooking.	End-of-cycle reminder.	This is a feature to remind you that cooking is complete. The beeping will stop after a few reminders or when the door is opened.

For issues not covered here, or if problems persist, please contact Farberware customer support.

SPECIFICATIONS

Feature	Detail
Model Number	0.9 Cu. Ft. 900-Watt
Capacity	0.9 Cubic Feet
Wattage	900 Watts
Voltage	120 Volts (AC)
Product Dimensions (D x W x H)	13.51" x 18.98" x 10.75"
Item Weight	27.3 pounds
Color	White
Installation Type	Countertop
Controller Type	Touch
Special Features	Express Cook, One Touch Button, Turntable

WARRANTY AND SUPPORT

For detailed warranty information, please refer to the warranty card included with your product or visit the official Farberware website. Keep your purchase receipt as proof of purchase for warranty claims.

If you require technical assistance or have questions regarding your Farberware microwave oven, please contact Farberware customer support. Contact details can typically be found on the manufacturer's website or on the product packaging. For more information, you may visit the Farberware Store on Amazon.