Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- Karlsson /
- Karlsson Brisk Alarm Clock User Manual (Dark Grey)

Karlsson Brisk Alarm Clock

Karlsson Brisk Alarm Clock User Manual

Model: Brisk Alarm Clock (Dark Grey)

1. Introduction

Welcome to your Karlsson Brisk Alarm Clock. This manual provides detailed instructions for the proper setup, operation, and maintenance of your new timepiece. Please read this manual thoroughly before use and retain it for future reference.

1.1 Package Contents

- Karlsson Brisk Alarm Clock (Dark Grey)
- · Integrated Stand
- User Manual (this document)



Figure 1: Front view of the Karlsson Brisk Alarm Clock, Dark Grey.

2. SETUP

2.1 Inserting the Battery

The Karlsson Brisk Alarm Clock requires one AA battery (not included) for operation.

- 1. Locate the battery compartment on the back of the clock.
- 2. Open the battery compartment cover by sliding or gently prying it open.
- 3. Insert one AA battery, ensuring the correct polarity (+/-) as indicated inside the compartment.
- 4. Close the battery compartment cover securely.



Figure 2: Back view of the clock, highlighting the battery compartment and control knobs.

2.2 Setting the Time

Once the battery is inserted, set the current time:

- 1. Locate the time setting knob (usually the rightmost knob) on the back of the clock (refer to Figure 2).
- 2. Gently turn this knob clockwise or counter-clockwise to adjust the hour and minute hands to the current time.

3. OPERATING THE ALARM CLOCK

3.1 Setting the Alarm

To set your desired alarm time:

- 1. Locate the alarm setting knob (usually the leftmost knob) on the back of the clock (refer to Figure 2).
- 2. Turn the alarm setting knob to move the small alarm hand to your desired alarm time.
- 3. Ensure the alarm ON/OFF switch (located on the back, typically a slider) is in the "ON" position to activate the alarm.

3.2 Turning the Alarm On/Off

Use the ON/OFF switch on the back of the clock to activate or deactivate the alarm function.

- Slide the switch to "ON" to enable the alarm. The alarm will sound at the set time.
- Slide the switch to "OFF" to disable the alarm. The alarm will not sound.

4. MAINTENANCE

4.1 Cleaning

To clean the clock, gently wipe the surface with a soft, dry cloth. Do not use abrasive cleaners, chemical solvents, or excessive moisture, as these may damage the finish or internal components.

4.2 Battery Replacement

Replace the AA battery when the clock hands slow down or stop moving, or if the alarm sound weakens. Follow the "Inserting the Battery" instructions in Section 2.1.

5. TROUBLESHOOTING

Problem	Possible Cause	Solution
Clock not working / Hands not moving	Battery incorrectly inserted or depleted.	Check battery polarity. Replace with a new AA battery.
Alarm not sounding	Alarm switch is OFF, battery low, or alarm time incorrectly set.	Ensure alarm ON/OFF switch is in "ON" position. Replace battery. Verify alarm hand is set to the desired time.

6. Specifications

Feature	Detail
Brand	Karlsson
Model	Brisk Alarm Clock
Color	Dark Grey

Feature	Detail
Material	Iron
Dimensions (W x H x D)	11 cm x 13.8 cm x 6.5 cm
Weight	300 g
Power Source	1 x AA Battery (not included)

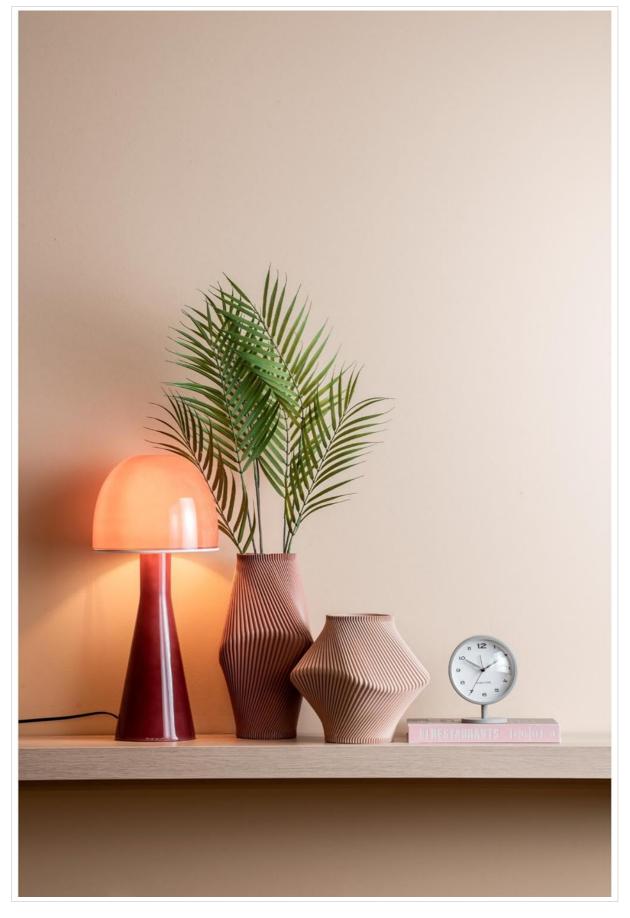



Figure 3: The Karlsson Brisk Alarm Clock displayed in a contemporary interior, illustrating its size and aesthetic.

7. WARRANTY AND SUPPORT

For warranty information, technical support, or service inquiries, please refer to the retailer where the product was purchased. It is recommended to keep your proof of purchase for any warranty claims. You

may also visit the official Karlsson website for additional support resources.

Related Documents - Brisk Alarm Clock

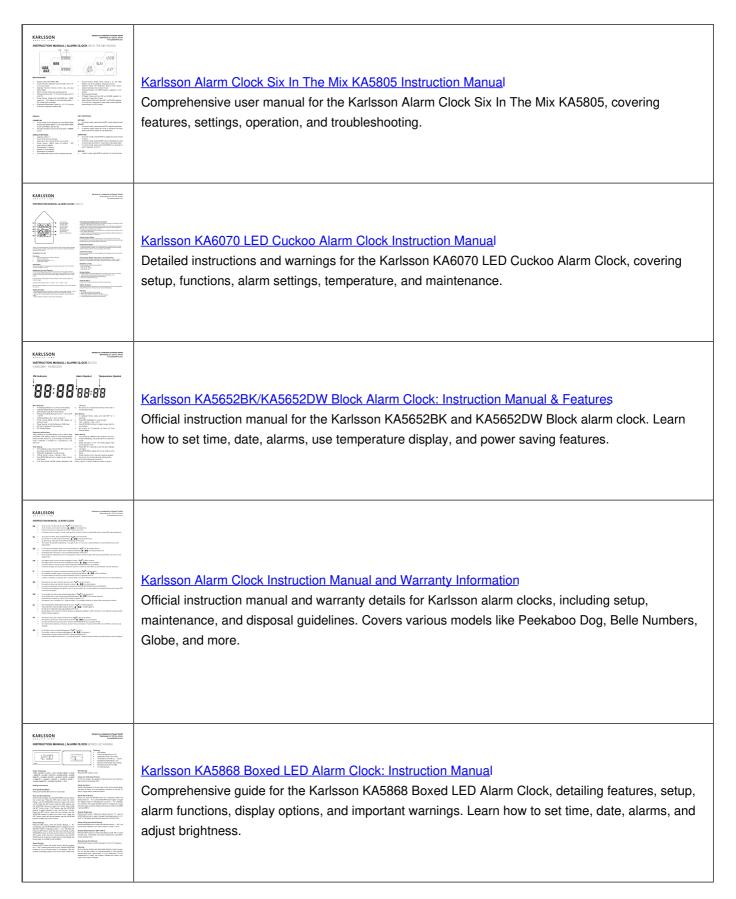



Karlsson KA6039 Alarm Clock: User Manual and Features

Comprehensive guide to the Karlsson KA6039 alarm clock, covering product specifications, features like display modes, alarms, brightness settings, sound control, and usage instructions. Includes setup, maintenance, and troubleshooting tips.