

Karlsson KA6026YE

Karlsson Grato Cuckoo Wall Clock KA6026YE User Manual

Model: KA6026YE

1. INTRODUCTION

Thank you for choosing the Karlsson Grato Cuckoo Wall Clock. This modern interpretation of a classic cuckoo clock combines contemporary design with playful functionality. This manual provides essential information for the proper setup, operation, and maintenance of your clock to ensure long-lasting enjoyment.

The Grato Cuckoo Clock features a subtle tone-on-tone design and a cuckoo sound that chimes every hour. Please read these instructions carefully before use.

2. PACKAGE CONTENTS

- Karlsson Grato Cuckoo Wall Clock Unit
- Oscillating Pendulum
- User Manual (this document)

3. SAFETY INFORMATION

- Keep batteries out of reach of children.
- Do not mix old and new batteries, or different types of batteries.
- Remove batteries if the clock will not be used for an extended period.
- Avoid exposing the clock to extreme temperatures, direct sunlight, or high humidity.
- Handle the clock with care to prevent damage.

4. SETUP

4.1 Unpacking

Carefully remove all components from the packaging. Retain packaging for future transport or storage if needed.

4.2 Battery Installation

The clock requires batteries for operation. Locate the battery compartment on the back of the clock.



Figure 1: Rear view of the clock, highlighting the battery compartment and controls.

1. Open the battery compartment cover.
2. Insert the required batteries (typically AA, refer to compartment markings for type and polarity) ensuring correct polarity (+/-).
3. Close the battery compartment cover securely.

4.3 Pendulum Attachment

Attach the oscillating pendulum to the designated hook or slot at the bottom of the clock unit. Ensure it hangs freely and can swing without obstruction.



Figure 2: Front view of the Karlsson Grato Cuckoo Wall Clock with the pendulum.

4.4 Mounting the Clock

The clock is designed for wall mounting. Use a suitable screw or hook (not included) in a sturdy wall location. The clock features a hanging slot on its rear for secure placement.



Figure 3: The clock displayed in a home environment, demonstrating its wall-mounted appearance.

5. OPERATING INSTRUCTIONS

5.1 Setting the Time

To set the time, gently turn the minute hand (the longer hand) clockwise until the desired time is displayed. Avoid turning the hour hand directly.



Figure 4: Close-up of the clock face, showing the hands and the cuckoo opening.

5.2 Cuckoo Function

The Grato Cuckoo Clock features an hourly cuckoo chime. Please note that the bird inside the clock does not physically emerge; the sound is emitted from within the clock. The volume of the cuckoo sound is adjustable.

- **Volume Adjustment:** Locate the volume control dial or button on the back of the clock (refer to Figure 1). Adjust it to your preferred sound level.
- **Night Mode:** Some models may include a light sensor or a manual switch to silence the cuckoo during nighttime hours. Consult the markings on the back of your specific clock for this feature.

6. MAINTENANCE

6.1 Cleaning

To clean the clock, gently wipe the surface with a soft, dry cloth. Do not use abrasive cleaners, solvents, or chemical sprays, as these can damage the finish.

6.2 Battery Replacement

When the clock hands slow down, stop moving, or the cuckoo sound becomes faint or stops, it is time to replace the batteries. Follow the battery installation steps in Section 4.2.

7. TROUBLESHOOTING

- **Clock not running:**

- Check if batteries are inserted correctly with the right polarity.
- Replace with fresh batteries.
- Ensure the pendulum is attached and swinging freely.

- **Cuckoo not sounding:**

- Check battery level and replace if necessary.
- Ensure the volume control is not set to minimum or off.
- Verify if a night mode sensor or switch is active, silencing the cuckoo.

- **Incorrect time:**

- Reset the time as per Section 5.1.
- Ensure the clock is mounted securely and not subject to vibrations that could affect the movement.

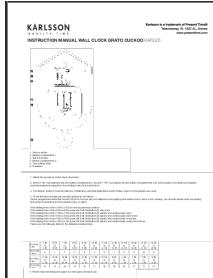
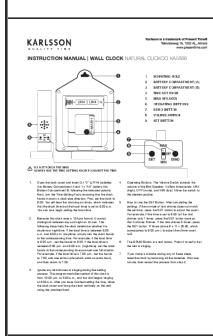
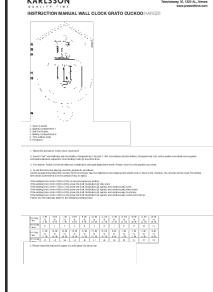
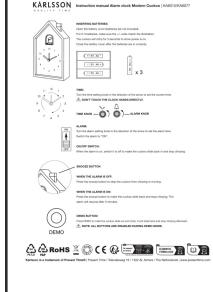
8. SPECIFICATIONS

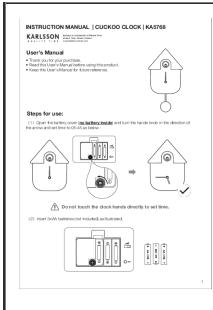
Brand	Karlsson
Model Number	KA6026YE
Color	Ochre Yellow and Soft Yellow
Dimensions (L x W x H)	17.5 x 3.81 x 33.2 cm (6.9 x 1.5 x 13.1 inches)
Weight	1 Kilogram (2.2 lbs)
Material	Acrylonitrile Butadiene Styrene (ABS)
Display Type	Analog
Power Source	Battery Powered
Special Feature	Adjustable Volume

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided at the point of purchase or contact your retailer. Keep your proof of purchase for any warranty claims.

Related Documents - KA6026YE

	<p>Karlsson Grato Cuckoo Wall Clock KA6026 Instruction Manual</p> <p>Detailed instructions for setting up and operating the Karlsson Grato Cuckoo Wall Clock model KA6026, including battery installation, time setting, volume control, and bird voice activation. Includes warranty and maintenance information.</p>
	<p>Karlsson Natural Cuckoo Wall Clock KA5886: Instruction Manual & Setup Guide</p> <p>Comprehensive guide for the Karlsson Natural Cuckoo Wall Clock, model KA5886. This manual provides detailed instructions on setup, time setting, operation of buttons, volume control, and maintenance. Learn how to correctly set the time, understand the day/night setting, and utilize the demo and set functions. Includes warranty information and disposal guidelines.</p>
	<p>Karlsson Grato Cuckoo Wall Clock KA6026 Instruction Manual</p> <p>Detailed instructions for setting up and operating the Karlsson Grato Cuckoo Wall Clock KA6026, including battery installation, time setting, volume control, and bird voice timing.</p>
	<p>Karlsson Modern Cuckoo Alarm Clock KA6015/KA6077: Instruction Manual</p> <p>User guide for the Karlsson Modern Cuckoo Alarm Clock (Model KA6015/KA6077). Learn how to insert batteries, set the time and alarm, use snooze, and understand its features. Includes warranty and maintenance information.</p>
	<p>Karlsson KA6044 Cuckoo Light Wall Clock Instruction Manual</p> <p>Comprehensive instructions for setting up and operating the Karlsson KA6044 Cuckoo Light Wall Clock, including battery replacement and maintenance tips.</p>



[Karlsson KA5768 Cuckoo Clock Instruction Manual and User Guide](#)

Comprehensive user manual for the Karlsson KA5768 Cuckoo Clock, providing step-by-step instructions for setup, time setting, cuckoo function, battery replacement, and troubleshooting. Learn how to operate your Karlsson cuckoo clock efficiently.