

B0F768MDHL

# Curtis Stone 5-Quart Rechargeable Salad Spinner User Manual

Model: B0F768MDHL

## PRODUCT OVERVIEW

---

The Curtis Stone 5-Quart Rechargeable Salad Spinner is designed for efficient washing and drying of salad greens, fruits, vegetables, and even pasta or noodles. Its generous 5-quart capacity makes it suitable for family-sized portions. The unit features a simple one-button operation for ease of use and includes a rechargeable mechanism for convenience. This product is a factory-refurbished unit, ensuring quality and functionality.

## SAFETY INFORMATION

---

- Read all instructions before using the appliance.
- Keep the appliance away from water and other liquids. Do not immerse the motor unit in water.
- Ensure the charging port is dry before connecting the charging cable.
- Do not operate the appliance if it has been damaged in any way.
- Keep hands and utensils out of the bowl during operation.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Use only the charging cable provided with the unit.
- Unplug the charger from the power source when not in use and before cleaning.

## COMPONENTS

---

The Curtis Stone 5-Quart Rechargeable Salad Spinner consists of the following main components:

- **Outer Bowl:** The clear, large capacity bowl that collects water and can double as a serving bowl.
- **Inner Basket (Colander):** The perforated basket where greens or other foods are placed for washing and spinning.
- **Lid with Motor Unit:** The top cover that houses the rechargeable motor and control button.
- **Charging Cable:** USB cable for recharging the motor unit.



Image: Exploded view showing the outer bowl, inner basket, and lid with motor unit separated.



Image: All components of the salad spinner laid out: outer bowl, inner basket, lid with motor, and the spinner plate.

## SETUP

---

1. **Unpack:** Carefully remove all components from the packaging.
2. **Initial Charge:** Before first use, fully charge the motor unit. Connect the provided USB charging cable to the charging port on the lid and plug the other end into a compatible USB power source (e.g., wall adapter, computer USB port). The indicator lights on the lid will show charging status.
3. **Wash Components:** Wash the outer bowl and inner basket with warm, soapy water. Rinse thoroughly and dry completely before assembly. The lid with the motor unit should be wiped clean with a damp cloth; do not immerse it in water.
4. **Assemble:** Place the inner basket inside the outer bowl. Securely place the lid with the motor unit on top of the outer bowl, ensuring it is properly seated.



Image: The fully assembled Curtis Stone 5-Quart Rechargeable Salad Spinner, ready for use.

## OPERATING INSTRUCTIONS

---

1. **Prepare Food:** Place your washed salad greens, fruits, or vegetables into the inner basket. Do not overfill the basket; ensure there is enough space for the food to move freely during spinning.
2. **Assemble:** Place the inner basket into the outer bowl. Securely place the lid with the motor unit on top of the outer bowl. Ensure the lid is properly aligned and sealed.
3. **Start Spinning:** Press the power button on the top of the lid. The motor will activate, and the inner basket will begin to spin rapidly, using centrifugal force to remove excess water.
4. **Stop Spinning:** The spinner will typically run for a set cycle. To stop it manually, press the power button again.
5. **Remove Food:** Once spinning is complete, carefully remove the lid. Lift out the inner basket to retrieve your dried food. The water collected in the outer bowl can be discarded.
6. **Multipurpose Use:** The outer bowl can be used as a serving bowl for your salad or as a mixing bowl.



Image: A detailed view of the lid, highlighting the power button and battery indicator lights.

## MAINTENANCE AND CLEANING

---

- **After Each Use:** Disassemble the spinner.
- **Outer Bowl and Inner Basket:** These components are dishwasher safe (top rack recommended) or can be washed by hand with warm, soapy water. Rinse thoroughly and allow to air dry completely.
- **Lid with Motor Unit:** **DO NOT immerse the lid or motor unit in water.** Wipe the lid and motor unit clean with a damp cloth. For stubborn stains, use a mild detergent on the cloth. Ensure the charging port is dry before storing or recharging.
- **Storage:** Store the clean and dry salad spinner in a cool, dry place.

## TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Spinner does not turn on.	Battery is low or depleted.	Charge the motor unit fully using the provided USB cable.

Problem	Possible Cause	Solution
Spinner stops mid-cycle.	Overloaded basket or low battery.	Reduce the amount of food in the basket. Ensure the unit is fully charged.
Food is not drying effectively.	Basket is too full, or lid is not properly sealed.	Do not overfill the basket. Ensure the lid is securely placed and aligned. Run for an additional cycle if needed.
Loud noise during operation.	Lid not properly seated or unbalanced load.	Ensure the lid is securely and evenly placed on the bowl. Distribute food evenly in the basket.

## SPECIFICATIONS

---

**Product Dimensions:** 10 x 10 x 8.5 inches

**Item Weight:** 5 pounds

**Capacity:** 5 Quarts

**Power Source:** Rechargeable Battery (USB charging)

**Manufacturer:** Curtis Stone

**Model (ASIN):** B0F768MDHL

## WARRANTY AND SUPPORT

---

This Curtis Stone 5-Quart Rechargeable Salad Spinner (Renewed) comes with a **1 Year Refurbished Warranty**. For warranty claims, technical support, or further inquiries, please refer to the original retailer or the manufacturer's customer service channels. You may also visit the [product page on Amazon](#) for additional information or to contact the seller.



© 2024 Curtis Stone. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.