

[Manuals.plus](#) /

› [leejdn](#) /

› leejdn 71" Tall Arched Kitchen Pantry, Modern Fluted Wood Storage Cabinet, Model 601 Instruction Manual

leejdn 601

leejdn 71" Tall Arched Kitchen Pantry Instruction Manual

Model: 601

1. INTRODUCTION

This manual provides comprehensive instructions for the assembly, operation, maintenance, and troubleshooting of your leejdn 71" Tall Arched Kitchen Pantry, Model 601. Please read this manual thoroughly before assembly and use to ensure safe and correct operation. Keep this manual for future reference.



Image 1.1: The leejdn 71" Tall Arched Kitchen Pantry, Model 601, showcasing its design and storage capabilities.

2. SAFETY INFORMATION

WARNING: Failure to follow these safety instructions may result in serious injury or property damage.

- Always assemble the product on a soft, clean surface to prevent scratches.
- Ensure all parts are present and undamaged before beginning assembly. Do not use damaged parts.
- Do not overtighten screws during assembly, as this may damage the material.
- This cabinet **must** be secured to a wall using the provided anti-tip kit to prevent tipping, especially in homes with children or pets.
- Do not allow children to climb on or play with the cabinet.
- Distribute weight evenly on shelves to maintain stability.




ANTI-TIP KIT FOR ADDED SAFETY

Furniture can cause serious injury or death if tipped over; be sure to use the wall mounts included with the product to avoid the danger of tipping. If you don't install the anti-reverse device, you will be responsible for the consequences.



**Properly install
the anti-tip kit**

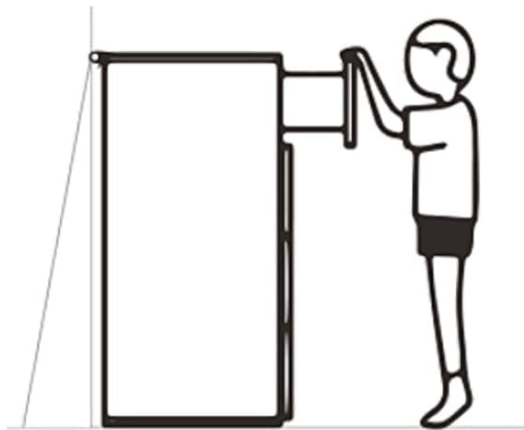

**The anti-tip kit is
not installed**

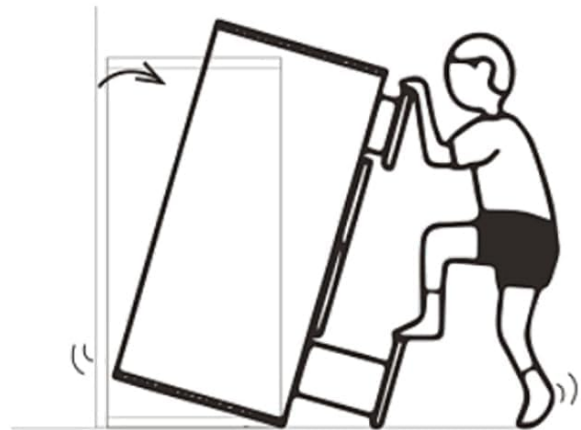


Image 2.1: Illustration of the anti-tip kit installation. Proper installation is crucial for safety.

3. PARTS LIST

Before assembly, verify that all components listed below are present. Refer to the included assembly diagram for visual identification of parts and hardware.

- Cabinet Panels (Top, Bottom, Sides, Back)
- Shelves (Fixed and Adjustable)
- Doors (Fluted design)
- Legs
- Hardware (Screws, dowels, hinges, handles, shelf pins)
- Anti-Tip Kit (Brackets, screws, wall anchors, strap)

4. SETUP AND ASSEMBLY

Assembly is designed to be straightforward. Follow the numbered steps in the separate assembly manual provided in the packaging. The general steps are outlined below:

1. **Unpack and Identify:** Carefully unpack all components and lay them out on a clean, soft surface. Identify each part using the provided parts list and diagrams.
2. **Assemble Base and Side Panels:** Attach the cabinet legs to the bottom panel. Connect the side panels to the base and back panel according to the instructions.
3. **Install Shelves:** Insert fixed shelves into their designated slots. For adjustable shelves, use the provided shelf pins to set them at your desired height.
4. **Attach Doors:** Mount the hinges to the doors and then attach the doors to the cabinet frame. Adjust hinges as needed for proper alignment.
5. **Install Handles:** Secure the handles to the cabinet doors.
6. **Secure Anti-Tip Kit:** This is a critical safety step. Attach the anti-tip bracket to the top rear of the cabinet and secure it to a wall stud using the appropriate hardware. Ensure the cabinet is stable and level.

For detailed visual instructions, refer to the comprehensive instruction manual included in your product packaging.

5. OPERATION AND USAGE

The leejdn Arched Kitchen Pantry offers versatile storage solutions for various rooms.

5.1 Storage Features

- **Open Shelves:** The upper section features open shelves, suitable for displaying decorative items, cookbooks, or frequently accessed kitchen essentials.
- **Adjustable Hidden Shelf:** Behind the fluted doors, an adjustable shelf allows for customized storage of larger items like cutting boards, baking sheets, or small appliances.
- **Concealed Storage:** The double-door cabinet provides discreet storage, protecting items from dust and maintaining a tidy appearance.



Image 5.1: The pantry's extra-large storage space, featuring three-tier open shelves and a double-door cabinet.

71" TALL ARCHED PANTRY

It can be used as a kitchen pantry, dining room food cabinet, or a bookshelf in the living room and bedroom



Image 5.2: Examples of the pantry's versatile use in different home environments.

6. MAINTENANCE

6.1 Cleaning

- Wipe surfaces with a soft, damp cloth.
- Avoid using harsh chemicals, abrasive cleaners, or furniture polish that may damage the finish.
- Promptly wipe up spills to prevent staining or water damage.

6.2 General Care

- Periodically check all screws and fasteners to ensure they remain tight. Retighten if necessary.
- Avoid placing hot items directly on the surface; use coasters or protective pads.
- Keep the cabinet away from direct sunlight and excessive moisture to prevent warping or fading.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Cabinet is wobbly or unstable.	- Screws are loose. - Uneven floor. - Anti-tip kit not installed or improperly installed.	- Tighten all assembly screws. - Adjust the cabinet's position or use shims under the legs to level it. - Ensure the anti-tip kit is correctly installed and secured to a wall stud.
Doors do not align or close properly.	- Hinges are loose or misaligned. - Cabinet frame is not square.	- Adjust the hinge screws to align the doors. Refer to the assembly manual for hinge adjustment details. - Check that all frame connections are tight and the cabinet is level.
Parts do not fit together during assembly.	- Incorrect orientation of parts. - Manufacturing defect.	- Double-check the assembly manual diagrams for correct part orientation. - If parts still do not fit, contact customer support.

8. SPECIFICATIONS

Brand:	leejdn
Model Name:	601
Color:	Oak
Product Dimensions (D x W x H):	15.35"D x 30.7"W x 71.26"H
Item Weight:	60 Pounds
Material:	Engineered Wood
Number of Shelves:	3 (including 1 adjustable hidden shelf)
Mounting Type:	Floor Mount (with wall anchor for anti-tip)
Assembly Required:	Yes



PRODUCT DIMENSIONS

Please allow a 1 – 3 cm difference
due to manual measurement
and varying measuring tools.



Arched
storage
cabinet

Image 8.1: Product dimensions for the leejdn Arched Storage Cabinet.

9. CUSTOMER SUPPORT

If you encounter any issues during assembly or use, or if you have questions regarding your leejdn 71" Tall Arched Kitchen Pantry, please contact our customer support team. Refer to the contact information provided in your product packaging or on the retailer's website.

For information on protection plans, please refer to the options available at the point of purchase or contact your retailer.

© 2025 leejdn. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question