

- Manuals.plus /
- > [Juboos](#) /
- > Juboos Kids Analog Watch Instruction Manual

Juboos 24606

Juboos Kids Analog Watch Instruction Manual

Model: 24606 | Brand: Juboos

PRODUCT OVERVIEW

The Juboos Kids Analog Watch is designed to help children aged 4-12 learn to tell time effectively. Featuring an adorable cat design and clear, colorful numerals, this watch combines fashion with educational functionality. It is built with durable materials and offers 3ATM water resistance for daily use.





Image: Front view of the Juboos Kids Analog Watch in blue, featuring a cat-ear design and colorful numbers on the dial.

SETTING UP YOUR WATCH

Your Juboos Kids Analog Watch comes with a pre-installed battery. To set the time, follow these simple steps:

1. **Pull the Crown:** Locate the small knob (crown) on the right side of the watch case. Gently pull it outwards until you feel a click. The second hand will stop, indicating the watch is in time-setting mode.
2. **Adjust the Time:** Rotate the crown clockwise or counter-clockwise to move the hour and minute hands to the correct time.
3. **Push the Crown Back:** Once the time is set, push the crown back into its original position. The second hand will resume movement, and the watch will start keeping time.

PRODUCT DETAILS



Image: A close-up view of the watch highlighting the crown for time adjustment, the stainless steel back cover, and the resin strap.

USING YOUR WATCH

The Juboos Kids Analog Watch is designed for easy time learning with its clear and colorful dial. Here's how to read the time:

- **Hour Hand:** The shorter hand points to the hour. The watch features 12-hour colorful numerals for easy identification.
- **Minute Hand:** The longer hand points to the minutes. The outer ring of the dial has a 60-minute scale to help accurately read the minutes.
- **Second Hand:** The thin, sweeping hand indicates the seconds.
- **24-Hour Numerals:** Smaller numerals inside the main hour markers provide a reference for 24-hour time (military time).

EASY LEARNING TIME

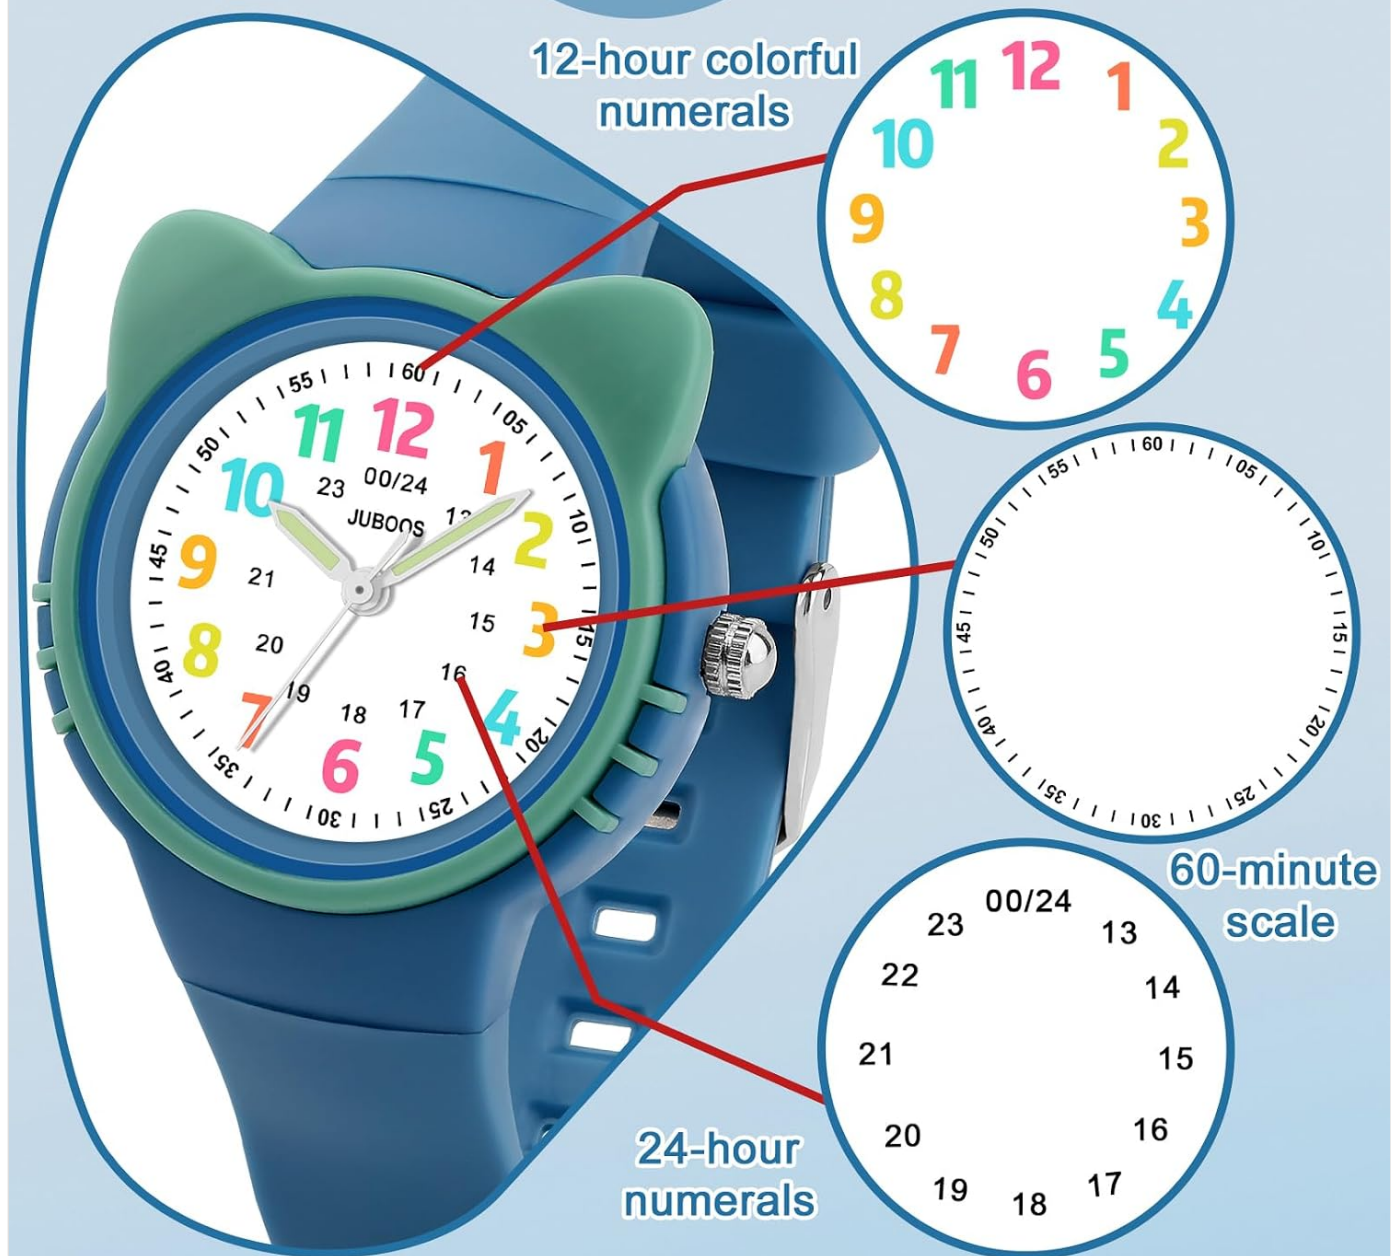


Image: A visual guide demonstrating how to read the hour, minute, and 24-hour numerals on the watch face.

The watch is suitable for various daily activities, encouraging children to develop a sense of time.



Image: A young boy wearing the Juboos watch, demonstrating its comfortable fit for daily wear.

Your browser does not support the video tag.

Video: This video demonstrates the Juboos children's watch in various settings, including its water resistance and how it looks on a child's wrist during play.

CARE AND MAINTENANCE

To ensure the longevity of your Juboos Kids Analog Watch, please follow these care instructions:

- **Water Resistance:** The watch is 3ATM (30 meters / 98 feet) water resistant, suitable for daily use such as hand washing and exposure to rain.
- **Important Water Resistance Note:** Do NOT press any buttons or pull the crown while the watch is in water. Avoid using the watch in hot water, during bathing, or swimming, as high temperatures and prolonged immersion can compromise the water resistance.
- **Cleaning:** Wipe the watch case and strap with a soft, damp cloth. Avoid using harsh chemicals or abrasive materials.
- **Storage:** When not in use, store the watch in a dry place away from direct sunlight and extreme temperatures.



Image: A graphic illustrating the 30M/98FT water resistance, suitable for handwashing, rainwater, and sweat, but warning against high temperatures.

TROUBLESHOOTING

If you encounter any issues with your Juboos Kids Analog Watch, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Watch not running or keeping time accurately.	Battery depleted or crown not fully pushed in.	Ensure the crown is fully pushed in. If the issue persists, the battery may need replacement. Contact a professional watch repair service for battery replacement.
Condensation inside the watch face.	Exposure to extreme temperature changes or water ingress due to crown/button manipulation underwater.	Stop using the watch immediately. Place it in a dry, warm place (not hot) to allow moisture to evaporate. If condensation persists, seek professional repair. Avoid exposing the watch to hot water or pressing buttons underwater.

Problem	Possible Cause	Solution
Strap discomfort or irritation.	Strap too tight or skin sensitivity.	Adjust the strap for a comfortable fit. Clean the strap regularly to prevent buildup of dirt or sweat. If irritation continues, discontinue use.

PRODUCT SPECIFICATIONS

- **Model Number:** 24606
- **Dial Size:** 1.37 inches (3.5 cm)
- **Case Thickness:** 0.5 inches (1.3 cm)
- **Strap Length:** 8.85 inches (22.5 cm)
- **Watch Bandwidth:** 0.59 inches (1.5 cm)
- **Watch Weight:** 0.06 lbs (26g)
- **Water Resistance:** 3ATM (30 meters / 98 feet)
- **Movement:** Imported Quartz Movement
- **Battery:** 1 C battery (included)
- **Mirror Material:** Acrylic Glass
- **Case Material:** Resin
- **Strap Material:** Resin
- **Back Cover & Clasp Material:** Stainless Steel
- **Suitable Age:** 4-12 years old

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0F79LPNJN>

More documents and user manuals: **<https://manuals.plus/>**