



Manuals.plus /

- › OSTBA /
- › OSTBA Sandwich Maker ABS07 Instruction Manual

OSTBA ABS07

OSTBA Sandwich Maker ABS07 Instruction Manual

Model: ABS07 | Brand: OSTBA

[Instructions](#) [Features](#) [Setup](#) [Operation](#) [Introduction](#) [Safety](#) [Maintenance & Support](#) [Troubleshooting](#) [Specifications](#) [Warranty](#)

1. INTRODUCTION

Thank you for purchasing the OSTBA Sandwich Maker ABS07. This appliance is designed to quickly and efficiently prepare delicious grilled sandwiches with minimal effort. Its compact design and non-stick plates make it a convenient addition to any kitchen. Please read this manual thoroughly before use to ensure safe and optimal operation.



Image: The OSTBA Sandwich Maker ABS07, shown closed with a perfectly toasted sandwich inside, highlighting its compact form factor.

2. IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical hazards, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may

cause injuries.

- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- To disconnect, remove plug from wall outlet.
- Do not use appliance for other than intended use.

3. PRODUCT FEATURES

- **Innovative Triangle Plates Design:** The ABS07 features unique triangle plates that divide sandwiches into sealed triangular sections, effectively containing fillings and preventing spillage.
- **High-Performance 750W Heating:** This sandwich maker heats up rapidly, ensuring even and consistent cooking for perfectly toasted sandwiches.
- **User-Friendly & Safe Operation:** Equipped with indicator lights and a cool-touch handle for convenience and safety during use.
- **Effortless Cleaning & Compact Storage:** Durable non-stick plates facilitate easy food release and cleanup. The integrated cord wrap storage design helps maintain a tidy kitchen space.
- **Stylish & Practical Design:** The sleek black finish combines aesthetic appeal with functional design, offering a compact and elegant solution for your kitchen.



INDICATOR LIGHT

Know when the power is on and the plates are ready for cooking.

LOCKING LATCH

Lock in flavor & heat with quick release latch.

COOL TOUCH HANDLE

Prevents burns and keeps you safe.

Image: Detail view of the sandwich maker's top, highlighting the red and green indicator lights and the cool-touch handle for safe operation.

750W QUICK HEATING

Fast & steady heating for perfectly toasted sandwiches in minutes.



Image: The sandwich maker open, showing the internal heating elements glowing red, indicating its rapid 750W heating capability.

4. SETUP

1. **Unpack:** Carefully remove the sandwich maker and all packaging materials.
2. **Initial Cleaning:** Before first use, wipe the non-stick cooking plates with a damp cloth or sponge. Dry thoroughly.
3. **Placement:** Place the appliance on a stable, heat-resistant, and dry surface. Ensure there is adequate ventilation around the unit.
4. **Power Connection:** Unwind the power cord from the cord wrap on the base of the unit and plug it into a standard 120V AC electrical outlet.

WIRE WRAP STORAGE

Power cord storage and vertical placement can save space.



Image: The underside of the sandwich maker, illustrating the convenient wire wrap storage for the power cord.

5. OPERATING INSTRUCTIONS

- 1. Preheating:** Close the sandwich maker and plug it into the power outlet. The red indicator light will illuminate, signaling that the appliance is heating. Once the green indicator light turns off, the sandwich maker has reached its optimal cooking temperature and is ready for use.
- 2. Prepare Ingredients:** While the unit is preheating, prepare your sandwich ingredients. For best results, use standard-sized bread slices.
- 3. Cooking:**
 - Open the sandwich maker using the cool-touch handle.
 - Lightly grease the non-stick plates with cooking spray or butter, if desired, to prevent sticking and enhance browning.
 - Place one slice of bread on each triangular plate. Add your desired fillings (cheese, ham, vegetables, etc.) onto one of the bread slices.
 - Place the second slice of bread on top of the fillings.
 - Carefully close the lid and secure the locking latch. Do not force the lid shut if the

sandwich is too thick.

- Cook for approximately 2-5 minutes, or until the sandwich is golden brown and the cheese is melted. Cooking time may vary based on ingredients and desired crispness.
4. **Removing the Sandwich:** Once cooked, open the lid and carefully remove the hot sandwiches using a heat-resistant plastic or wooden spatula. Avoid using metal utensils, as they can damage the non-stick coating.
 5. **Cool Down:** Unplug the appliance from the outlet and allow it to cool completely before cleaning or storing.

Your browser does not support the video tag.

Video: Official product video demonstrating the features and operation of the OSTBA Sandwich Maker, including preparation and cooking of a sandwich.

6. CLEANING AND MAINTENANCE

1. **Always Unplug:** Ensure the sandwich maker is unplugged and completely cool before cleaning.
2. **Clean Plates:** Wipe the non-stick cooking plates with a soft, damp cloth or sponge. For stubborn food residue, use a small amount of mild dish soap. Avoid abrasive cleaners or scouring pads, as these can damage the non-stick surface.
3. **Exterior Cleaning:** Wipe the exterior of the appliance with a soft, damp cloth. Do not immerse the appliance in water or any other liquid.
4. **Storage:** Once clean and dry, store the sandwich maker in a vertical position to save space. Wrap the power cord around the designated cord wrap on the base.

NON-STICK PLATES

Create tasty snacks on an easy-to-clean surface.



Image: A hand wiping the non-stick plates of the open sandwich maker with a cloth, demonstrating easy cleaning.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not heat up.	Not plugged in, or power outlet is not working.	Ensure the appliance is securely plugged into a working electrical outlet. Check the circuit breaker.
Food sticks to the plates.	Plates not properly greased, or food residue from previous use.	Lightly grease the non-stick plates with cooking spray or butter before each use. Ensure plates are clean.
Sandwich is not evenly toasted.	Uneven placement of bread/fillings, or insufficient preheating.	Ensure bread and fillings are evenly distributed. Allow the appliance to fully preheat until the green indicator light turns off.
Smoke or unusual odor during first use.	Protective oils burning off.	This is normal during initial use. Ensure good ventilation. If smoke persists, unplug and contact support.

8. SPECIFICATIONS

- **Model:** ABS07
- **Brand:** OSTBA
- **Power:** 750 Watts
- **Voltage:** 120 Volts
- **Material:** Aluminum (plates)
- **Special Features:** Cool Touch, Lightweight, Non-Stick Coating
- **Product Dimensions:** 8.86"D x 3.35"W x 8.58"H
- **Item Weight:** 2.5 Pounds



Image: The sandwich maker shown with its key dimensions (depth, width, height) indicated in both inches and centimeters.

9. WARRANTY & SUPPORT

For warranty information or customer support, please refer to the documentation included with your purchase or contact OSTBA customer service directly. Keep your purchase receipt as proof of purchase.

Manufacturer: OSTBA APPLIANCE INC