

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Varmilo](#) /

› [Varmilo x Ducky Miya Pro Panda French Layout 65% White LED Mechanical Keyboard User Manual](#)

## Varmilo Miya Pro Panda

# Varmilo x Ducky Miya Pro Panda French Layout 65% White LED Mechanical Keyboard

## USER MANUAL

### Introduction

This manual provides comprehensive instructions for the Varmilo x Ducky Miya Pro Panda French AZERTY Layout 65% White LED Mechanical Keyboard. It covers setup, operation, maintenance, and troubleshooting to ensure optimal performance and longevity of your device. Please read this manual thoroughly before using the keyboard.



Image: The Varmilo x Ducky Miya Pro Panda mechanical keyboard, showcasing its French AZERTY layout, white keycaps, green accent keys, and a spacebar with a panda design.

### Setup

#### 1. Unboxing and Package Contents

Carefully remove all items from the packaging. Verify that all components are present:

- Varmilo x Ducky Miya Pro Panda Mechanical Keyboard
- USB-C to USB-A Cable
- Desk Mat
- Panda Plushie

- User Manual (this document)



Image: The Varmilo x Ducky Miya Pro Panda keyboard's packaging, a desk mat with Varmilo branding, and a small panda plushie, all included with the keyboard.

## 2. Connecting the Keyboard

1. Locate the USB-C port on the back of the keyboard.
2. Connect the USB-C end of the provided cable to the keyboard.
3. Connect the USB-A end of the cable to an available USB port on your computer.
4. The keyboard is plug-and-play and should be automatically recognized by your operating system.

## 3. Adjusting Keyboard Height

The keyboard features two-stage height adjustable feet located on the underside. Flip them out to achieve your preferred typing angle.

## Operating Instructions

### 1. Basic Keyboard Functions

The Varmilo x Ducky Miya Pro Panda keyboard operates as a standard mechanical keyboard with a French AZERTY layout. All keys function according to their printed legends.

### 2. White LED Backlight Control

The keyboard features a white LED backlight. Specific key combinations are used to control its brightness and effects. Refer to the keyboard's function layer legends (often printed on the front of keycaps or in a separate quick guide) for detailed instructions on backlight adjustments. Common controls include:

- **Fn + Arrow Keys:** Adjust brightness or change lighting effects.
- **Fn + Specific Keys (e.g., F10, F11, F12):** Toggle backlight on/off or cycle through modes.

*Note: Exact key combinations may vary. Consult the quick start guide if provided with your keyboard for precise instructions.*

### 3. Function Layer (Fn Key)

The "Fn" key (Function key) allows access to secondary functions printed on certain keycaps. Hold down the "Fn" key and press the desired key to activate its secondary function, such as media controls or volume adjustments.

## Maintenance

### 1. Cleaning the Keyboard

- **General Cleaning:** Use a soft, lint-free cloth slightly dampened with water or a mild cleaning solution to wipe the keycaps and casing. Avoid excessive moisture.
- **Dust Removal:** Use compressed air to remove dust and debris from between the keycaps.
- **Deep Cleaning:** For thorough cleaning, keycaps can be carefully removed using a keycap puller (not included). Clean the keycaps separately and wipe the switch stems. Ensure all parts are completely dry before reassembling.

### 2. Keycap Care

The keyboard features durable Dye Sub PBT keycaps. Avoid using harsh chemicals or abrasive materials, as these can damage the keycap legends and surface finish.

## Troubleshooting

If you encounter issues with your Varmilo x Ducky Miya Pro Panda keyboard, refer to the following common solutions:

- **Keyboard Not Responding:**
  - Ensure the USB cable is securely connected to both the keyboard and the computer.
  - Try connecting the keyboard to a different USB port on your computer.
  - Test the keyboard on another computer to rule out a system-specific issue.
  - Restart your computer.
- **Backlight Not Working:**
  - Check if the backlight is simply turned off. Use the Fn key combinations to toggle it on or increase brightness.
  - Ensure the keyboard is receiving sufficient power from the USB port.
- **Incorrect Key Output (Layout Issues):**
  - Verify that your operating system's keyboard language setting is set to "French (AZERTY)" or the appropriate French layout. Incorrect software settings can cause keys to produce unexpected characters.

If these steps do not resolve the issue, please contact customer support for further assistance.

## Specifications

Brand	Varmilo
-------	---------

<b>Model</b>	Miya Pro Panda
<b>Layout</b>	65% French AZERTY
<b>Backlighting</b>	White LED (Single Color)
<b>Switch Type</b>	Cherry MX Brown (as per product description)
<b>Keycap Material</b>	Dye Sub PBT (Polybutylene Terephthalate)
<b>Connectivity</b>	USB-C (Wired)
<b>Compatible Devices</b>	PC
<b>Included Components</b>	Desk mat, Panda plushie

## Warranty and Support

### 1. Warranty Information

Varmilo products typically come with a manufacturer's warranty covering defects in materials and workmanship. The specific duration and terms of the warranty may vary by region and retailer. Please retain your proof of purchase for warranty claims.

### 2. Customer Support

For technical assistance, warranty claims, or further inquiries, please contact the retailer where you purchased the product or visit the official Varmilo website for support contact information. When contacting support, please have your product model and purchase details ready.

You can often find support resources and contact details on the official Varmilo website: [www.varmilo.com](http://www.varmilo.com)

© 2025 Varmilo. All rights reserved.

This manual is subject to change without notice.