

[manuals.plus](#) /› [Morphy Richards](#) /› [Morphy Richards 30CGD Dehydro 30L Convection Microwave Oven User Manual](#)

## Morphy Richards 30CGD

# Morphy Richards 30CGD Dehydro 30L Convection Microwave Oven User Manual

**MODEL: 30CGD**

## 1. Introduction

This manual provides essential instructions for the safe and efficient operation of your Morphy Richards 30CGD Dehydro 30L Convection Microwave Oven. Please read it thoroughly before use and retain it for future reference. This appliance is designed for household use only.

## 2. Important Safety Instructions

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, injury to persons, or exposure to excessive microwave energy.

- Read all instructions before using the appliance.
- Ensure the appliance is properly grounded.
- Do not operate the oven empty.
- Close supervision is necessary when the appliance is used by or near children.
- Do not heat liquids or other foods in sealed containers as they are liable to explode.
- Do not use corrosive chemicals or vapors in this appliance.
- Do not store or use this appliance outdoors.
- Do not immerse the cord or plug in water.
- If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person.

## 3. Product Overview

Your Morphy Richards 30CGD Dehydro oven is a versatile kitchen appliance combining microwave, convection, grill, and dehydrator functions. It features a 30-liter capacity and an anti-bacterial, anti-fungal stainless steel cavity.



**Figure 1:** The Morphy Richards 30CGD Dehydro 30L Convection Microwave Oven. This image displays the sleek black exterior with a glass door and stainless steel handle, showcasing the overall design of the appliance.

# Morphy Richards 30CGD Dehydro Microwave



**Figure 2:** The Morphy Richards 30CGD Dehydro Microwave Oven displayed alongside its included accessories. This image shows the oven, a glass turntable, a roller ring, a baking tray, and a wire grill rack, illustrating the complete package.


## 4. Installation and Setup

### 4.1 Unpacking

Carefully remove all packaging materials from the oven and its accessories. Inspect the oven for any signs of damage. If any damage is found, do not operate the oven and contact customer support.

### 4.2 Placement

Place the oven on a stable, level, heat-resistant surface that is strong enough to support its weight. Ensure there is adequate ventilation around the oven to allow for proper heat dissipation.

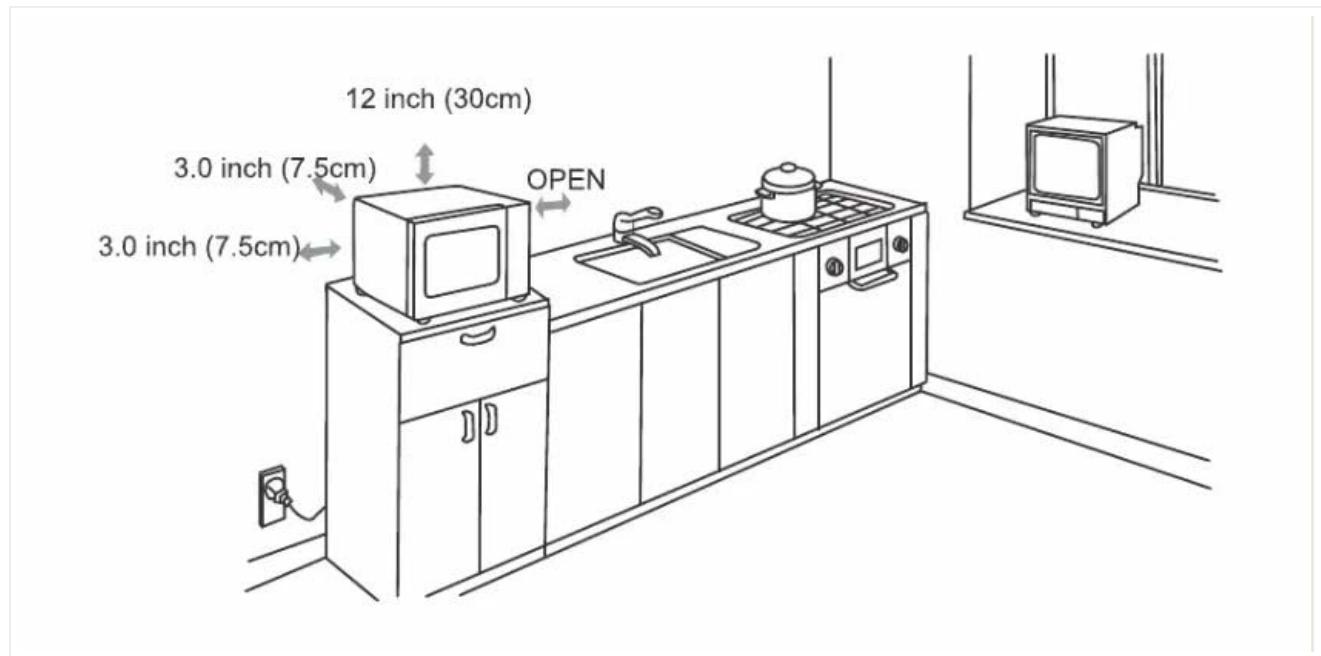

**Figure 3:** An illustration demonstrating the recommended clearance for microwave oven installation. This diagram shows a minimum of 3.0 inches (7.5 cm) clearance on the sides and back, and 12 inches (30 cm) above the oven for proper ventilation.

- Maintain a minimum of 3.0 inches (7.5 cm) clearance on the sides and back.
- Ensure at least 12 inches (30 cm) of free space above the oven.
- Do not block any ventilation openings.

### 4.3 Electrical Connection

Plug the oven into a properly installed and grounded electrical outlet. Ensure the voltage and frequency match the specifications listed on the appliance rating label.

## 5. Operating Your Oven

### 5.1 Control Panel Overview

The control panel features various buttons and a rotary dial for selecting functions and adjusting settings.



**Figure 4:** A detailed view of the control panel for the Morphy Richards 30CGD Dehydro Microwave Oven. This image highlights the digital display, function buttons (e.g., Microwave, Grill, Convection, Dehydro, Auto Menu), and the rotary dial for setting time and power.

### 5.2 Basic Microwave Operation

1. Place food in a microwave-safe container on the turntable.
2. Close the oven door securely.
3. Press the 'Microwave' button.
4. Use the rotary dial to set the desired cooking time and power level.
5. Press 'Start' to begin cooking.

### 5.3 Convection Cooking

The convection function allows for baking and roasting with even heat distribution.

1. Place food on the baking tray or wire grill rack.
2. Press the 'Convection' button.
3. Set the desired temperature and cooking time using the rotary dial.
4. Press 'Start'. The oven will preheat to the set temperature before cooking begins.

## 5.4 Grill Function

Use the grill function for browning and crisping food.

1. Place food on the wire grill rack.
2. Press the 'Grill' button.
3. Set the desired grilling time.
4. Press 'Start'.

## 5.5 Dehydrator Function

The built-in dehydrator allows you to preserve fruits, vegetables, and herbs.

1. Prepare food for dehydration (e.g., slice fruits thinly).
2. Arrange food on the baking tray or suitable racks.
3. Press the 'Dehydro' button.
4. Set the desired temperature and dehydration time.
5. Press 'Start'.

## 5.6 AutoCook Menus

The oven features 220 pre-programmed AutoCook menus for various Indian and international recipes. Refer to the recipe guide (if included) for specific menu numbers and preparation instructions.

1. Place the food in the appropriate cookware.
2. Press the 'Auto Menu' button.
3. Use the rotary dial to select the desired menu number.
4. Press 'Start'. The oven will automatically set the cooking time and power.



**Figure 5:** The Morphy Richards 30CGD Dehydro Microwave Oven surrounded by a variety of dishes, illustrating the diverse cooking capabilities, including those achievable with the 220 AutoCook menus.

## 6. Care and Maintenance

### 6.1 Cleaning the Interior

The oven features an anti-bacterial and anti-fungal cavity for enhanced hygiene. To clean:

- Unplug the oven before cleaning.
- Wipe the interior with a damp cloth and mild detergent after each use.
- For stubborn food residues, place a bowl of water with lemon juice inside and microwave for a few minutes to loosen the grime, then wipe clean.
- Do not use abrasive cleaners or metal scouring pads.

### 6.2 Cleaning the Exterior

Wipe the exterior surfaces with a soft, damp cloth. Avoid using harsh chemicals that may damage the finish.

### 6.3 Turntable and Accessories

The glass turntable, roller ring, baking tray, and wire grill rack can be washed in warm, soapy water or in a dishwasher.

## 7. Troubleshooting

If you encounter issues with your oven, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Oven does not start	Power cord not plugged in; Door not closed properly; Fuse blown or circuit breaker tripped.	Ensure plug is secure; Close door firmly; Check household fuse/circuit breaker.
Food not cooking evenly	Food not stirred or rearranged; Incorrect power level/time.	Stir or rearrange food during cooking; Adjust power level and time as needed.
Unusual noise during operation	Turntable not correctly seated; Foreign object in cavity.	Ensure turntable and roller ring are correctly positioned; Check for and remove any obstructions.
Display shows error code	Internal malfunction.	Unplug the oven for a few minutes, then plug it back in. If the error persists, contact customer support.

## 8. Technical Specifications

Feature	Specification
Brand	Morphy Richards
Model	30CGD

Feature	Specification
Capacity	30 Litres
Installation Type	Countertop
Oven Cooking Mode	Convection
Microwave Power	1400W
Convection Power	2200W
Grill Power	1250W
Special Features	220 AutoCook Menus, Anti-Bacterial & Anti-Fungal Cavity, Built-in Dehydrator
Defrost System	Manual Defrost
Material	Stainless Steel, Glass
Item Weight	10 kg 700 g
Item Dimensions (LxWxH)	22.3 x 36.2 x 35.4 Centimeters

## 9. Warranty and Support

### 9.1 Product Warranty

Your Morphy Richards 30CGD Dehydro Convection Microwave Oven is backed by a **2-year warranty** on the product from the date of purchase. Please retain your purchase receipt for warranty claims.

### 9.2 Customer Support

For any queries, service requests, or technical assistance, please contact the customer support of Bajaj Electricals Limited, the importer and marketer of Morphy Richards products in India. Refer to your warranty card or the official Morphy Richards website for the most current contact information.

 
### Related Documents - 30CGD

 <p>Microwave Oven INSTRUCTION MANUAL Model: MRMWO34GC</p> <p>Read these instructions carefully before using your microwave oven. STORE THESE INSTRUCTIONS CAREFULLY</p> <p><a href="http://www.morphyrichards.com.au">www.morphyrichards.com.au</a></p>	<p><a href="#"><b>Morphy Richards MRMWO34GC Microwave Oven Instruction Manual</b></a></p> <p>Comprehensive instruction manual for the Morphy Richards MRMWO34GC microwave oven, detailing safety precautions, specifications, operation modes, cleaning, and troubleshooting.</p>
	<p><a href="#"><b>Morphy Richards Steam Iron 2200W User Manual and Safety Guide</b></a></p> <p>Comprehensive user manual for the Morphy Richards Steam Iron 2200W, including safety instructions, operating guide, maintenance tips, troubleshooting, and warranty information.</p>
 <p>Smart Ideas For Your Life INSTRUCTION MANUAL 20 LITRE DIGITAL MICROWAVE</p> <p>Art. No. 10899952/P70H201EL-ZWA EAN: 800124451131 INDOOR HOUSEHOLD USE ONLY</p> <p>Please read these instructions carefully before installing and operating the oven.</p>	<p><a href="#"><b>Morphy Richards 20 Litre Digital Microwave Instruction Manual</b></a></p> <p>Comprehensive instruction manual for the Morphy Richards 20 Litre Digital Microwave (Model: 10899952). Covers safety, installation, operation, cooking, specifications, and care.</p>
 <p>Smart Ideas For Your Life INSTRUCTION MANUAL 30 LITRE DIGITAL MICROWAVE</p> <p>Art. No. 10899953/P70H301EL-ZJ3 EAN: 800124451192 INDOOR HOUSEHOLD USE ONLY</p> <p>Please read these instructions carefully before installing and operating the oven.</p>	<p><a href="#"><b>Morphy Richards 30 Litre Digital Microwave Instruction Manual - Model 10899953</b></a></p> <p>User manual for the Morphy Richards 30 Litre Digital Microwave (Model 10899953). Learn about safety, installation, operation, cooking functions, cleaning, and care for your appliance.</p>
	<p><a href="#"><b>Morphy Richards Steam Iron 2200W - User Manual and Warranty</b></a></p> <p>Comprehensive user manual and warranty information for the Morphy Richards Steam Iron 2200W, including safety instructions, operating guide, care, and troubleshooting.</p>

**morphy richards** Smart Ideas for Your Life



**INSTRUCTION MANUAL**



1.75 (1.78) 0.652: \$9  
Art. No.1089854/P90N30EL-ZWA  
EAN: 600125441308

INDOOR HOUSEHOLD USE ONLY

Please read these instructions carefully before installing and operating the oven.

## [\*\*Morphy Richards P90N30EL-ZWA Microwave Oven Instruction Manual\*\*](#)

User manual for the Morphy Richards P90N30EL-ZWA microwave oven, detailing safety precautions, installation, operation, cooking functions, and maintenance.