

Silonn Countertop Dishwasher machine

Silonn Portable Countertop Dishwasher User Manual

Model: Countertop Dishwasher machine

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Silonn Portable Countertop Dishwasher. Please read these instructions thoroughly before using the appliance and retain them for future reference. This compact dishwasher is designed for convenience in small living spaces, offering multiple wash programs and dual water supply options.

2. SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury.

- Ensure the dishwasher is properly grounded.
- Do not operate the dishwasher if the power cord or plug is damaged.
- Keep children away from the dishwasher during operation.
- Use only detergents and rinse aids specifically designed for dishwashers.
- Do not immerse the appliance, cord, or plug in water or other liquids.
- Avoid opening the door during a wash cycle, especially during the hot water phase.
- Unplug the dishwasher before cleaning or performing maintenance.

3. WHAT'S IN THE BOX

Verify that all components are present upon unpacking your Silonn Portable Countertop Dishwasher:

- Silonn Portable Countertop Dishwasher Unit
- Cutlery Basket
- Drain Hose
- Inlet Hose
- Power Cord
- User Manual



Image: All components included in the Silonn Portable Countertop Dishwasher package.

4. PRODUCT OVERVIEW AND FEATURES

The Silonn Portable Countertop Dishwasher is designed for efficient and convenient dish cleaning in various settings.

Key Features:

- **7 Wash Programs:** Includes Intensive (167°F), Babycare (167°F), ECO, Rapid (35-min cycle), Normal, Glass, and Fruit wash for diverse cleaning needs. High-temperature options effectively remove grease and dried food.
- **Compact Size, Large Capacity:** Measuring 16.9"W x 17.7"D x 18.1"H, it accommodates 4 place settings (up to 54 pieces), including 10" dinner plates, suitable for 3-4 person households.
- **360° Triple Jet System:** Three powerful jets provide comprehensive 360° coverage, ensuring thorough cleaning and stain-free results.
- **Dual Water Supply:** Offers manual top-fill (5L tank) for portability or direct connection to a faucet using the included hose and 3-way valve.
- **PTC Turbo Drying & Odor-Free Storage:** Utilizes PTC hot air and dual fans for 50% faster drying and anti-condensation technology, allowing dishes to be stored inside.



Image: The Silonn Portable Countertop Dishwasher in a kitchen setting.

7 WASH PROGRAMS

Customize washing for every cycle



Intensive
(167°F, 109min)



Babycare
(167°F, 109min)



ECO
(162°F, 60min)



Rapid
(162°F, 35min)



Normal
(131°F, 205min)



Glass
(140°F, 70min)



Fruit
(25min)



Image: Dimensions of the Silonn Portable Countertop Dishwasher.

5. SETUP

Placement:

Place the dishwasher on a stable, level countertop near a power outlet and a water source (if using direct connection). Ensure adequate space for opening the door and ventilation.

Water Supply Options:

Your Silonn dishwasher offers two methods for water supply:

1. **Manual Fill:** Open the top water inlet cover and pour water directly into the 5-liter tank using a pitcher until the indicator signals full. This method requires no plumbing installation.
2. **Automatic Connection:** Connect the inlet hose to the dishwasher and then to a faucet using the provided 3-way valve. Ensure all connections are secure to prevent leaks.

POWERFUL WASH FROM EVERY ANGLE

3 JET
Cleaning System

360°
Full Coverage



Image: Manual water filling via the top port.



Image: Illustration of dual water supply options.

Drainage:

Connect the drain hose to the dishwasher and direct the other end into a sink or a bucket. Ensure the hose is not kinked and allows for proper water flow.

6. OPERATING INSTRUCTIONS

Loading Dishes:

Arrange dishes in the basket, ensuring they do not block the spray arms. Place larger items at the back and sides, and smaller items or cutlery in the designated basket. Avoid overcrowding for optimal cleaning.



COMPACT SIZE, LARGE CAPACITY

Holds up to 4 full place settings
for 3-4 people



9x Plates



4x Cups



12x Spoons



4x Glasses



5x Bowls



12x Forks



4x Knives

Image: Properly loaded dishwasher interior.

Adding Detergent and Rinse Aid:

Add the recommended amount of dishwasher detergent to the dispenser. If using, fill the rinse aid dispenser according to the manufacturer's instructions.

Selecting a Wash Program:

Use the control panel to select one of the 7 available wash programs:

- **Intensive (167°F, 109 min):** For heavily soiled dishes and pots.
- **Babycare (167°F, 109 min):** High-temperature wash for baby bottles and items requiring sterilization.
- **ECO (162°F, 60 min):** Energy-efficient cycle for normal loads.
- **Rapid (162°F, 35 min):** Quick wash for lightly soiled dishes.
- **Normal (131°F, 205 min):** Standard cycle for everyday dishware.
- **Glass (140°F, 70 min):** Gentle wash for delicate glassware.
- **Fruit (25 min):** For washing fruits and vegetables.



Image: Overview of the 7 wash programs.

Starting a Cycle:

Close the dishwasher door securely. Press the Power button, then select your desired program. Press the Start/Pause button to begin the cycle.

Drying Function:

The dishwasher features PTC Turbo Drying with hot air and dual fans for efficient drying. This function activates automatically after most wash cycles.

INTENSIVE WASH

High-heat deep cleaning for baby items

167°F



Image: Advanced dish drying and storage system.

Your browser does not support the video tag.

Video: Official Silonn Dishwasher Countertop demonstration, showcasing its features and operation.

7. MAINTENANCE

Cleaning the Filters:

Regularly check and clean the filter system at the bottom of the dishwasher to prevent blockages and ensure efficient cleaning. Remove food particles and rinse under running water.

Cleaning the Interior:

Wipe down the interior surfaces with a damp cloth after each use. Periodically run a cleaning cycle with a dishwasher cleaner to remove mineral buildup and odors.

Exterior Care:

Clean the exterior with a soft, damp cloth. Avoid abrasive cleaners or solvents that could damage the finish.

8. TROUBLESHOOTING

If you encounter issues with your dishwasher, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Dishwasher does not start	Power cord not plugged in; Door not closed properly; No water supply.	Check power connection; Ensure door latches securely; Verify water tank is full or inlet hose is connected.
Dishes are not clean	Improper loading; Clogged spray arms; Insufficient detergent; Clogged filters.	Reload dishes correctly; Clean spray arm nozzles; Add appropriate detergent; Clean filters.
Water not draining	Drain hose kinked or blocked; Drain pump malfunction.	Check and clear drain hose; Contact customer support if pump is faulty.
Excessive noise	Dishes interfering with spray arms; Foreign object in pump.	Rearrange dishes; Inspect and remove any foreign objects.

9. SPECIFICATIONS

Detailed technical specifications for the Silonn Portable Countertop Dishwasher:

Feature	Detail
Brand	Silonn
Model Name	Countertop Dishwasher machine
Installation Type	Countertop
Product Dimensions (D x W x H)	17.72" x 16.93" x 18.11"

Feature	Detail
Capacity	5 liters (water), 4 place settings
Special Features	Adjustable Basket, Auto Program, Built-In Water Tank, Touch Panel
Color	White
Controls Type	Touch
Material	Polypropylene (PP)
Noise Level	56.3 dB
Voltage	120 volts
Cycle Options	Intensive, Babycare, ECO, Rapid, Normal, Glass, Fruit
Display	LED
Water Consumption	5 liters (per cycle)
Item Weight	28 pounds
UPC	840478825138

10. WARRANTY AND SUPPORT

Warranty Information:

This Silonn Portable Countertop Dishwasher comes with a **1-Year Limited Warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use. Please retain your proof of purchase for warranty claims.

Customer Support:

For technical assistance, troubleshooting, or warranty service, please contact Silonn customer support. You can find more information and contact details by visiting the official [Silonn Store on Amazon](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question