

100071708

Instruction Manual for Generic TV Base Stand Legs

Model: 100071708 (Compatible with Westinghouse 70" Model WR70UT4210)

1. PRODUCT OVERVIEW

This instruction manual provides guidance for the proper installation and use of the Generic TV Base Stand Legs, Model 100071708. These replacement legs are specifically designed for compatibility with the Westinghouse 70-inch TV, Model WR70UT4210. The set includes one left leg, one right leg, and all necessary screws for attachment.



Image 1.1: Overview of the two TV base stand legs.

Before proceeding with installation, please verify your TV's model number. This can typically be found on a sticker on the back of your television or within the TV's settings menu under an "About TV" or "System

Information" section.

2. PACKAGE CONTENTS

- 1x Left TV Base Stand Leg
- 1x Right TV Base Stand Leg
- Required mounting screws

Required Tool: A Phillips head screwdriver (not included).

3. SETUP AND INSTALLATION

Follow these steps carefully to install the TV base stand legs:

1. **Prepare the TV:** Lay your Westinghouse 70-inch TV (Model WR70UT4210) face down on a soft, clean, and flat surface to prevent screen damage. Ensure the surface is large enough to support the TV safely.
2. **Identify Legs:** Identify the left and right stand legs. The legs are typically marked or shaped to fit specific sides of the TV. Refer to the images below for visual identification of the mounting points.



Image 3.1: Detail of the leg's mounting plate, showing model identification.

3. **Align Legs:** Align each leg with the corresponding mounting holes on the bottom of your TV. Ensure the leg is oriented correctly, with the wider part of the base facing outwards for stability.



Image 3.2: Top view of the two stand legs, illustrating their shape and mounting points.

4. **Secure Legs:** Insert the provided screws into the mounting holes and tighten them securely using a Phillips head screwdriver. Do not overtighten, as this may damage the TV or the stand legs. Ensure both legs are firmly attached and do not wobble.



Image 3.3: Bottom view of the stand legs, showing the screw attachment points.

5. **Position TV:** Carefully lift the TV with the attached legs and place it upright on a stable, level surface. Ensure the TV is balanced and does not tilt.

4. OPERATING (PLACEMENT GUIDELINES)

Once installed, ensure the TV is placed on a flat, stable, and sufficiently wide surface to prevent tipping. Keep the TV away from edges where it could be accidentally knocked over. For optimal viewing and safety, position the TV in a location free from excessive vibrations or direct sunlight.

5. MAINTENANCE

- **Cleaning:** To clean the stand legs, use a soft, dry cloth. For stubborn marks, a slightly damp cloth with mild soap can be used, followed by drying thoroughly. Avoid abrasive cleaners or solvents.
- **Stability Check:** Periodically check the screws attaching the legs to the TV to ensure they remain tight. If any looseness is detected, gently retighten them.
- **Inspection:** Inspect the legs for any signs of damage or wear. If damage is observed, discontinue use and seek a replacement.

6. TROUBLESHOOTING

- **Legs do not fit the TV:**

Solution: Double-check your TV's model number against the compatible model (Westinghouse WR70UT4210). These legs are designed for specific models. If your TV model does not match, these legs are not compatible.

- **TV feels unstable after installation:**

Solution: Ensure all screws are securely tightened. Verify that the legs are correctly oriented and fully seated in the TV's mounting points. Make sure the TV is placed on a completely flat and stable surface.

- **Missing screws or damaged parts:**

Solution: Contact the seller or manufacturer for assistance with replacement parts.

7. SPECIFICATIONS

Product Model Number	100071708
Compatible TV Model	Westinghouse 70" Model WR70UT4210
Brand	Generic
Material	Acrylonitrile Butadiene Styrene (ABS)
Color	Black
Item Weight	1 Pound (approx.)
Product Dimensions (each leg, approx.)	7 x 7 x 18 inches (assembled)

8. WARRANTY AND SUPPORT

For warranty information, please refer to the terms provided by the original seller or manufacturer at the time of purchase. As this is a replacement part, warranty coverage may vary.

If you encounter any issues during installation, have questions regarding compatibility, or require replacement parts, please contact the seller directly for assistance. Providing your TV's exact model number will help expedite support.

© 2025 Generic. All rights reserved.