

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [Omethey](#) /
- › [Omethey 8.0 Cubic Extra Large Home Safe Box KM-90 User Manual](#)

Omethey KM-90

Omethey 8.0 Cubic Extra Large Home Safe Box KM-90 User Manual

Model: KM-90 | Brand: Omethey

1. INTRODUCTION

This manual provides detailed instructions for the safe and proper use of your Omethey 8.0 Cubic Extra Large Home Safe Box, Model KM-90. This safe is designed to provide secure storage for valuables such as documents, jewelry, and other personal items. Please read this manual thoroughly before installation and operation to ensure optimal performance and security.





Image: The Omethy 8.0 Cubic Extra Large Home Safe Box, featuring a sleek black design with three independently accessible compartments, each secured by a digital keypad and emergency key access.

2. SAFETY INFORMATION

- Always store emergency keys in a secure location away from the safe and out of reach of unauthorized individuals. Do not store emergency keys inside the safe.
- Ensure the safe is installed on a stable, level surface or securely mounted to a wall or floor to prevent tipping or unauthorized removal.
- Keep the safe's digital keypad and internal components dry. Avoid exposure to excessive moisture or extreme temperatures.

- Do not attempt to force the safe open if it is jammed or malfunctioning. Refer to the troubleshooting section or contact customer support.

3. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- 1 x Omethey 8.0 Cubic Home Safe Box
- 6 x Emergency Keys
- 6 x Expansion Screws (for mounting)
- 1 x USB Type-C Cable (for emergency power)
- 4 x Non-slip Pads
- 1 x User Manual (this document)



Image: A visual representation of the Omethey 8.0 Cubic Safe and its accompanying accessories, including emergency keys, foot mats, a USB Type-C cable, expansion screws, and the user manual.

4. SETUP

4.1 Battery Installation

1. Locate the battery compartment on the back of each digital keypad.
2. Insert the required batteries (typically 4 AA batteries, not included) according to the polarity indicators (+/-).
3. Close the battery compartment cover securely.

4.2 Mounting the Safe

For enhanced security, it is recommended to mount the safe to a floor or wall using the provided expansion screws.

1. Choose a suitable location for the safe, ensuring it is level and stable.
2. Identify the pre-drilled mounting holes on the back (four holes) and bottom (two holes) of the safe.
3. Position the safe and mark the drilling points on the wall or floor through the pre-drilled holes.
4. Drill holes at the marked points using an appropriate drill bit for your wall/floor material.
5. Align the safe with the drilled holes and insert the expansion screws.

6. Tighten the screws firmly to secure the safe in place.



Image: A step-by-step guide demonstrating how to install the safe by drilling into a wall or floor and securing it with expansion bolts for increased stability and theft prevention.

5. OPERATING INSTRUCTIONS

5.1 Opening the Safe

Your Omethy safe offers three methods for opening:

1. **Using Emergency Keys:** Insert the emergency key into the keyhole, turn it, and then turn the knob to open the door.
2. **Using Digital Passcode:** Enter your programmed passcode on the keypad, then turn the knob to open the door.
3. **Using USB Type-C Power with Passcode (Emergency Power):** If batteries are depleted, connect the USB Type-C cable to the external power jack, enter your passcode, then turn the knob to open the door.

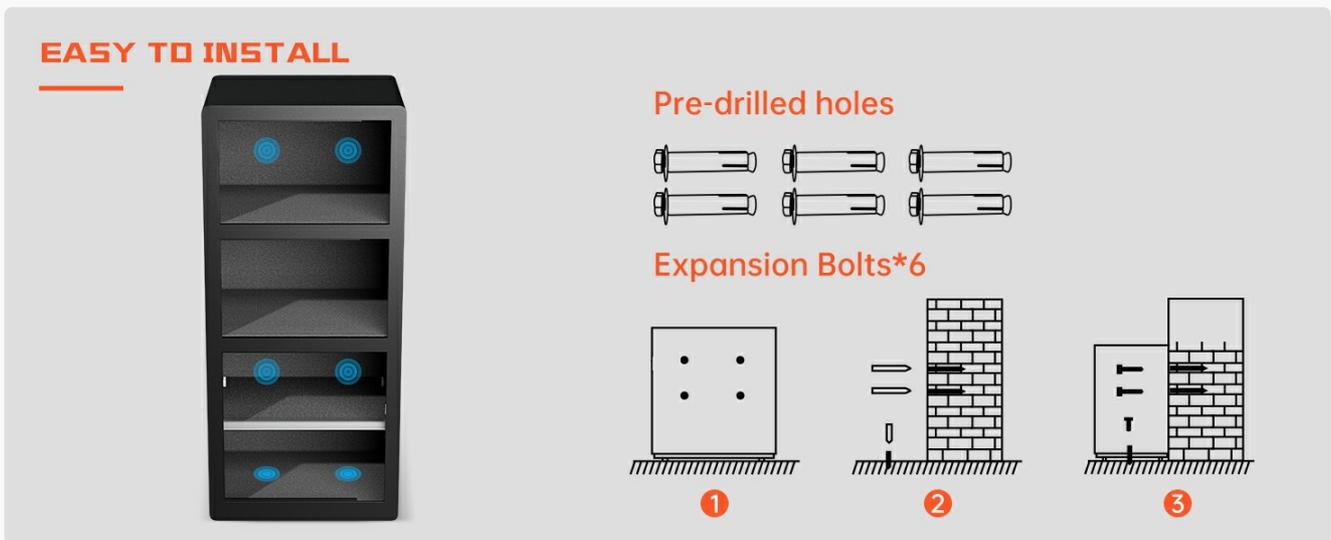


Image: An illustration detailing the three distinct methods for accessing the safe: using an emergency key, entering a digital password, or utilizing a USB Type-C cable for emergency power combined with a password.

5.2 Setting/Changing Passcodes

Refer to the specific instructions provided with your safe for detailed steps on setting and changing passcodes for each of the three doors. Generally, this involves pressing a reset button inside the door (when open) and entering a

new code.

5.3 Mute Function

To activate or deactivate the mute function, press the '*' key followed by the '1' key on the keypad. This allows for silent operation.

5.4 Dual Alarm System

The safe is equipped with a dual alarm system that activates under two conditions:

- After 3 consecutive incorrect password entries.
- Upon detection of violent vibrations.

The alarm emits a sound of 70 decibels for 60 seconds. To stop the alarm, enter the correct password.

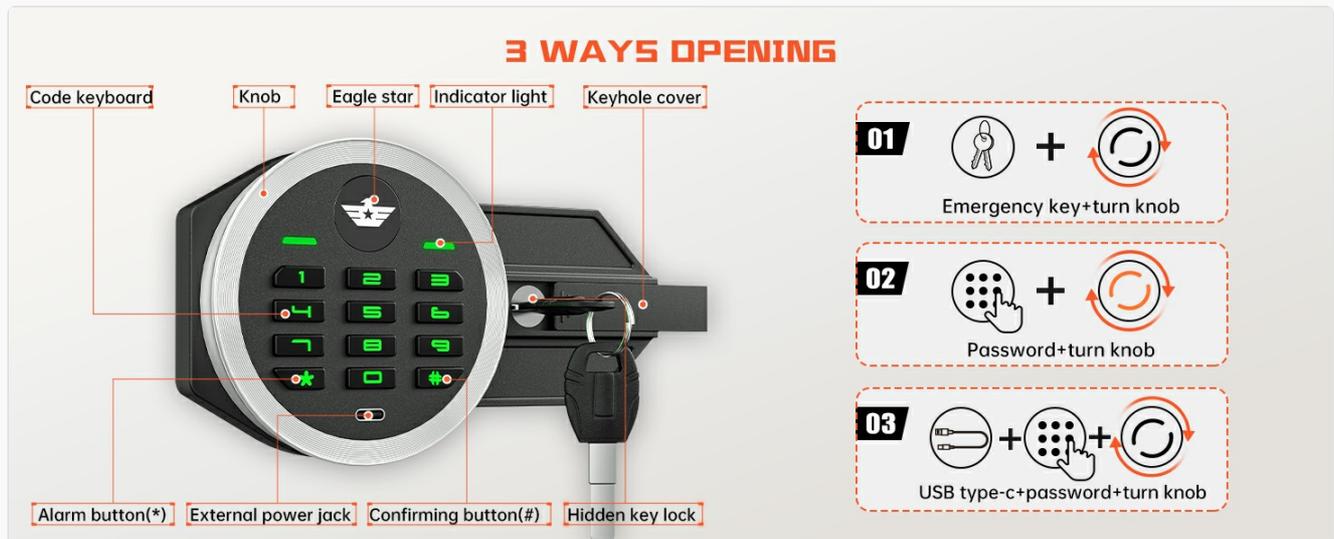


Image: The safe highlighting its mute function, activated by pressing '*' then '1', and its dual alarm system which triggers a 70dB alert upon violent vibrations or incorrect password attempts.

5.5 Using the Drop Slot

The top door features a front slot designed for easily depositing money or coins without needing to open the main door.

5.6 Adjustable and Removable Shelf

The bottom compartment includes an adjustable and removable shelf. You can customize its position or remove it entirely to accommodate items of various sizes.

5.7 Key Hook and LED Light

Each door's interior is equipped with a key hook for organizing keys. A built-in LED light automatically illuminates the interior when the safe is opened with a password, improving visibility.

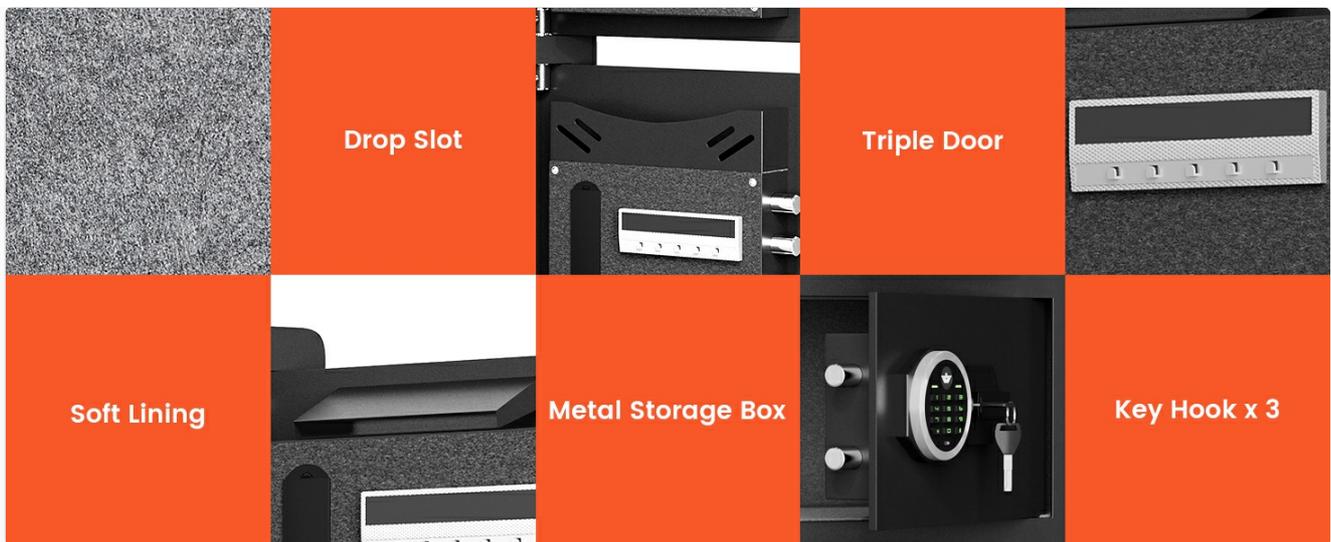


Image: A detailed view of the safe's backlit keypad, illustrating its clear visibility and ease of use in both bright daylight and dark environments.

6. MAINTENANCE

6.1 Battery Replacement

Replace batteries when the keypad indicator light dims or the safe becomes unresponsive. Use fresh, high-quality batteries for optimal performance.

6.2 Cleaning

Wipe the exterior of the safe with a soft, damp cloth. Avoid abrasive cleaners or solvents that could damage the finish or electronic components.

6.3 Emergency Key Storage

Always store your emergency keys in a secure, easily accessible location outside of the safe. This ensures access in case of battery failure or forgotten passcodes.

7. TROUBLESHOOTING

7.1 Safe Not Opening

- **Check Batteries:** Ensure batteries are correctly installed and have sufficient power. Use the USB Type-C cable for emergency power if needed.
- **Verify Passcode:** Double-check that the correct passcode is being entered.
- **Use Emergency Key:** If digital access fails, use the emergency key as described in Section 5.1.

7.2 Alarm Activation

- If the alarm sounds due to incorrect entries, enter the correct passcode to silence it.
- If the alarm sounds due to vibrations, ensure the safe is securely mounted and not subject to accidental impacts.

7.3 Keypad Unresponsive

- Replace batteries.
- Ensure the USB Type-C cable is providing power correctly if used for emergency access.


8. SPECIFICATIONS

Feature	Specification
Model Number	KM-90
External Dimensions (D x W x H)	13.78" x 15.75" x 35.43"
Capacity	8 Cubic Feet
Weight	64 Pounds
Material	Alloy Steel
Lock Type	Electronic Combination Lock
Special Features	Adjustable & Removable Shelf, Alarm System, Anti-Theft, Combination Lock, Sensor Light, Drop Slot, Key Hook
Mounting Type	Wall & Floor Mount
Alarm	Audible & Vibration (70dB)

PRODUCT SIZE



Medicine

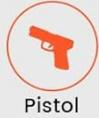


Pistol




Document



Money

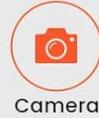

Camera

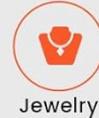

Jewelry

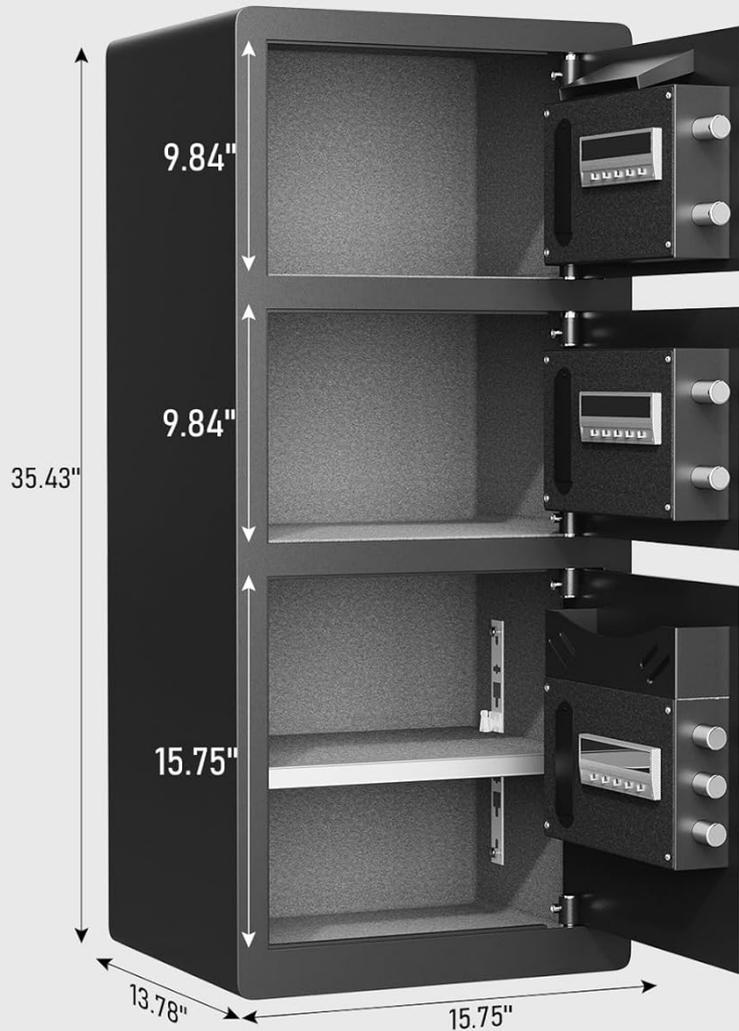


Image: A technical drawing of the safe with precise measurements for its height (35.43 inches), width (15.75 inches), and depth (13.78 inches), along with internal compartment heights (9.84 inches).

9. WARRANTY AND SUPPORT

Omethey provides lifetime customer service for every safe sold. If you have any questions, require assistance, or encounter any issues with your safe, please contact Omethey customer service. Our team is available 24/7 to provide friendly support.

For support, please refer to the contact information provided on the Omethey official website or your purchase documentation.

