Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- AKAI /
- > AKAI PM-160P Wireless Portable Outdoor Party Speaker User Manual

AKAI PM-160P

AKAI PM-160P Wireless Portable Outdoor Party Speaker User Manual

Model: PM-160P

INTRODUCTION

This manual provides essential instructions for the safe and efficient operation of your AKAI PM-160P Wireless Portable Outdoor Party Speaker. Please read this manual thoroughly before using the product and retain it for future reference.

SAFETY INFORMATION

- Do not expose the speaker to extreme temperatures or direct sunlight for extended periods.
- Avoid submerging the speaker in water. The IPX4 rating protects against splashes, not submersion.
- Use only the provided charging cable and power adapter.
- Keep the speaker away from children and pets.
- Do not attempt to disassemble or repair the speaker yourself. Contact qualified service personnel.
- Ensure proper ventilation when operating the speaker.

PACKAGE CONTENTS

Verify that all items are present in the packaging:

- 1N Main Unit Speaker
- 1N Wireless Microphone
- 1N Remote Control
- 1N Charging Cable
- 1N Aux Cable
- 1N User Manual/Warranty Card

PRODUCT OVERVIEW

The AKAI PM-160P is a powerful wireless portable party speaker designed for outdoor and indoor use. It features dual 8-inch woofers and a 2-inch tweeter for rich audio, a 5000mAh battery for extended playtime, and multiple connectivity options.



Figure 1: AKAI PM-160P Speaker, Wireless Microphone, and Remote Control. This image displays the main speaker unit with its vibrant LED lights, alongside the included wireless microphone and remote control, illustrating the complete product package.

Key Features:

- 160W RMS Output: Delivers powerful sound.
- Dual 8" Woofers & 2" Tweeter: For enhanced bass and clear highs.
- 5000mAh Battery: Up to 5 hours playtime at 50% volume.
- IPX4 Splash-Proof: Protection against light water splashes.
- Multiple Connectivity: Bluetooth 5.0, AUX, USB, TF Card, Guitar Input.
- True Wireless Stereo (TWS): Connect two PM-160P speakers for stereo sound.

- Wireless Microphone: For karaoke and vocal performances.
- Dynamic LED Lights: Multicolor lighting effects.
- Mobile Holder: Integrated slot for holding a smartphone or tablet.



Figure 2: Integrated Mobile Holder. This image highlights the top panel of the speaker, showing a smartphone securely placed in the built-in mobile holder, demonstrating its convenience for media playback or display.

SETUP

1. Charging the Speaker

- 1. Connect the provided charging cable to the speaker's charging port.
- 2. Plug the other end into a suitable power outlet.
- 3. The charging indicator will illuminate. Allow approximately [X hours not specified in data] for a full charge.
- 4. A fully charged battery provides up to 5 hours of playtime at 50% volume.



Figure 3: Battery Life and Portability. This image shows the AKAI PM-160P speaker in an outdoor setting with people enjoying music, emphasizing its portable design and the 5000 mAh battery offering up to 5 hours of playtime.

2. Initial Power On

- · Locate the power button on the speaker.
- Press and hold the power button for a few seconds until the display illuminates and the speaker powers on.

3. Connecting the Wireless Microphone

- Ensure the wireless microphone has fresh batteries (if applicable, the product description states "Rechargeable Wireless Mic").
- Turn on the microphone. It should automatically pair with the speaker.
- Adjust the microphone volume using the dedicated control on the speaker or remote.

OPERATING INSTRUCTIONS

1. Bluetooth Pairing

- 1. Power on the AKAI PM-160P speaker.
- 2. The speaker will automatically enter Bluetooth pairing mode (indicated by a flashing Bluetooth icon or voice prompt).
- 3. On your mobile device, enable Bluetooth and search for available devices.
- 4. Select "AKAI PM-160P" from the list.
- 5. Once paired, the speaker will confirm the connection, and the Bluetooth indicator will become solid.
- 6. The Bluetooth 5.0 technology ensures stable connections up to 10 meters.

2. True Wireless Stereo (TWS) Function

To achieve an immersive stereo sound experience, you can connect two AKAI PM-160P speakers wirelessly:

- 1. Ensure both PM-160P speakers are powered on and not connected to any Bluetooth device.
- 2. On one speaker (this will be the primary speaker), long press the TWS button.
- 3. The speaker will search for another PM-160P speaker.
- 4. Once connected, both speakers will play audio in stereo.
- 5. Connect your mobile device to the primary speaker via Bluetooth as described above.




Figure 4: TWS Functionality. This diagram illustrates how two AKAI PM-160P speakers can be wirelessly linked to a single mobile device, enabling a True Wireless Stereo sound experience.

3. Using Other Connectivity Options (AUX, USB, TF Card, Guitar Input)

- AUX Input: Connect an external audio device using the provided 3.5mm AUX cable to the AUX port on the speaker. Select AUX mode using the mode button.
- **USB Playback:** Insert a USB flash drive containing MP3 audio files into the USB port. The speaker will automatically detect and play the files.
- TF Card Playback: Insert a TF (microSD) card containing MP3 audio files into the TF card slot. The speaker will automatically detect and play the files.
- Guitar Input: Connect your guitar to the dedicated guitar input port. Adjust the guitar volume as needed.

The Easy Connectivity



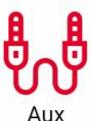 





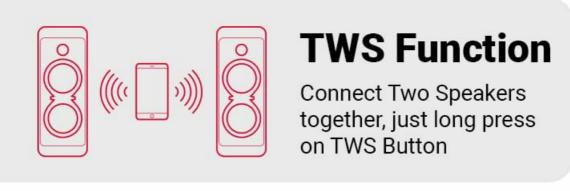


Figure 5: Multiple Connectivity Options. This image displays icons representing Bluetooth 5.0, Aux, USB, and TF Card inputs, along with a diagram explaining the TWS function, highlighting the speaker's versatile connection capabilities.

4. Karaoke Function

With the included wireless microphone, you can enjoy karaoke:

- Ensure the wireless microphone is connected (see Setup section).
- Play your desired music track through any input source (Bluetooth, USB, AUX).
- Adjust the microphone volume and echo effects using the controls on the speaker or remote for optimal vocal performance.

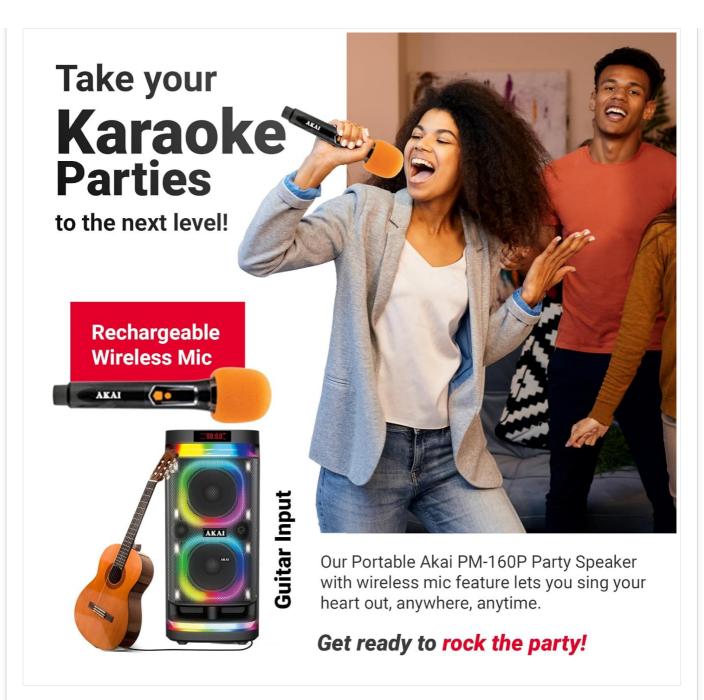


Figure 6: Karaoke and Guitar Input. This image depicts individuals singing with the wireless microphone and playing a guitar, showcasing the speaker's suitability for karaoke parties and musical performances.

5. Equalizer Settings

Customize your audio experience with multiple equalizer presets. Use the "EQ" button on the speaker or remote control to cycle through available sound modes (e.g., Pop, Rock, Jazz, Classic, Flat).

6. Dynamic LED Lights

The speaker features dynamic multicolor LED lights that enhance the party atmosphere. Use the dedicated light button on the speaker or remote to change light modes or turn them off.



Figure 7: Dynamic LED Lighting. This image shows the AKAI PM-160P speaker with its vibrant, multicolor LED lights active in a lively party environment, illustrating how the lighting enhances the entertainment atmosphere.

7. Remote Control Operation

The included remote control allows convenient operation from a distance. Functions include power on/off, mode selection, volume control, track selection, EQ settings, and LED light control.

Control at your fingertips, Sound at your command!





Figure 8: Remote Control and Top Panel. This image displays the speaker's top control panel alongside the remote control, emphasizing the ease of managing settings and playback from a distance.

MAINTENANCE

- Cleaning: Use a soft, dry cloth to clean the speaker's exterior. Do not use abrasive cleaners or solvents.
- **Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures when not in use for extended periods.
- **Battery Care:** To prolong battery life, fully charge the speaker before long-term storage and recharge it every 3-6 months.
- Water Resistance: The IPX4 rating means it is splash-proof. Do not immerse the speaker in water or expose it to heavy rain. Ensure all port covers are securely closed when near water.

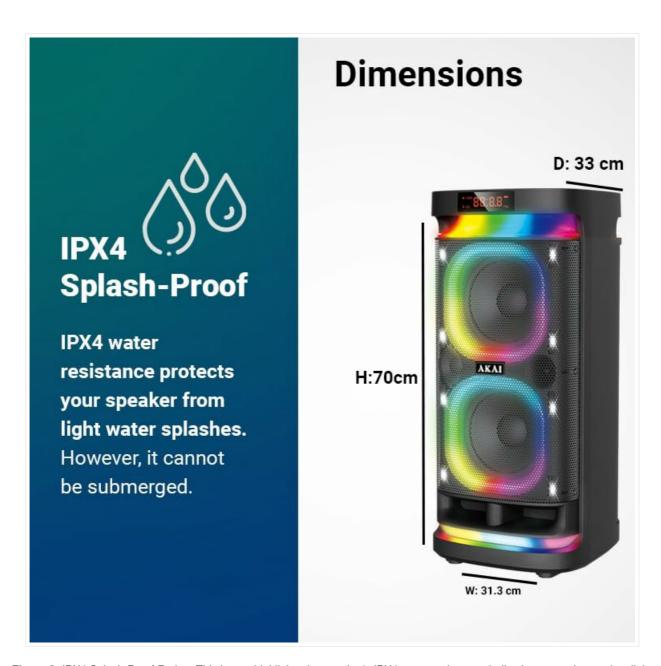


Figure 9: IPX4 Splash-Proof Rating. This image highlights the speaker's IPX4 water resistance, indicating protection against light splashes, along with its physical dimensions for reference.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not power on.	Low battery; Power button not pressed correctly.	Charge the speaker; Press and hold the power button until it turns on.
No sound.	Volume too low; Incorrect input mode; Device not paired.	Increase volume; Select correct input mode; Repair Bluetooth device.
Bluetooth connection unstable.	Device too far; Obstructions; Interference.	Move device closer (within 10m); Remove obstructions; Avoid other wireless devices.
Microphone not working.	Microphone off; Low microphone battery; Volume too low.	Turn on microphone; Charge/replace microphone batteries; Increase microphone volume.

Problem	Possible Cause	Solution
TWS pairing fails.	Speakers already paired to another device; Incorrect TWS procedure.	Ensure both speakers are unpaired from other devices; Follow TWS pairing steps carefully.

SPECIFICATIONS

Feature	Detail
Model	PM-160P
Brand	AKAI
RMS Power Output	160W
Woofer Size	Dual 8 inches
Tweeter Size	2 inches
Battery Capacity	5000 mAh
Playtime	Up to 5 hours (at 50% volume)
Bluetooth Version	5.0
Connectivity Options	Bluetooth, AUX, USB, TF Card, Guitar Input
Water Resistance	IPX4 Splash-Proof
Material	Acrylonitrile Butadiene Styrene (ABS), Plastic
Product Dimensions (L x W x H)	31.3 x 33 x 70 cm
Item Weight	9.1 kg



Figure 10: Power and Driver Configuration. This image visually emphasizes the AKAI PM-160P's 160W RMS power output and its speaker configuration, featuring dual 8-inch woofers and a 2-inch tweeter for high bass performance.

WARRANTY AND SUPPORT

Your AKAI PM-160P speaker comes with a**1-year warranty** from the date of purchase. This warranty covers manufacturing defects under normal use.

For warranty claims, technical support, or service inquiries, please contact AKAI India customer support:

- Email: akaicare@akaiindia.in
- Phone: +918544840022 / 33
- Manufacturer Address: Hometech Digital Ltd SCO 363-364 Sector-35B, Chandigarh, India

Please retain your purchase receipt as proof of purchase for warranty validation.



AKAI PM-80P Party Speaker System: User Manual & Warranty Information

Comprehensive user manual and warranty card details for the AKAI PM-80P Party Speaker System, including specifications, features, usage instructions, and remote control operation.



AKAI KS878-BT Bluetooth Pedestal Karaoke System Instruction Manual

User manual for the AKAI KS878-BT Bluetooth Pedestal Karaoke System with 6 Speakers and Light Effects. Provides detailed instructions on setup, operation, safety precautions, maintenance, troubleshooting, and specifications.



JET 2146 Roller Stand - Parts Manual

Official manual for the JET 2146 Roller Stand, detailing parts and assembly. Includes multilingual support information and product specifications.



AKAI A58084 Bluetooth Karaoke Machine Instruction Manual

Comprehensive instruction manual for the AKAI A58084 Bluetooth Karaoke Machine, detailing features, setup, operation, safety guidelines, and troubleshooting for this home entertainment device.



MEAN WELL HBG-160P Series: 160W Constant Voltage + Constant Current LED Driver

Datasheet for the MEAN WELL HBG-160P series, a 160W AC/DC LED driver featuring constant voltage/constant current output, high efficiency, fanless operation, and dimming capabilities for various LED lighting applications.



AKAI KS800 CD+G/MP3+G Karaoke System Instruction Manual

Comprehensive instruction manual for the AKAI KS800 CD+G/MP3+G Karaoke System, covering setup, operation, features, maintenance, and troubleshooting.