



Manuals.plus /

› OUKITEL /

› OUKITEL C61 PRO Smartphone Android 15 User Manual

OUKITEL OUKITEL C61 PRO

OUKITEL C61 PRO Smartphone User Manual

Model: OUKITEL C61 PRO

1. INTRODUCTION

Welcome to the OUKITEL C61 PRO Smartphone user manual. This guide provides essential information to help you set up, operate, and maintain your new device. The OUKITEL C61 PRO is a powerful smartphone featuring Android 15, a large 6.88-inch HD+ 90Hz display, a 5150mAh battery, and versatile camera capabilities. Please read this manual carefully to ensure optimal performance and longevity of your device.



Figure 1.1: OUKITEL C61 PRO Smartphone, showcasing its sleek design and key specifications like Android 15, 24GB RAM, and 256GB ROM.

2. WHAT'S IN THE BOX

Upon unboxing your OUKITEL C61 PRO, please verify that all the following items are included:

- 1 x OUKITEL C61 PRO Smartphone
- 1 x Charger
- 1 x Type-C Cable
- 1 x Transparent Protective Case
- 1 x SIM Ejector Tool

- 1 x Warranty Card and Instructions



Figure 2.1: Packaging list for the OUKITEL C61 PRO, including the phone, charger, cable, case, SIM ejector, and documentation.

3. PRODUCT OVERVIEW

3.1 Device Layout

Familiarize yourself with the physical components of your OUKITEL C61 PRO:

- **Front Camera:** For selfies and video calls.
- **Display:** 6.88-inch HD+ In-Cell screen with 90Hz refresh rate.
- **Volume Buttons:** Adjust media volume and ringtone volume.
- **Power Button/Fingerprint Sensor:** Power on/off, lock/unlock screen, and fingerprint recognition.
- **SIM/SD Card Tray:** Insert Nano-SIM cards and a MicroSD card.
- **USB Type-C Port:** For charging and data transfer. Supports OTG.
- **Main Camera:** 13MP rear camera for high-quality photos and videos.
- **Speaker:** For audio output.



Figure 3.1: Overview of OUKITEL C61 PRO features, including Android 15, display, memory, NFC, fingerprint, GPS, OTG, and Dual SIM capabilities.

4. SETUP

4.1 Installing SIM and MicroSD Cards

1. Locate the SIM card tray on the side of the phone.
2. Insert the SIM ejector tool into the small hole next to the tray and push gently until the tray pops out.
3. Place your Nano-SIM card(s) and/or MicroSD card into the designated slots on the tray. Ensure the gold contacts face downwards.
4. Carefully push the tray back into the phone until it is flush with the side.

4.2 Initial Power On and Setup

1. Press and hold the Power button until the OUKITEL logo appears.
2. Follow the on-screen prompts to select your language, connect to Wi-Fi, and set up your Google account.
3. Configure security features such as Face ID or fingerprint unlock for enhanced protection.



Figure 4.1: Illustration of SIM and MicroSD card installation, along with Face ID and side fingerprint sensor.

5. OPERATING INSTRUCTIONS

5.1 Basic Functions

- **Power On/Off:** Press and hold the Power button. Select 'Power off' or 'Restart'.
- **Screen Lock/Unlock:** Briefly press the Power button. Use your set unlock method (PIN, pattern, fingerprint, Face ID).
- **Volume Adjustment:** Use the Volume Up/Down buttons on the side of the device.

5.2 Calls and Messaging

- **Making Calls:** Open the 'Phone' app, enter the number, and tap the call icon.
- **Sending Messages:** Open the 'Messages' app, tap 'Start chat', enter recipient and message.

5.3 Internet and Connectivity

- **Wi-Fi:** Go to Settings > Network & internet > Wi-Fi to connect to available networks.
- **Mobile Data:** Go to Settings > Network & internet > Mobile network to enable/disable mobile data.
- **Bluetooth:** Go to Settings > Connected devices > Connection preferences > Bluetooth to pair with other devices.
- **NFC:** Enable NFC in Settings > Connected devices > Connection preferences > NFC for contactless payments and data exchange.

5.4 Camera Usage

The OUKITEL C61 PRO features a 13MP main camera and a 5MP front camera.

1. Open the 'Camera' app.
2. Switch between front and rear cameras using the camera switch icon.
3. Tap the shutter button to take a photo or hold it to record a video.
4. Explore various modes like Panorama, Portrait, Beauty, and HDR for different shooting scenarios.



Figure 5.1: The 13MP main camera of the OUKITEL C61 PRO, designed to capture clear and detailed images.



Figure 5.2: The 5MP front camera, ideal for selfies and video calls, offering various modes for creative photography.

6. MAINTENANCE

6.1 Cleaning Your Device

- Use a soft, lint-free cloth to clean the screen and body of the phone.
- Avoid using harsh chemicals, abrasive cleaners, or aerosol sprays.
- Do not expose the device to excessive moisture.

6.2 Battery Care

- To prolong battery life, avoid extreme temperatures.
- Use only the original charger and cable provided with the device.
- Avoid fully discharging the battery frequently.



Figure 6.1: The 5150mAh battery of the OUKITEL C61 PRO, providing extended usage times for calls, music, and web browsing.

7. TROUBLESHOOTING

If you encounter issues with your OUKITEL C61 PRO, try the following solutions:

Problem	Possible Solution
Device won't turn on	Ensure the battery is charged. Connect to the charger for at least 10 minutes before attempting to power on.
Apps are slow or crashing	Close background apps. Clear app cache (Settings > Apps > [App Name] > Storage > Clear cache). Restart the device.
Cannot connect to Wi-Fi	Ensure Wi-Fi is enabled. Restart your router. Forget the network and reconnect.
Poor call quality	Check network signal strength. Move to an area with better reception. Ensure nothing is blocking the microphone or speaker.
Fingerprint sensor not working	Ensure your finger is clean and dry. Re-register your fingerprint in Settings > Security > Fingerprint.

8. SPECIFICATIONS

Detailed technical specifications for the OUKITEL C61 PRO Smartphone:

Feature	Detail
Model	OUKITEL C61 PRO
Operating System	Android 15.0
RAM	24GB (8GB physical + 16GB virtual)
Internal Storage (ROM)	256GB
Expandable Storage	Up to 1TB via MicroSD card
Display Size	6.88 inches
Display Type	HD+ In-Cell LCD
Display Resolution	1640 x 720 pixels
Refresh Rate	90Hz
Main Camera	13MP
Front Camera	5MP
Battery Capacity	5150mAh (Lithium-ion)
Charging Port	USB Type-C
Connectivity	4G Dual SIM, Wi-Fi, Bluetooth 5.0, NFC, OTG
Navigation	GPS+GLONASS+Beidou+Galileo
Security Features	Face ID, Side Fingerprint Sensor
Dimensions	17.07 x 7.96 x 0.95 cm
Weight	480 grams

24(8+16)GB RAM + 256 GB ROM



24GB RAM
8+16 GB Virtuali



256GB
ROM



1TB
Espansione Memoria



Figure 8.1: Detailed view of the OUKITEL C61 PRO's memory configuration, highlighting 24GB RAM (8GB physical + 16GB virtual) and 256GB ROM, expandable up to 1TB.

Display HD+ Da 6,88" : Sottile E Vibrante



90Hz



90Hz

Frequenza

Aggiornamento



450 nit

Luminosità Schermo



85%

Rapporto
Schermo



20.5:10

Rapporto D'aspetto

Figure 8.2: The 6.88-inch HD+ In-Cell display with a 90Hz refresh rate, offering smooth visuals and responsive touch.

9. WARRANTY AND SUPPORT

OUKITEL provides comprehensive support for your C61 PRO Smartphone:

- **Warranty:** 2 years official OUKITEL warranty.
- **Returns:** 30 days no-reason return policy.
- **Technical Support:** Continuous technical support available.
- **Customer Service:** 24/7 online customer assistance.

For further assistance, please refer to the warranty card included in your package or visit the official OUKITEL support website.