

DigiLand 10.1-inch Tablet PC

DigiLand 10.1-inch Android 14 Tablet User Manual

Model: 10.1-inch Tablet PC

INTRODUCTION

This user manual provides comprehensive instructions for the operation, maintenance, and troubleshooting of your DigiLand 10.1-inch Android 14 Tablet. Please read this manual thoroughly before using your device to ensure proper functionality and to maximize your user experience. This tablet is designed for versatile use, offering high performance for various applications, from entertainment to productivity.

WHAT'S IN THE BOX

Upon opening the package, please verify that all listed items are present and in good condition:

- (1) Leather case *1
- (2) USB cable *1
- (3) 5V/2A Adaptor *1; US standard
- (4) Manual *1 (This document)
- (5) Warranty card *1



Figure 1: DigiLand 10.1-inch Android 14 Tablet and its accessories.

For a visual guide to unboxing your tablet, please refer to the official unboxing video below.

Your browser does not support the video tag.

Video 1: Android 14 Tablet Unboxing Video. This video demonstrates the unboxing process and shows the tablet and its included components.

PRODUCT OVERVIEW

The DigiLand 10.1-inch Android 14 Tablet is engineered for high performance and user convenience. Key features include:

- **Operating System:** Android 14 with upgraded personal privacy protection and security.
- **Memory & Storage:** 12GB RAM + 128GB ROM, with support for TF card expansion for additional storage.
- **Processor:** New generation Octa-Core CPU (Max 2.0 GHz) for faster and more stable performance.

- **Display:** 10.1-inch 1280x800 HD IPS screen with Widevine L1 support for high-fidelity streaming on platforms like Netflix, YouTube, and Disney+.
- **Connectivity:** Ultra-fast WiFi 6 and energy-efficient Bluetooth 5.0.
- **Cameras:** 8-megapixel front camera and 13-megapixel rear camera.
- **Design:** Lightweight (485g) and slim (9mm thin body) for portability.
- **Battery:** 6000 mAh battery for extended usage.
- **Multifunctionality:** Supports split-screen function for enhanced multitasking.

Components and Features



Figure 2: Overview of tablet components and their functions.

The tablet features a headset jack, power button, volume up/down buttons, front camera, reset pinhole, memory card slot, and a Type-C charging port. The rear of the tablet houses the main camera module.



Figure 3: Detailed specifications and physical attributes of the tablet.

This image provides a visual summary of the tablet's core specifications, including its operating system, display size, memory, processor, battery capacity, camera resolution, and physical dimensions.

Store All You Want!



12GB
RAM



128GB
ROM



256GB
EXPANSION



Figure 4: Tablet storage capacity for applications and media.

The tablet offers ample storage for your applications, photos, videos, and documents, with expandable memory options.

6000mAh Monster Battery



9 h
Video



13h
Music



16 h
Browings



32 Days
Video



Type-C
Charge

6000mAh

[⚡] **100%**

Figure 5: Battery life and charging details.

The 6000mAh battery provides extended usage times for various activities, and it supports convenient Type-C charging.



Figure 6: Camera capabilities for photography and video calls.

Equipped with both front and rear cameras, the tablet is suitable for capturing moments and engaging in video communication.

10.1 Wide-Viewing Angle



10.1 inch
FHD Display



800x1280
Resolution



Multi-Touch



16:10
Golden Ratio



Figure 7: Display features and viewing experience.

The 10.1-inch HD display provides a clear and immersive visual experience with wide viewing angles.

Split Screen Multitask with ease

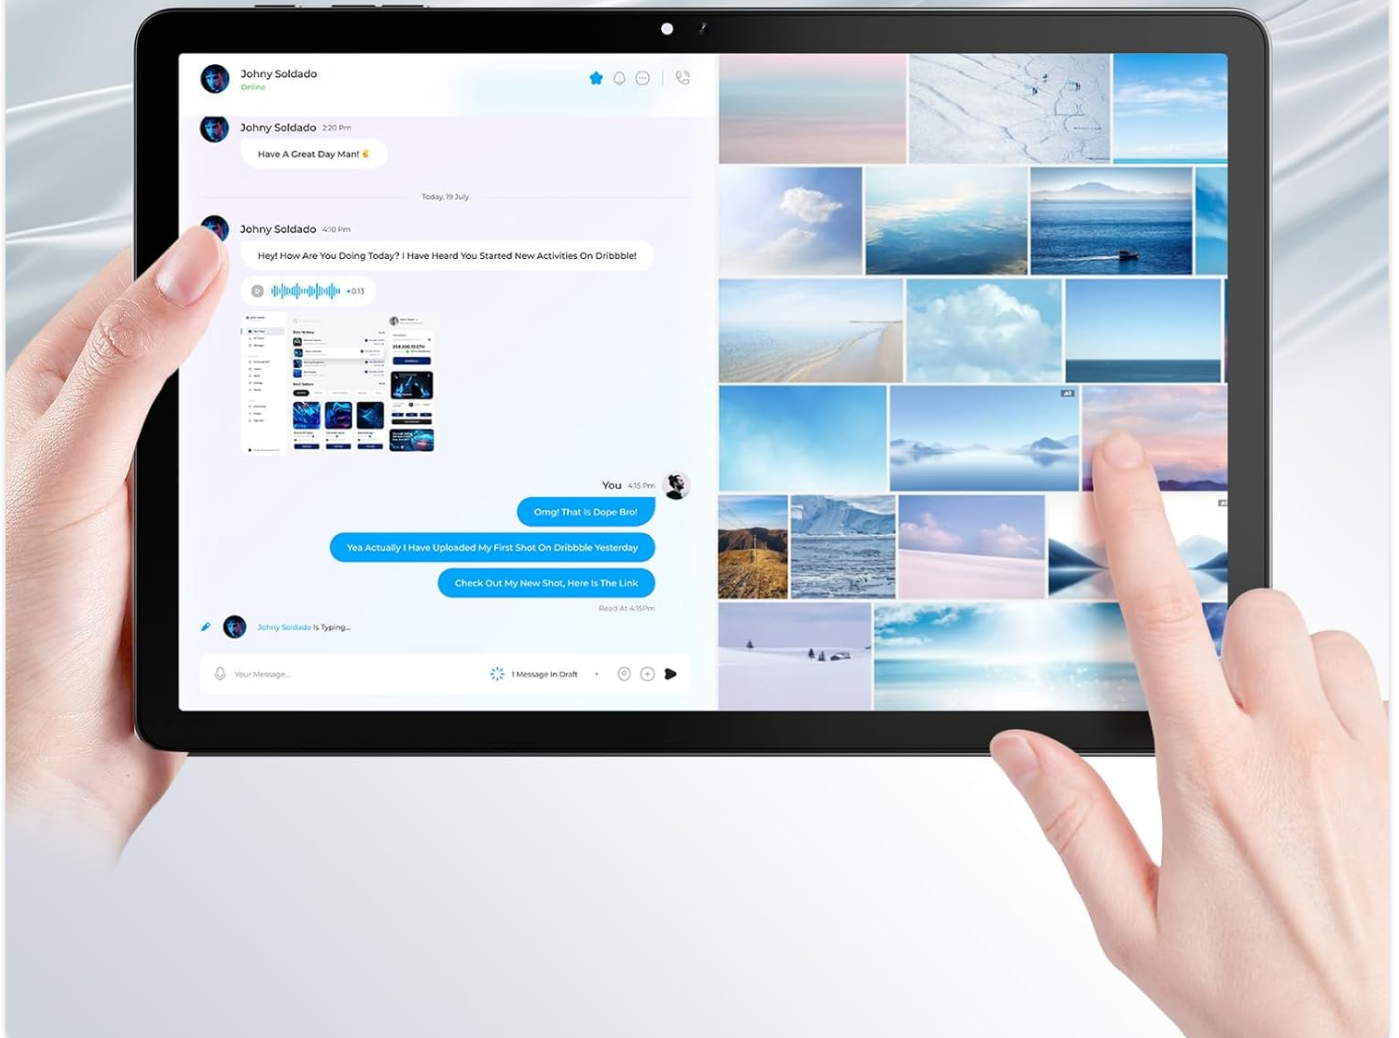 


Figure 8: Split-screen multitasking in action.

The split-screen function allows for efficient multitasking, enabling you to use two applications simultaneously.

SETUP

Initial Power On and Setup

1. **Charge the Tablet:** Before first use, fully charge the tablet using the provided USB cable and power adapter. Connect the Type-C end of the cable to the tablet's charging port and the USB end to the power adapter, then plug the adapter into a wall outlet.
2. **Power On:** Press and hold the Power button located on the side of the tablet until the DigiLand logo appears on the screen.
3. **Initial Configuration:** Follow the on-screen prompts to complete the initial setup. This typically includes selecting your language, connecting to a Wi-Fi network, setting up your Google account, and configuring basic security settings.

4. **Insert TF Card (Optional):** If you wish to expand storage, carefully insert a TF (microSD) card into the designated memory card slot. Ensure the tablet is powered off before inserting or removing the card.

For a visual demonstration of the power-on sequence and initial interaction, refer to the unboxing video in the "What's in the Box" section.

OPERATING INSTRUCTIONS

Basic Navigation

- **Touchscreen Gestures:** Navigate the tablet using standard Android gestures: tap to select, swipe to scroll, pinch to zoom, and long-press for contextual menus.
- **Home Screen:** The main interface where you can access apps, widgets, and notifications.
- **Notification Panel:** Swipe down from the top of the screen to access quick settings and notifications.
- **App Drawer:** Swipe up from the bottom of the screen to view all installed applications.

Connecting to Wi-Fi and Bluetooth

- **Wi-Fi:** Go to *Settings > Network & internet > Wi-Fi* Turn on Wi-Fi, select your desired network, and enter the password if required. The tablet supports ultra-fast WiFi 6.
- **Bluetooth:** Go to *Settings > Connected devices > Connection preferences > Bluetooth* Turn on Bluetooth, then select "Pair new device" to connect to Bluetooth headphones, speakers, or other compatible devices. The tablet features energy-efficient Bluetooth 5.0.

Using Cameras

Access the Camera app from your home screen or app drawer. You can switch between the 8MP front camera and the 13MP rear camera within the app. Tap the screen to focus and press the shutter button to capture photos or start/stop video recording.

Multitasking with Split Screen

To use the split-screen feature, open an application, then swipe up from the bottom of the screen and hold to reveal the recent apps overview. Tap the app icon at the top of the app's card and select "Split screen." Choose a second app from the recent apps or app drawer to open it alongside the first. Adjust the size of each app by dragging the divider in the middle of the screen.

MAINTENANCE

- **Cleaning:** Use a soft, lint-free cloth to clean the screen and body of the tablet. Avoid using abrasive cleaners or solvents.
- **Battery Care:** To prolong battery life, avoid exposing the tablet to extreme temperatures. It is recommended to keep the battery charge between 20% and 80% for optimal longevity.
- **Software Updates:** Regularly check for and install system updates to ensure your tablet has the latest security patches and performance improvements. Go to *Settings > System > System update*
- **Storage Management:** Periodically clear unnecessary files and uninstall unused apps to free up storage space and maintain optimal performance.
- **Protection:** Use the provided leather case to protect your tablet from scratches and minor impacts.

TROUBLESHOOTING

This section addresses common issues you might encounter with your tablet. If you experience problems not covered here, please contact customer support.

Problem	Possible Cause	Solution
Tablet does not power on.	Low battery; system crash.	Charge the tablet for at least 30 minutes. If still unresponsive, press and hold the power button for 10-15 seconds to force a restart.
Wi-Fi connection issues.	Incorrect password; out of range; router issue.	Verify Wi-Fi password. Move closer to the router. Restart your Wi-Fi router. Forget the network and reconnect.
Apps are slow or crashing.	Too many apps running; low storage; outdated app.	Close background apps. Clear app cache (<i>Settings > Apps > [App Name] > Storage & cache > Clear cache</i>). Free up storage space. Update the app from Google Play Store.
Screen is unresponsive.	Temporary software glitch.	Force restart the tablet by holding the power button.
Tablet not charging.	Faulty cable/adapter; dirty charging port.	Ensure cable and adapter are securely connected. Try a different compatible cable and adapter. Clean the charging port gently with a dry, soft brush.

SPECIFICATIONS

Feature	Detail
Brand	DigiLand
Model Name	10.1-inch Tablet PC
Operating System	Android 14
Screen Size	10.1 inches
Max Screen Resolution	800x1280
Processor Brand	MK G80 (Octa-core)
Memory Storage Capacity	128 GB (expandable via TF card)
RAM	12GB
Front Camera	8 MP
Rear Camera	13 MP
Connectivity	WiFi 6, Bluetooth 5.0
Battery Capacity	6000 mAh
Item Weight	2.82 pounds (approx. 485g)
Product Dimensions (LxWxH)	9.53 x 6.34 x 0.3 inches (approx. 9mm thin)

Feature	Detail
Color	Blue

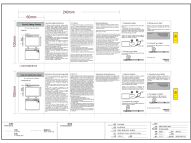
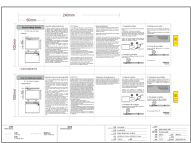
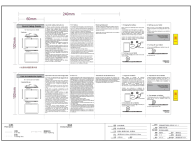


WARRANTY AND SUPPORT

DigiLand is committed to product quality and customer satisfaction.

- **Warranty:** This Android 14 tablet comes with a one-year warranty from the date of purchase.
- **Customer Support:** If you encounter any quality problems or require assistance, please contact us via your Amazon Purchase Record. Our team will endeavor to provide the best service and ensure your satisfaction.
- **Protection Plans:** Additional protection plans may be available for purchase, such as a 2-Year Protection Plan or Complete Protect, which covers eligible past and future purchases. Please refer to your purchase details for more information on these options.

© 2025 DigiLand. All rights reserved.

Related Documents - 10.1-inch Tablet PC

	<p>DIGILAND 10.1 Inch Octa Core Tablet Quick Setup Guide</p> <p>Comprehensive quick setup guide for the DIGILAND 10.1 Inch Octa Core Tablet, covering safety instructions, FCC compliance, charging, setup, and shutdown procedures.</p>
	<p>Digi-Land 10.1 Inch Octa Core Tablet Quick Setup Guide and Safety Information</p> <p>Concise guide for setting up and safely using the Digi-Land 10.1 Inch Octa Core Tablet, including FCC compliance details and important safety instructions.</p>
	<p>DIGILAND 10.1 Inch Quad Core Tablet Quick Setup Guide MID1016</p> <p>Concise setup guide for the DIGILAND 10.1 Inch Quad Core Tablet (Model MID1016), covering safety instructions, FCC compliance, charging, setup, and shutdown procedures.</p>
	<p>Digiland M11 Pro Quick Start Guide</p> <p>A quick start guide for the Digiland M11 Pro tablet, covering initial setup, charging, basic operations, and important FCC compliance information.</p>
	<p>Digiland Limited Product Warranty Information</p> <p>Official limited product warranty details for Digiland electronics, covering terms, exclusions, and claim procedures. Includes 90-day parts and labor warranty.</p>

User manual

First boot up guide

Boot up guide will help you to select system language, time zone, Wi-Fi network, user name and device information during first boot up.

Button functions

Power button

When device is off, keep pressing power button for 5 sec to turn on the device.

When device is on, short press power button to turn screen on/off.

When device is on, keep pressing power button for 5 sec to access to power off interface. Keep pressing for 10 sec to forcibly power off the device.

Volume+ button (Short press) to increase the volume.

Volume- button (Short press) to decrease the volume.

Virtual button bar

HOME button

click to return to main screen

Back button

click to return to previous screen

Background button

click to view self and other background apps

Home button

click to go to home

Search button

click to view search list of current screen

Volume +

Volume -

increase volume

decrease volume

Pull down notification bar

1. User

click to switch local user accounts

2. Settings

click to access to system settings

3. Battery

click to access to battery settings

4. Wi-Fi

click to turn on/off Wi-Fi

5. Bluetooth

click to turn on/off Bluetooth

6. Sound

Click to open the sound / mute

7. Flight mode

click to turn on/off flight mode

8. Auto rotation

click to turn on/off auto-rotation

9. GPS

click to turn on/off GPS

10. Movement

click to turn on/off Movement

Wi-Fi connection

1. Turn on Wi-Fi

2. In "Wi-Fi" menu, click search, select the available network and connect it by entering network password.

Mobile network connection

1. Insert SIM card (not device power on option)

2. Click settings icon to access to settings screen

3. Switch on mobile data toggle

*Above functions are only applicable for the supported devices.

Bluetooth connection

1. Click settings icon to access to Bluetooth menu

2. Switch on Bluetooth and system will automatically search the Bluetooth devices nearby

3. Click on the connectable Bluetooth device then select "connect"

4. Wait for the Bluetooth device to confirm the connection

5. Tap on the menu

*Above functions are only applicable for the supported devices

Screen settings

Click settings to access to "Display" menu

1. Brightness: Scroll the bar to control the screen brightness

2. Wallpaper: set the wallpaper content

3. Sleep: set the screen time-out

4. Font size: set the size of font

5. Auto-rotation: lock the screen direction in 90° device to automatically rotate screen based on the direction

Audio settings

Click settings to access to "Sound" menu

1. Volume: Scroll the bar to adjust the volume of media, alarm and ringtones.

Notification sound: select notification sound

3. Ringtone: select incoming call ringtone

4. Other sounds: Turn on/off screen lock & touch sound effects

HDMI settings

Turn on TV and set the input source to HDMI, connect device to TV via HDMI cable.

1. Mode: adjust the output screen resolution

2. Zoom & scale: zoom in/out and adjust the screen ratio

3. Screen adjustment compensation: Fine tuning the output screen ratio

Battery status

Click settings to access to "Battery" menu, battery usage can be viewed in here.

Power display: switch on/off the toggle to turn on/off power remain percentage display

*Above functions are only applicable for the supported devices

Connect to PC

Device can be connected with PC via USB cable to perform copy/delete actions.

1. Operating system including Windows 7 and above version will automatically install MTP drivers when device connecting to PC at first time.

2. For Windows XP, Windows Media Player 11 must be installed before connecting device to PC.

Application management

Click "Settings" to access to application menu to perform actions including on-installation, clean default action, clear cache & data and force close application.

1. Third party application: Un-installable

2. System application: cannot be un-install

Users

Click settings icon to access to "Users" menu

1. System supports multi-user login

2. Each user can set to personal applications and contents

Location

1. Click settings icon to access to "Location" menu

2. Click "mode" to select the accuracy

Security

Click settings icon to access to "Security" menu

1. Screen lock mode can select between the setup, Pattern, Pin and password modes

2. Unknown source: to allow/turn the app installation from unknown sources

Language and input

Click settings to access to "Language & input" menu

1. Language: select system language

2. Input: choose the default system input method and its relative settings

Accounts management

Click settings to access to "Accounts" menu

1. Add accounts for installed applications

2. Manage the account data sync

Factory reset

1. Choose "Factory data reset" to restore the system

2. Factory reset will clear all personal data, please do backup before taking the action

Date & time

Click settings to access to "Date & time" menu

1. Select "Automatic date & time" to let system to sync the local time when connecting to internet. You can manually adjust the time by turning off this function.

2. Select "Automatic time zone" to let system to sync the local time zone when connecting to internet. You can manually adjust the time zone by turning off this function.

3. 24-hour format: choose the 12-hour or 24-hour display format

USB OTG function

USB OTG function can be used to exchange data with other

[YUMKEM L211 Tablet User Manual and First Boot Up Guide](#)

A comprehensive guide to the YUMKEM L211 tablet, covering initial setup, button functions, connectivity options (Wi-Fi, Bluetooth, Mobile Data, HDMI), screen and audio settings, PC connection, application management, user accounts, location services, security features, language and input, account management, factory reset, date and time settings, and USB OTG functionality.

permissible devices (flash drives, mobile hard drive, SD storage, mouse and keyboard)

1. Devices need to be connected to the product via OTG cable
2. Please keep device power above 50% while using OTG function, separated power supply is needed for high-power consumption devices