

[Manuals.plus](#) /

› [CHOEZON](#) /

› CHOEZON Wall-Mounted Kids Bookshelf MCW43WB Instruction Manual

CHOEZON MCW43WB

CHOEZON Wall-Mounted Kids Bookshelf MCW43WB Instruction Manual

Model: MCW43WB

INTRODUCTION

This manual provides instructions for the safe assembly, installation, use, and maintenance of your CHOEZON Wall-Mounted Kids Bookshelf, Model MCW43WB. This 3-tier wall-hanging unit is designed to organize books and toys, featuring protective guardrails and three wooden hooks for additional storage. Please read these instructions thoroughly before beginning assembly and retain them for future reference.

SAFETY INFORMATION

WARNING: Failure to follow these safety instructions could result in injury or damage to the product.

- Always ensure the bookshelf is securely mounted to a sturdy wall stud or using appropriate wall anchors for your wall type. Consult a professional if unsure about wall suitability.
- Do not overload the shelves. Distribute weight evenly.
- Keep small parts and packaging materials away from children during assembly to prevent choking hazards.
- Regularly check all fasteners to ensure they remain tight.
- Do not allow children to climb on the bookshelf.

PARTS LIST

Before assembly, verify that all components listed below are present and undamaged. If any parts are missing or damaged, contact customer support.

- 1 x Wall-Mount Kids Bookshelf (disassembled components)
- 1 x Accessory Kit (includes screws, wall anchors, etc.)
- 1 x Instructions (this manual)

Note: Tools required for assembly (not included): Phillips head screwdriver, drill, level, measuring tape, pencil.

SETUP AND INSTALLATION

Follow these steps carefully to assemble and mount your bookshelf.

Step 1: Assemble the Bookshelf Frame

Refer to the included diagrams for specific component identification. Connect the side panels to the shelves and guardrails using the provided screws from the accessory kit. Ensure all connections are snug but do not overtighten.

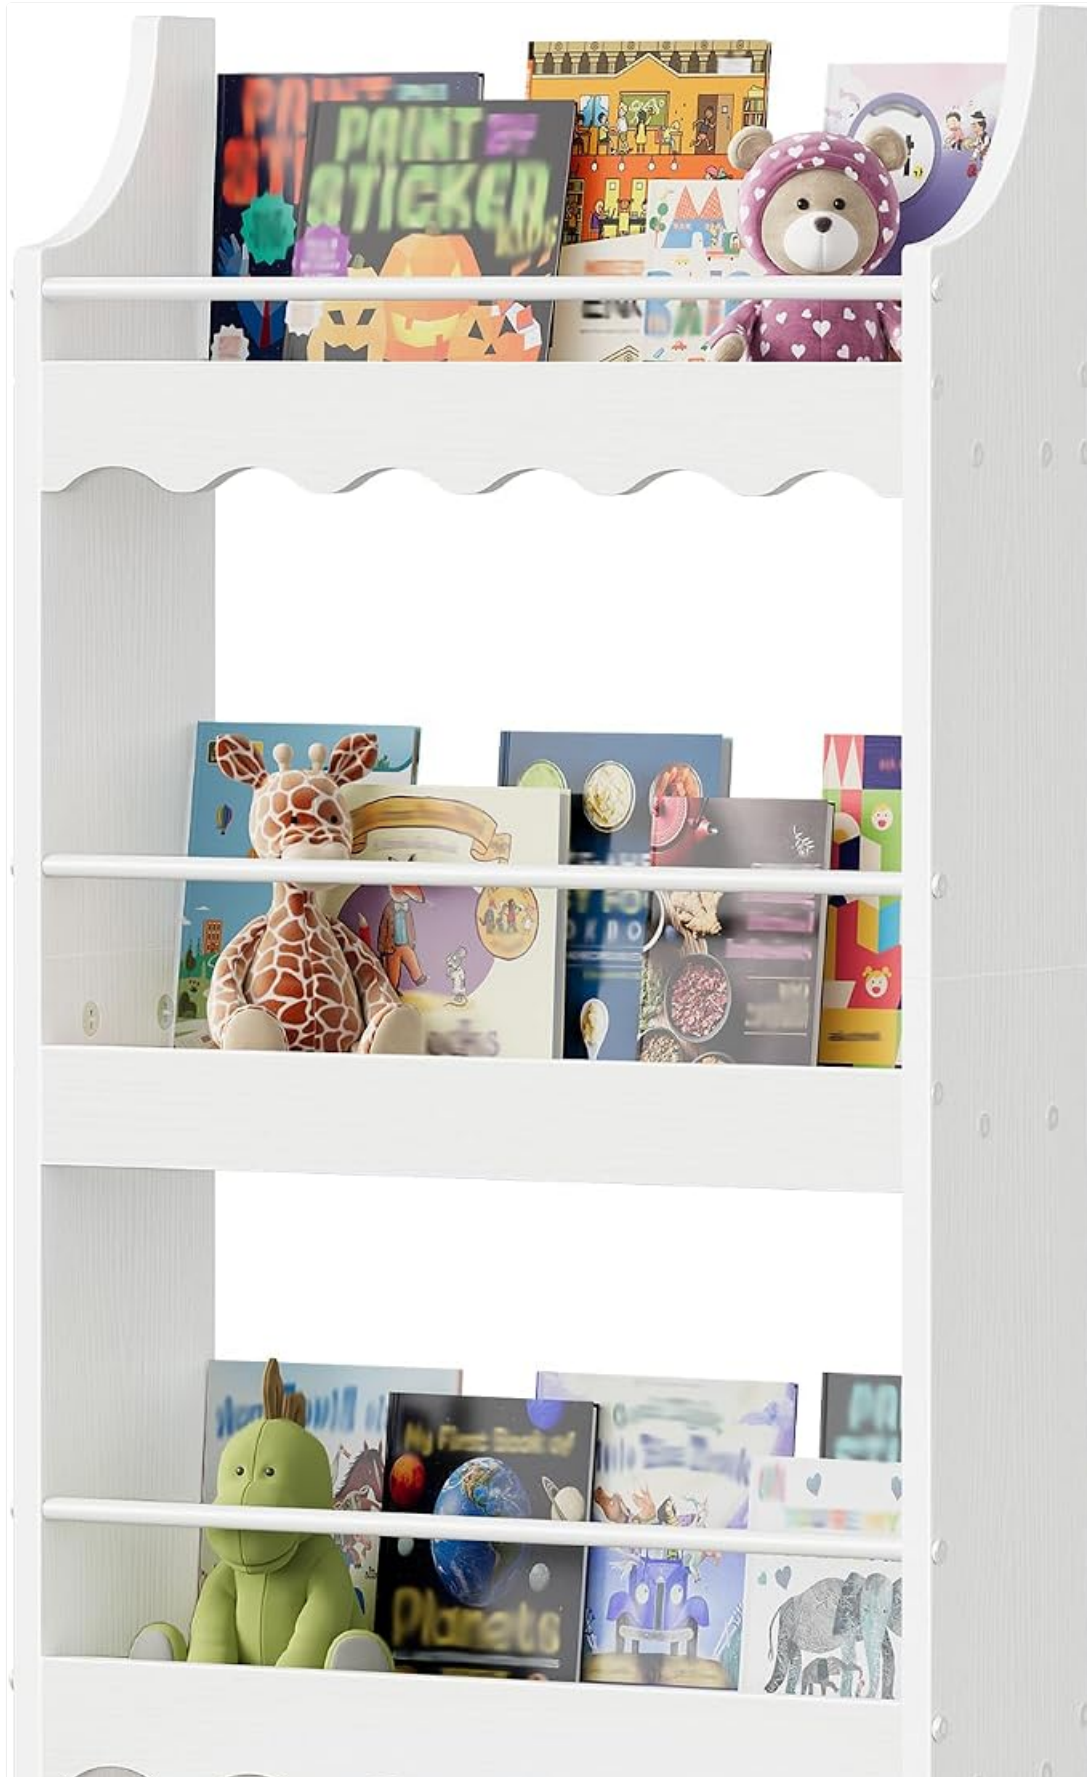 




Image: An assembled CHOEZON Kids Bookshelf, white with natural wood hooks, shown with a small backpack hanging from one of the hooks. This image illustrates the final assembled product before wall mounting.

Step 2: Determine Mounting Location

Choose a suitable wall location, preferably where wall studs can be utilized for maximum stability. Use a stud finder to locate studs. Mark the desired height and position for the bookshelf on the wall using a pencil and level.

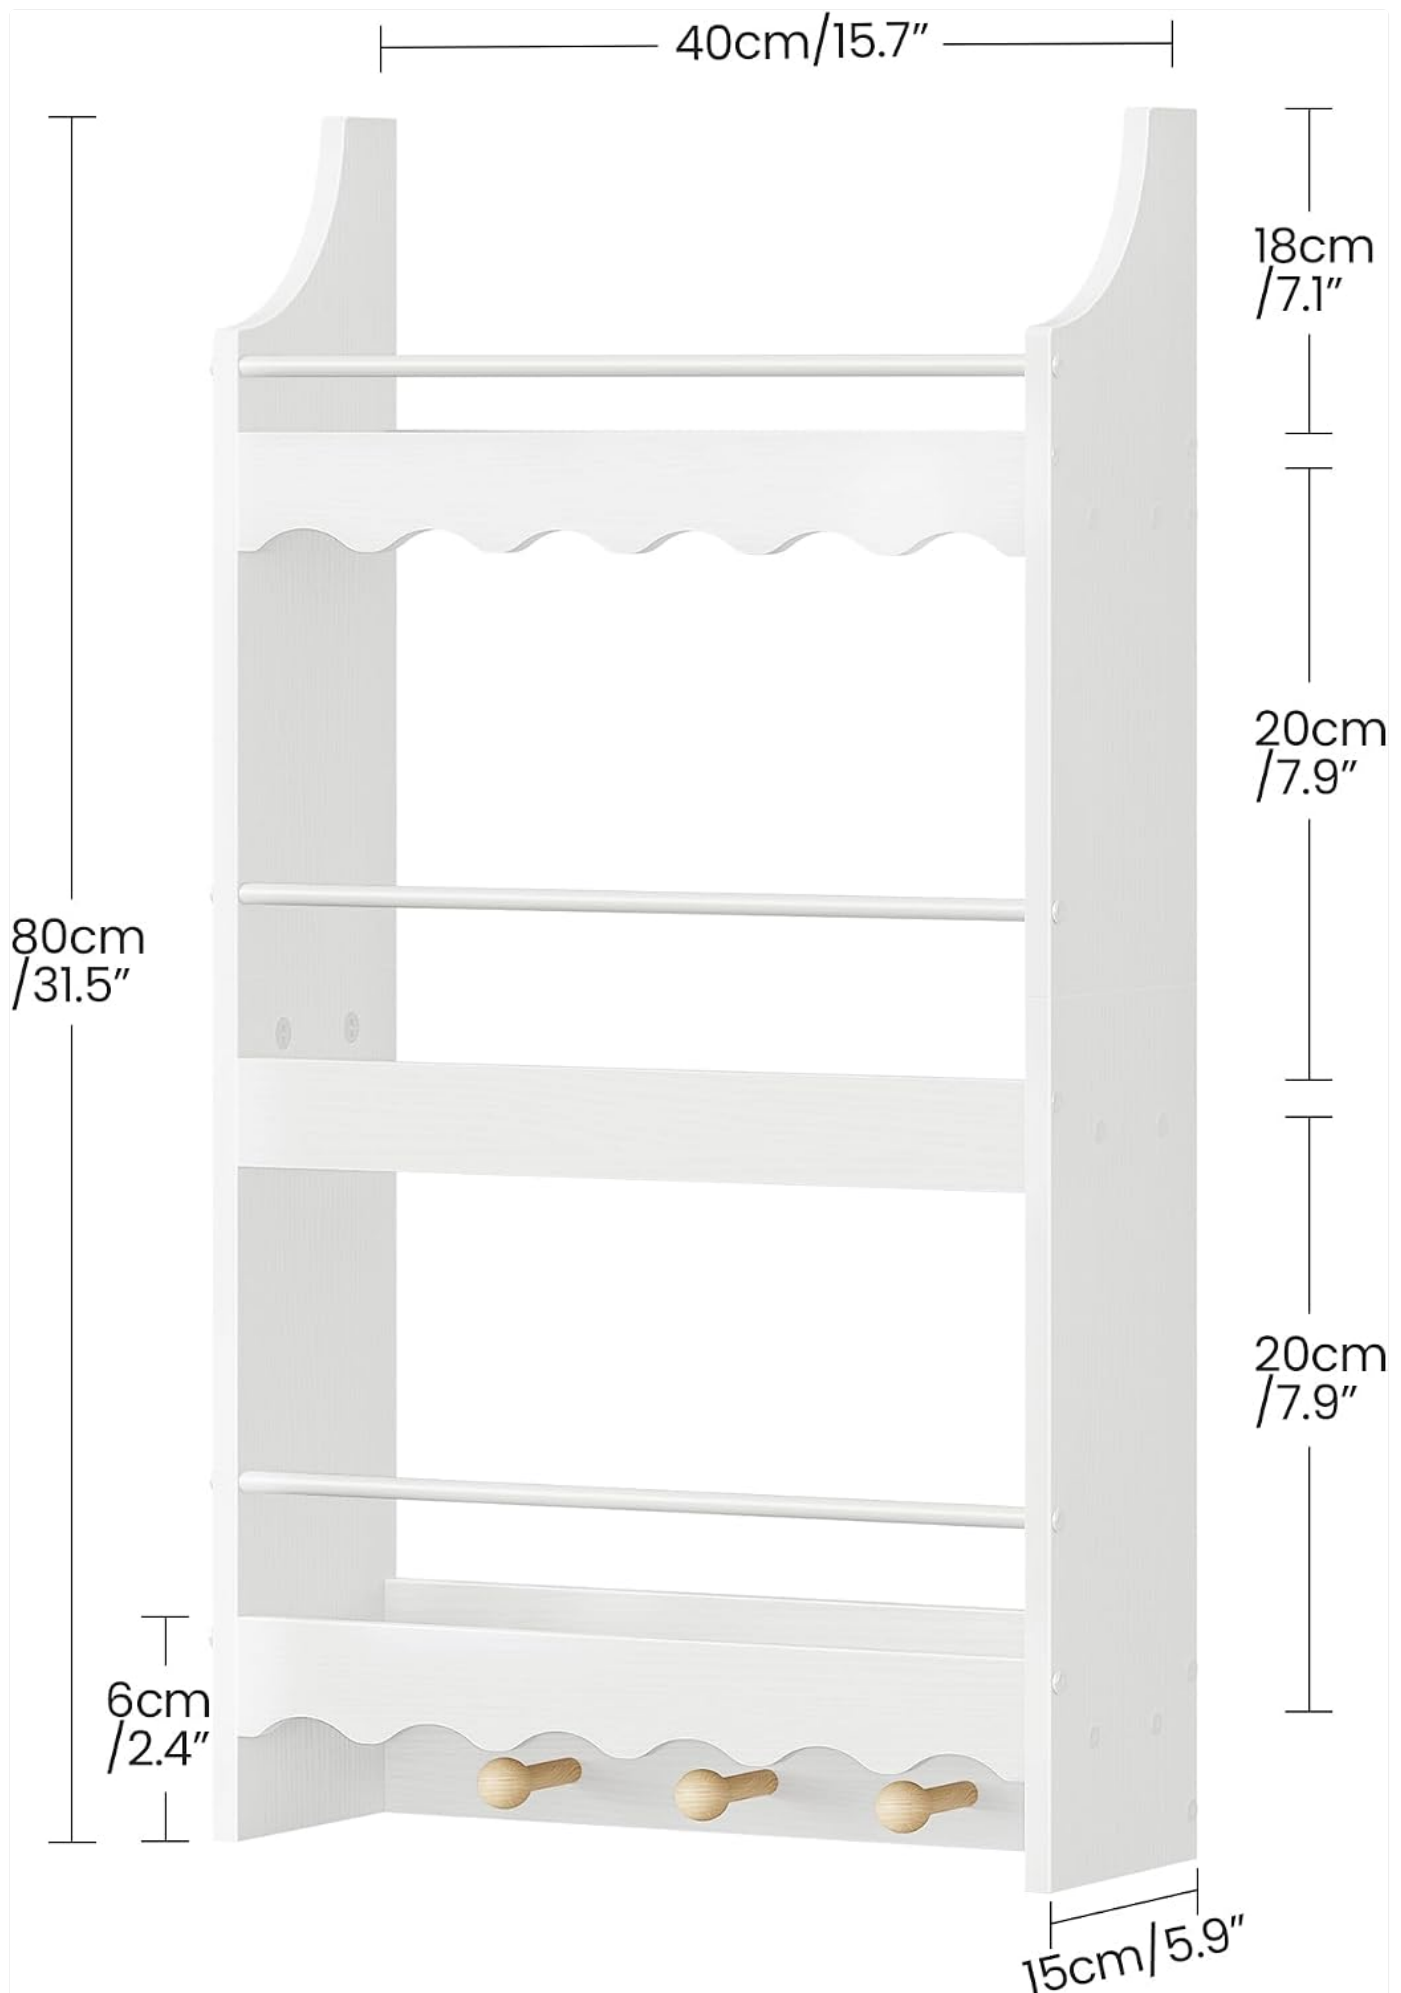 


Image: A technical diagram displaying the dimensions of the CHOEZON Kids Bookshelf. The overall height is 80cm (31.5"), width 40cm (15.7"), and depth 15cm (5.9"). Shelf heights and hook placement are also indicated.

Step 3: Drill Pilot Holes and Install Wall Anchors (if necessary)

Based on your marked positions, drill pilot holes. If mounting into drywall without a stud, insert appropriate wall anchors (provided in the accessory kit) into the pilot holes according to their instructions. If mounting into a stud, drill a pilot hole slightly smaller than the screw diameter.

Step 4: Mount the Bookshelf

Align the pre-drilled holes on the bookshelf with the pilot holes/anchors on the wall. Insert the mounting screws through the bookshelf and into the wall. Tighten securely until the bookshelf is firmly attached to the wall and does not wobble. Do not overtighten to avoid damaging the wood.



Image: Two CHOEZON Kids Bookshelves, white with natural wood hooks, mounted on a pink wall in a child's room. They are filled with books and toys, demonstrating the product's intended use and aesthetic.

OPERATING AND USAGE

The CHOEZON Wall-Mounted Kids Bookshelf is designed for organizing children's books, magazines, and small toys. Its 3-tier structure allows for categorized storage, promoting tidiness.

- **Book and Toy Storage:** Place books and small toys on the three shelves. The integrated guardrails help prevent items

from falling off.

- **Hook Usage:** Utilize the three wooden hooks located at the bottom of the bookshelf for hanging lightweight items such as small backpacks, hats, or decorative items.



AI-Constructed Synthetic Performer

Image: A young child sitting on the floor next to a CHOEZON Kids Bookshelf, which is filled with books. The image shows the bookshelf in a functional setting, encouraging reading and organization.



3 Wooden Hooks

Great for hanging kids' gear like clothes and bags.

Image: A close-up view of the three wooden hooks at the bottom of the CHOEZON Kids Bookshelf. The text overlay states "3 Wooden Hooks" and "Great for hanging kids' gear like clothes and bags," highlighting their utility.

Super Large Storage

Store kids' items, cultivate their self-organizing skills.

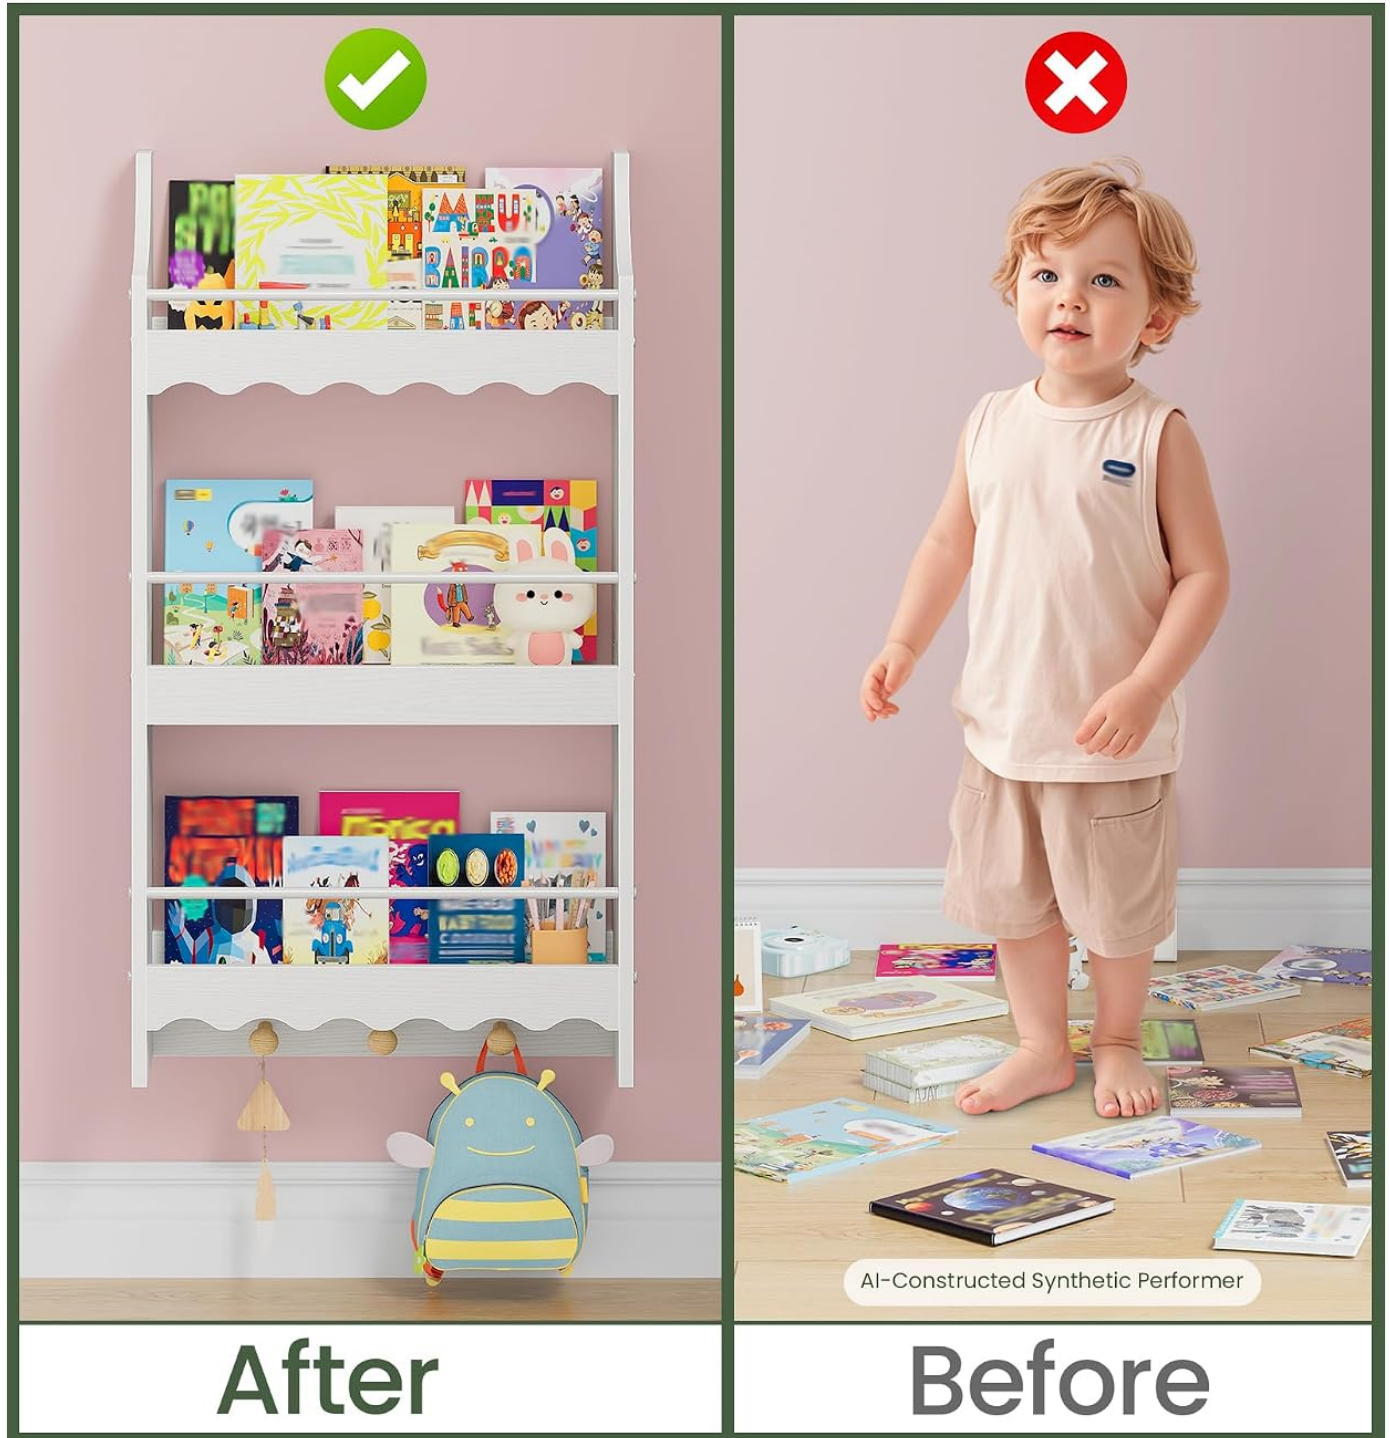 


Image: A split image showing a "Before" and "After" scenario. The "Before" side shows a child surrounded by scattered books and toys on the floor. The "After" side shows the CHOEZON Kids Bookshelf neatly organized with books and toys, demonstrating its ability to cultivate self-organizing skills and provide super large storage.

MAINTENANCE

Proper care will extend the life and appearance of your bookshelf.

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals, which can damage the engineered wood finish.

- **Inspection:** Periodically check all screws and mounting hardware to ensure they remain tight and secure. Retighten as necessary.
- **Avoid Moisture:** Do not expose the bookshelf to excessive moisture or humidity, as this can cause swelling or warping of the engineered wood.

TROUBLESHOOTING

If you encounter issues with your bookshelf, refer to the following common solutions.

- **Bookshelf feels unstable after mounting:**
 - Ensure all mounting screws are fully tightened.
 - Verify that the bookshelf is mounted into wall studs or that appropriate wall anchors for your wall type have been used correctly.
 - Check that the weight on the shelves is evenly distributed and not exceeding the recommended load.
- **Screws are visible:**
 - The design of this product may feature visible screw heads. If desired, screw covers (not included) can be purchased separately to conceal them.
- **Items falling off shelves:**
 - Ensure items are placed within the guardrails.
 - Avoid stacking items too high or placing unstable objects on the shelves.

SPECIFICATIONS

Brand	CHOEZON
Model Number	MCW43WB
Material Type	Engineered Wood
Product Dimensions (L x W x H)	14.99 x 39.88 x 80.01 cm (5.9 x 15.7 x 31.5 inches)
Item Weight	5.39 kg (11.88 lbs)
Number of Tiers	3
Special Features	Wall-Mounted, Space Saving, 3 Hooks, Guardrails, Wave Design

WARRANTY AND SUPPORT

For warranty information, please refer to the terms and conditions provided by your retailer at the time of purchase or contact CHOEZON customer support directly. If you require assistance with assembly, missing parts, or have any questions regarding your product, please reach out to the manufacturer's customer service department.

Contact information for CHOEZON customer support can typically be found on the product packaging or the official CHOEZON website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question