



Manuals.plus /

› PIXGOOD /

› PIXGOOD M518-EEA 11-inch Android 15 Tablet User Manual

PIXGOOD M518-EEA

PIXGOOD M518-EEA 11-inch Android 15 Tablet User Manual

Model: M518-EEA

1. INTRODUCTION

This manual provides comprehensive instructions for the PIXGOOD M518-EEA 11-inch Android 15 Tablet. It covers essential information for setup, operation, maintenance, and troubleshooting to ensure optimal use of your device. Please read this manual thoroughly before using your tablet.



Image 1.1: PIXGOOD M518-EEA Tablet with keyboard, mouse, pen, charger, and headphones.

2. WHAT'S IN THE BOX

The PIXGOOD M518-EEA Tablet package includes the following items:

- 1 x PIXGOOD M518-EEA 11-inch Android 15 Tablet
- 1 x Tablet Case
- 1 x Wireless Bluetooth Keyboard
- 1 x Wireless Mouse
- 1 x Capacitive Pen
- 1 x USB Cable
- 1 x OTG Cable
- 1 x EU Charger
- 1 x Earphones

- 1 x User Manual

3. INITIAL SETUP

3.1 Charging the Tablet

Before first use, fully charge the tablet. Connect the provided USB cable to the tablet's Type-C port and the other end to the EU charger. Plug the charger into a power outlet. The charging indicator will show the charging status.



Image 3.1: Tablet connected to charger via Type-C port, showing charging icon.

3.2 Powering On/Off

- **To Power On:** Press and hold the Power button until the screen lights up.
- **To Power Off:** Press and hold the Power button until a menu appears. Select "Power off" and confirm.

- **To Restart:** Press and hold the Power button until a menu appears. Select "Restart" and confirm.

3.3 Initial Android Setup

Upon first power-on, follow the on-screen prompts to configure your tablet:

1. Select your preferred language.
2. Connect to a Wi-Fi network.
3. Sign in with your Google account or create a new one.
4. Review and accept the terms and conditions.
5. Set up screen lock (PIN, pattern, or password).

3.4 Connecting Accessories

The PIXGOOD M518-EEA Tablet comes with several accessories to enhance your experience.

- **Bluetooth Keyboard and Mouse:**
 - a. Ensure the keyboard and mouse are charged and powered on.
 - b. On your tablet, go to **Settings > Connected devices > Bluetooth**.
 - c. Enable Bluetooth and scan for devices.
 - d. Select the keyboard and mouse from the list to pair them.
- **Capacitive Pen:** The pen does not require pairing. Simply use it to interact with the screen.
- **Earphones:** Plug the 3.5mm jack earphones into the tablet's headphone port.
- **OTG Cable:** Use the OTG cable to connect USB devices such as flash drives to your tablet.

4. OPERATING YOUR TABLET

4.1 Display Features

The tablet features an 11-inch IPS Full HD INCELL screen with a resolution of 2000x1200 pixels, offering clear visuals. It supports Widevine L1 for high-definition streaming content.

Smooth Touch & better light transmission



Image 4.1: Visual representation of the 11-inch screen with IPS, INCELL, and 2000x1200 resolution features.

- **Dim Mode:** For eye protection, activate Dim Mode in display settings.
- **Screen Projection:** Connect your tablet to a larger display for screen mirroring or extension.

4.2 Performance and Storage

Equipped with an Octa-Core T606 processor, the tablet provides efficient performance for multitasking and applications. It includes 12GB of built-in RAM, expandable by an additional 24GB for a total of 36GB, and 256GB of internal storage (ROM). Storage can be further expanded up to 2TB using a microSD card.

Powerful Storage Space

M581-EEA tablet is configured with 12GB of RAM, which can be expanded to 24GB via settings for a total of 36GB. 256GB High-speed storage for worry-free performance



36(12+24)GB RAM

Seamless multitasking



256GB ROM

Larger Storage Space



1TB Expandable

Extra memory expansion

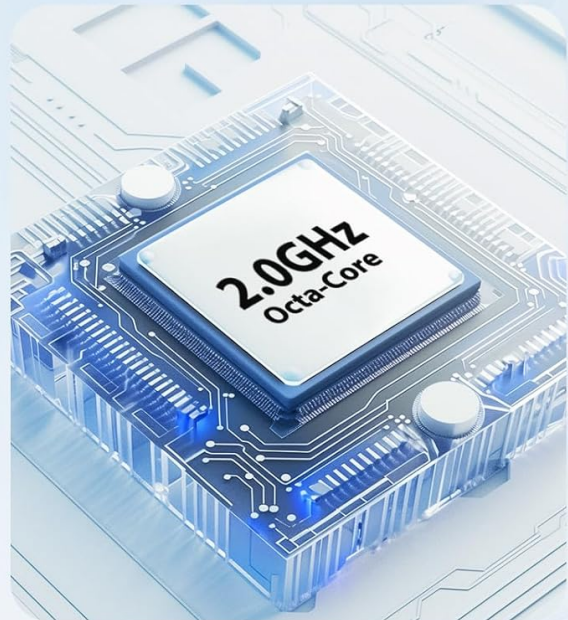 


Image 4.2: Illustration of the tablet's 36GB RAM, 256GB ROM, and 1TB expandable storage capabilities.

 
4.3 Connectivity

- **Wi-Fi:** Supports 2.4G and 5G dual-band Wi-Fi for stable and fast internet connections. Access Wi-Fi settings via **Settings > Network & internet > Wi-Fi**.
- **Bluetooth 5.0:** For connecting wireless peripherals like headphones, keyboards, and mice. Manage Bluetooth devices via **Settings > Connected devices > Bluetooth**.
- **GPS:** Integrated GPS allows for navigation and location-based services.

4.4 Camera

The tablet features an 8MP front camera for video calls and selfies, and a 13MP rear camera with an LED flash for capturing photos and videos.

Immerse in Stereo Audio

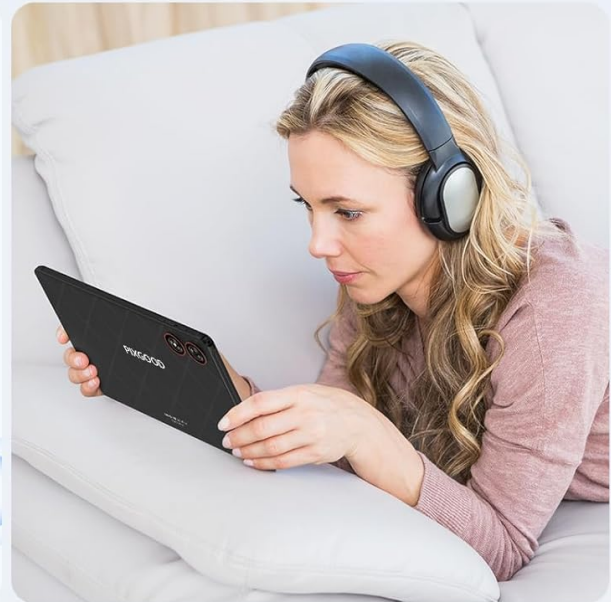

Cherish Every shot

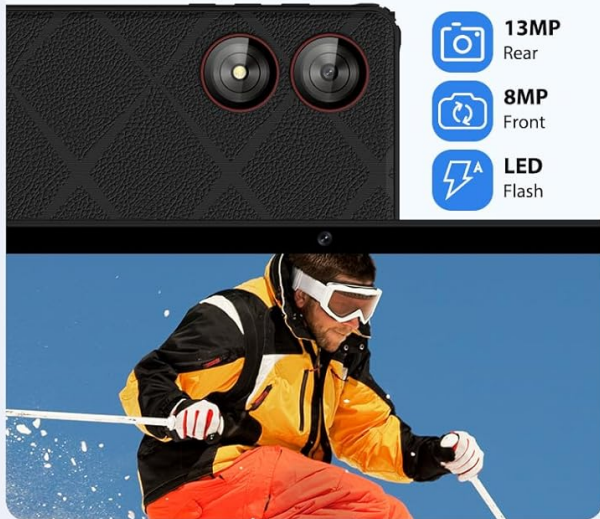 


Image 4.3: Details on the 13MP rear and 8MP front cameras, with examples of photo capture.

4.5 Audio

Experience stereo sound through the dual speakers. A 3.5mm headphone jack is available for private listening.

4.6 Battery Management

The tablet is equipped with a 9000mAh battery. To optimize battery life:

- Adjust screen brightness.
- Close unused applications.
- Disable Wi-Fi or Bluetooth when not in use.
- Use power-saving modes available in Android settings.

5. MAINTENANCE

5.1 Cleaning Your Tablet

- Use a soft, lint-free cloth to clean the screen and body.
- Avoid using harsh chemicals, abrasive cleaners, or aerosol sprays.
- Ensure the tablet is powered off before cleaning.

5.2 Battery Care

- Avoid exposing the tablet to extreme temperatures.
- Do not leave the tablet fully charged or fully discharged for extended periods.
- Use only the provided charger or a certified compatible charger.

5.3 Software Updates

Regularly check for and install software updates to ensure optimal performance, security, and access to new features. Go to **Settings > System > System update** to check for updates.

6. TROUBLESHOOTING

If you encounter issues with your tablet, refer to the following common solutions:

Problem	Solution
Tablet does not power on.	Ensure the battery is charged. Connect the charger and wait a few minutes before attempting to power on again.
Wi-Fi connection issues.	Restart the tablet and your Wi-Fi router. Check Wi-Fi settings to ensure the correct network is selected and the password is entered correctly.
Slow performance.	Close unused applications. Clear cache from apps. Consider uninstalling unnecessary apps or moving large files to external storage. Restart the tablet.
Accessories (keyboard/mouse) not connecting.	Ensure accessories are charged and in pairing mode. Re-pair them via Bluetooth settings.
Screen not responding.	Restart the tablet. If the issue persists, perform a factory reset (data will be lost, back up important files).

If the problem persists after trying these solutions, please contact customer support.

7. SPECIFICATIONS

Below are the technical specifications for the PIXGOOD M518-EEA Tablet:

Feature	Detail
Brand	PIXGOOD
Model	M518-EEA
Operating System	Android 15
Processor	Octa-Core (MediaTek, 2 GHz)
RAM	36 GB (12GB + 24GB expansion)
Internal Storage (ROM)	256 GB
Expandable Storage	Up to 2 TB (MicroSD)
Screen Size	11 Inches
Screen Type	INCELL IPS Capacitive
Screen Resolution	2000 x 1200 pixels
Rear Camera	13 MP
Front Camera	8 MP
Wi-Fi	2.4G/5G Dual-Band (802.11ac, b, g, n)
Bluetooth	Bluetooth 5.0
Ports	1 x Type-C, 1 x 3.5mm Headphone Jack
Battery Capacity	9000 mAh
Battery Life (Average)	6 hours (video playback)
Weight	448 grams
Dimensions	34.5 x 19.7 x 4.1 cm (packaging)

8. WARRANTY AND SUPPORT

8.1 Warranty Information

The PIXGOOD M518-EEA Tablet comes with a **36-month warranty** from the date of purchase. This warranty covers manufacturing defects and ensures peace of mind regarding your product's quality.

PIXGOOD



Please retain your proof of purchase for warranty claims.

8.2 Customer Support

For any questions, technical assistance, or warranty claims, please contact PIXGOOD customer support through the Amazon platform where you purchased the product. Our support team will assist you with any issues you may encounter.

To contact support via Amazon:

1. Go to your Amazon order history.
2. Locate your PIXGOOD M518-EEA Tablet order.
3. Select "Contact Seller" or "Get Product Support".