

[manuals.plus](#) /

› [KAER](#) /

› [KAER 2-3 Gun Safe Electronic Security Cabinet Instruction Manual](#)

KAER 2-3GUN SAFE

KAER 2-3 Gun Safe Electronic Security Cabinet Instruction Manual

Model: 2-3GUN SAFE

1. PRODUCT OVERVIEW

The KAER 2-3 Gun Safe is an electronic security cabinet designed for the secure storage of rifles and pistols. It features quick access via a smart numeric keypad and traditional key entry, ensuring your firearms are protected from unauthorized access. The robust steel construction, adjustable interior, and easy installation make it a reliable choice for home security.



LARGE ANGLE 120°



Maximum opening angle 120°



Quicker and more convenient access

Image 1: The KAER 2-3 Gun Safe, illustrating its slim design and overall dimensions of 52"(H) x 9.85"(W) x 8.66"(D).

2. IMPORTANT SAFETY INFORMATION

- Always follow the provided assembly instructions carefully.
- Keep the safe away from heat sources and avoid placing heavy objects on top.
- Never leave firearms unattended while loading or unloading.
- Always keep the safe locked when not in use.
- Keep the emergency keys and external power pack out of the safe to prevent unauthorized access, especially if the battery dies.
- Always use the safe in accordance with local laws and regulations regarding firearm storage and safety.

3. WHAT'S INCLUDED

Your KAER 2-3 Gun Safe package includes the following components:

- 1 x Rifle Gun Safe Cabinet

- 2 x Backup Keys
- 4 x Anchor Bolts for Mounting
- 1 x Emergency Battery Pack
- 1 x Instruction Manual
- Built-in Removable Storage Shelf
- Removable Gun Rack
- Pistol Bags (x2)

4. ASSEMBLY INSTRUCTIONS

The KAER 2-3 Gun Safe comes largely pre-assembled. Follow these steps for final setup and optional mounting:

1. **Unpacking:** Carefully remove the safe from its packaging. Inspect for any damage. Keep all packaging materials for at least 30 days in case of returns.
2. **Battery Installation:** Locate the battery compartment inside the safe door. Install 4 AA alkaline batteries (not included). Ensure correct polarity.
3. **Interior Setup:**
 - Install the removable storage shelf at your desired height.
 - Place the removable gun rack to secure rifles.
 - Utilize the two pistol bags on the inside of the door for handgun storage.
4. **Mounting (Optional):** For enhanced security, it is highly recommended to mount the safe to a wall or floor. The safe comes with pre-punched holes in the back and bottom.
 - Position the safe in the desired location.
 - Mark the drilling points through the pre-punched holes.
 - Drill holes into the wall or floor using an appropriate drill bit.
 - Insert the provided anchor bolts and tighten them securely to fix the safe in place.

Video 1: A step-by-step guide on how to assemble the gun safe, including panel attachment and interior setup.



Image 2: Visual guide for easy installation on a wall or floor using the provided expansion bolts.

5. INITIAL SETUP & OPERATION

5.1. Unlocking Methods

Your KAER gun safe offers two primary unlocking methods: electronic keypad and traditional key access.

TWO UNLOCKING METHODS



UNLOCKING METHOD



+



Digital Password (3-12 Digits)



+



Emergency Key (2 keys)

WHEN THE BATTERY IS EXHAUSTED, YOU CAN USE THE EXTERNAL BATTERY BOX
TO ENTER THE GUN SAFE.

Image 3: The smart lock keypad and the hidden keyhole for manual access.

Electronic Keypad

- 1. Initial Password:** The factory default management password is