



[Manuals.plus](#) /

- › [Amazon Basics](#) /
- › Amazon Basics Whirling Rotating Lawn Sprinkler Instruction Manual

Amazon Basics B0F7LR6XSQ

Amazon Basics Whirling Rotating Lawn Sprinkler Instruction Manual

Model: B0F7LR6XSQ

[Information](#) [Features](#) [Setup](#) [Introduction](#) [Safety](#) [Operation](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#)

1. INTRODUCTION

Thank you for choosing the Amazon Basics Whirling Rotating Lawn Sprinkler. This manual provides essential information for the safe and efficient use of your new sprinkler. Please read it thoroughly before first use and retain it for future reference.



Image 1.1: The Amazon Basics Whirling Rotating Lawn Sprinkler.

2. SAFETY INFORMATION

- Always ensure the water supply is turned off before connecting or disconnecting the sprinkler.
- Do not leave the sprinkler unattended for extended periods, especially in areas with high water pressure, to prevent overwatering or potential damage.
- Keep children and pets away from the sprinkler during operation to avoid accidental injury or damage to the unit.
- Do not use the sprinkler with water temperatures exceeding 104°F (40°C).
- Store the sprinkler indoors during freezing temperatures to prevent damage from ice expansion.

3. KEY FEATURES

- **Coverage Area:** Approximately 1500 square feet under 60 PSI water pressure.
- **Adjustable Design:** Three arms with adjustable angles (from 45 to 90 degrees) for precise control.
- **Optimal Range:** Features 12 multi-angle nozzles.
- **Durable Construction:** Made with a durable plastic base and weighted stay-in-place design.
- **Comfort Grip:** TPR grip side handles for a comfortable hold and easy positioning.

- **Universal Compatibility:** Fits all standard garden hoses with its 3/4-inch NH thread.
- **Leak-Free Seal:** Includes rubber gasket filter washers to ensure a leak-free connection.

Key features

Covers up to 1500 square feet of lawn area

Adjustable arms and 12 multi-angle nozzles for precision

Weighted base with comfortable grip handles for stability



Image 3.1: Visual representation of the sprinkler's key features, including coverage, adjustable arms, and weighted base.

4. SETUP INSTRUCTIONS

1. **Unpack the Sprinkler:** Carefully remove the sprinkler from its packaging.
2. **Inspect for Damage:** Check the sprinkler for any visible damage. If damaged, do not use and contact customer support.
3. **Connect to Hose:** Attach your standard 3/4-inch garden hose to the sprinkler's inlet connection. Ensure the rubber gasket filter washer is properly seated to prevent leaks. Tighten securely by hand.



Image 4.1: Detail of the hose connection point, showing the integrated filter washer.

4. **Position the Sprinkler:** Place the sprinkler in the desired area of your lawn or garden. The weighted base helps keep it stable during operation.

5. OPERATING INSTRUCTIONS

1. **Turn on Water Supply:** Slowly turn on the water supply to your garden hose. The sprinkler arms will begin to rotate, distributing water.
2. **Adjust Spray Angle:** The three sprinkler arms feature adjustable nozzles. To change the spray pattern and coverage, rotate the individual nozzles on each arm. You can adjust the angle from 45 to 90 degrees to achieve a wider or narrower spray.



Image 5.1: Detail of the multi-angle nozzles, illustrating their adjustability.

3. **Monitor Coverage:** Observe the sprinkler's coverage area. Adjust its position or nozzle angles as needed to ensure even watering across your desired area.
4. **Turn off Water:** When watering is complete, turn off the water supply at the faucet.

Note: Water pressure directly affects the coverage area. For optimal 1500 sq ft coverage, a water pressure of approximately 60 PSI is recommended.

6. MAINTENANCE

- **Cleaning:** Periodically check the nozzles and the inlet filter for debris or mineral buildup. Clean with a soft brush and rinse with water.
- **Storage:** Before the first frost, disconnect the sprinkler from the hose, drain any remaining water, and store it in a dry, protected area to prevent freezing damage.
- **Gasket Inspection:** Regularly inspect the rubber gasket filter washer for wear and tear. Replace if necessary to maintain a leak-free seal.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Sprinkler not rotating or rotating slowly.	Low water pressure; clogged nozzles; debris in the rotating mechanism.	Increase water pressure; clean nozzles; check for and remove any debris.
Uneven spray pattern or reduced coverage.	Clogged nozzles; incorrect nozzle angle adjustment; low water pressure.	Clean nozzles; adjust nozzle angles; ensure adequate water pressure.
Water leaking from hose connection.	Loose connection; damaged or missing rubber gasket filter washer.	Tighten hose connection; inspect and replace the rubber gasket filter washer if damaged or missing.

8. SPECIFICATIONS

Brand: Amazon Basics

Model: B0F7LR6XSQ

Color: Black

Style: Whirling Rotating Sprinklers

Coverage Area: Up to 1500 sq ft (at 60 PSI)

Adjustable Arms: 3 arms, 45 to 90-degree angle adjustment

Nozzles: 12 multi-angle nozzles

Hose Compatibility: Standard 3/4-inch NH thread

Material: Durable plastic base

Item Dimensions (L x W x H): 9.4 x 7.52 x 4.07 inches

Item Weight: 1.44 Pounds

UPC: 840324435566

Dimensions



Image 8.1: Diagram showing the length, width, and height dimensions of the sprinkler.

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the Amazon Basics official website or contact Amazon customer service directly. Keep your purchase receipt for warranty claims.

Online Support: Visit [Amazon Basics Store](#)