

deli E91511

Deli Gaming Table E91511 Instruction Manual

Model: E91511 | Dimensions: 120 x 60 x 75 cm

INTRODUCTION

This manual provides essential information for the assembly, operation, maintenance, and troubleshooting of your Deli Gaming Table E91511. Please read these instructions carefully before assembly and use to ensure proper function and longevity of your product.

SAFETY WARNINGS

- Always assemble the desk according to the provided instructions.
- Ensure the desk is properly anchored to the floor to prevent tipping, especially when using heavy setups.
- Be cautious when moving the desk, as it may require two people due to its size and weight.
- Do not overload the desk beyond its specified weight capacity.
- Keep small parts away from children during assembly.

PACKAGE CONTENTS

Before beginning assembly, verify that all components are present and undamaged. Refer to the included assembly instructions for a detailed list of parts and hardware. Typically, the package includes:

- Desktop surface (Metal and Composite)
- Desk legs (K-type carbon steel frame)
- Crossbars and support beams
- Assembly hardware (screws, bolts, washers)
- Assembly tools (if included, otherwise standard tools like a screwdriver may be required)

- Instruction manual

SETUP AND ASSEMBLY

The Deli Gaming Table E91511 is designed for quick assembly with minimal tools. Follow the step-by-step instructions provided in the separate assembly guide included with your product. Ensure you have adequate space for assembly and consider having a second person assist with lifting and positioning larger components.

General Assembly Steps:

1. Unpack all components and lay them out on a clean, soft surface to prevent scratches.
2. Attach the K-shaped table legs to the main support frame using the provided hardware. Ensure all connections are secure.
3. Carefully place the desktop surface onto the assembled leg frame. Align the pre-drilled holes.
4. Secure the desktop to the frame using the remaining hardware. Do not overtighten.
5. Verify all screws and bolts are tightened and the desk is stable before placing any equipment on it.

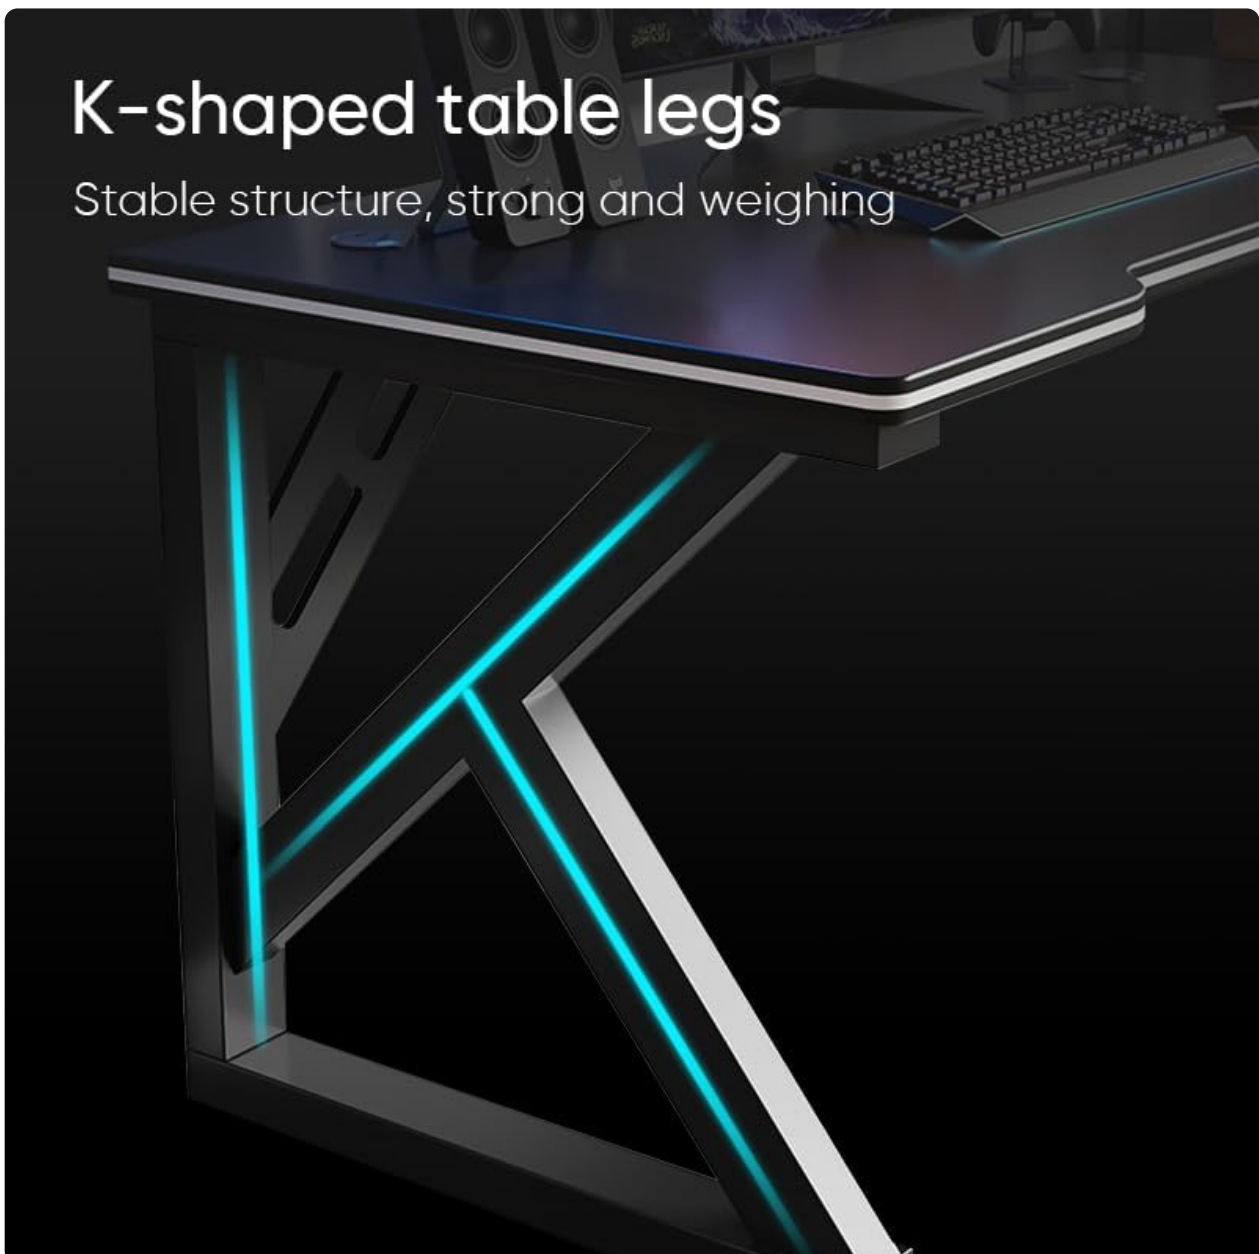


Image: Close-up of the K-shaped table legs, demonstrating the stable structure.

OPERATING INSTRUCTIONS

The Deli Gaming Table E91511 offers a spacious and stable surface for various uses, including gaming, streaming, home office work, and student workstations.

- **Wider Gaming Surface:** The 120 cm width accommodates dual monitors or extra peripherals, providing ample space for your setup.
- **Ergonomic Design:** The desk is designed for comfortable use, allowing for extended periods of activity without discomfort.
- **Cable Management:** Utilize the integrated 3D cable management box (if applicable) to keep your cables organized and your workspace tidy.
- **Load-Bearing Capacity:** The desk is engineered for heavy setups and consistent use. Ensure weight is distributed evenly.



Image: A gaming setup on the Deli Gaming Table, illustrating its spacious surface.

Ergonomic design

Comfortable and does not push the abdomen



Image: Top-down view of a user at the Deli Gaming Table, highlighting ergonomic design.

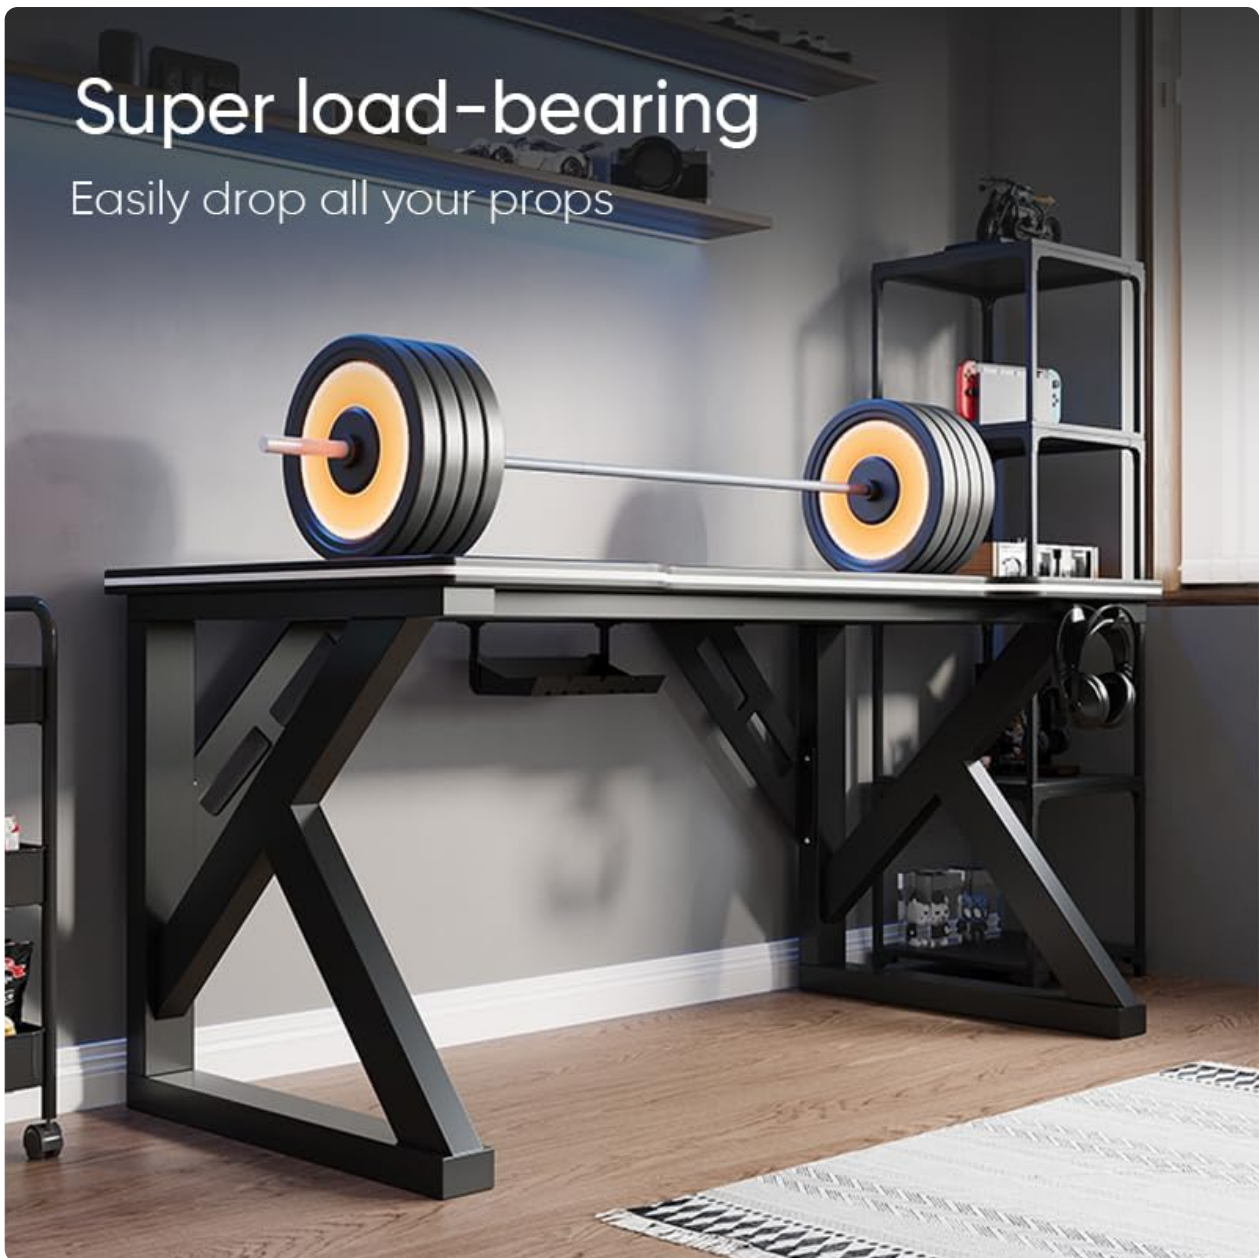


Image: The Deli Gaming Table demonstrating its load-bearing capability.

MAINTENANCE

Regular maintenance will help preserve the appearance and functionality of your Deli Gaming Table.

- **Cleaning:** Wipe the desktop surface and legs with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that could damage the painted finish or material.
- **Spills:** Clean up spills immediately to prevent staining or damage to the surface.
- **Hardware Check:** Periodically check all screws and bolts to ensure they remain tight. Retighten if necessary to maintain stability.
- **Rust Prevention:** While the desk is made of metal, prolonged exposure to moisture can lead to rust. Keep the desk in a dry environment and wipe away any moisture promptly.

TROUBLESHOOTING

Desk is unstable or wobbly:

- Ensure all assembly screws and bolts are fully tightened.
- Check that the desk is on a level surface. Adjust floor glides if present.
- Verify that all parts are correctly assembled according to the instruction manual.

Parts are missing or damaged:

- Review the package contents list in your assembly manual.
- Contact customer support with your model number and a description of the missing or damaged part.

Difficulty with assembly:

- Re-read the assembly instructions carefully, paying attention to diagrams.
- Ensure you are using the correct hardware for each step.
- If issues persist, consider seeking assistance from another person.

SPECIFICATIONS



Image: Dimensions of the Deli Gaming Table.

Feature	Detail
Model Number	E91511
Dimensions (W x D x H)	120 cm x 60 cm x 75 cm
Color	Black
Material Type	Metal and Composite (E1 grade material)
Frame Material	K-type Carbon Steel Frame
Finish Type	Painted
Item Weight	13000 Grams
Assembly Required	Yes
Recommended Uses	Gaming, Streaming, Home Office, Student Workstation



Image: The Deli Gaming Table highlighting E1 grade material.

WARRANTY INFORMATION

For specific warranty details regarding your Deli Gaming Table E91511, please refer to the warranty card included with your purchase or visit the official Deli website. Warranty terms typically cover manufacturing defects under normal use conditions.

CUSTOMER SUPPORT

If you have any questions, require assistance with assembly, or need to report a missing/damaged part, please contact Deli customer support through the following channels:

- **Website:** Visit the official Deli website for support resources and contact forms.
- **Email:** Refer to your purchase documentation for customer service email addresses.
- **Phone:** Check the product packaging or official website for customer service phone numbers.

Please have your model number (E91511) and proof of purchase ready when contacting support.