

[Manuals.plus](#) /

› [INSIGNIA](#) /

› INSIGNIA 32" Class F40 Series LED Full HD Smart Fire TV User Manual

INSIGNIA NS-32F401NA26

INSIGNIA 32" Class F40 Series LED Full HD Smart Fire TV

Model: NS-32F401NA26

INTRODUCTION

This manual provides essential information for the setup, operation, and maintenance of your INSIGNIA 32" Class F40 Series LED Full HD Smart Fire TV. Please read this manual thoroughly before using your television to ensure proper functionality and safety.



SAFETY INFORMATION

Always follow basic safety precautions when using this television to reduce the risk of fire, electric shock, and injury.

- Do not expose the TV to rain or moisture.
- Do not block ventilation openings.
- Do not place the TV on an unstable cart, stand, tripod, bracket, or table.
- Unplug the TV during lightning storms or when unused for long periods.
- Refer all servicing to qualified service personnel.

WHAT'S IN THE BOX

Verify that all components are present before proceeding with the setup.

- INSIGNIA 32" Class F40 Series LED Full HD Smart Fire TV
- Alexa Voice Remote
- Power Cable
- TV Stand (2 pieces)
- Screws for TV Stand
- Quick Setup Guide

SETUP

1. Unpacking and Placement

Carefully remove the TV from its packaging. Place the TV on a stable, flat surface or prepare for wall mounting. Ensure adequate ventilation around the TV.



Angled view of the television, showing its slim profile.

2. Attaching the TV Stand (Optional)

If not wall-mounting, attach the two stand pieces to the bottom of the TV using the provided screws. Ensure the stands are securely fastened.

3. Connecting Devices

Connect your external devices such as Blu-ray players, game consoles, soundbars, or cable/antenna to the appropriate ports on the TV.



● — **3.5 mm jack**
Digital optical
USB 2.0
HDMI 1 (ARC)
HDMI 2

Detailed view of the TV's side input panel, including HDMI, USB, digital optical, and 3.5mm audio ports.

- **HDMI Ports (HDMI 1 ARC, HDMI 2):** For high-definition video and audio from devices like Blu-ray players, game consoles, or streaming boxes. HDMI 1 supports Audio Return Channel (ARC) for simplified audio connection to compatible soundbars or AV receivers.
- **Composite (AV) Jacks:** For older devices using RCA cables (yellow for video, white/red for audio).
- **Digital Optical Output:** For connecting to a soundbar or home theater system for digital audio.
- **USB Port (USB 2.0):** For connecting USB storage devices to view photos or play media.
- **Headphone Jack (3.5mm):** For connecting headphones.
- **Coaxial (ANT/CABLE) Jack:** For connecting an antenna or cable TV feed.



Composite video RCA analog Cable/Antenna

Detailed view of the TV's rear input panel, showing composite video (AV) and antenna/cable input ports.

4. Power On and Initial Setup

Connect the power cable to the TV and then to a power outlet. Press the power button on the TV or the Alexa Voice Remote to turn on the TV. Follow the on-screen instructions to complete the initial setup, which includes connecting to your Wi-Fi network, signing into your Amazon account, and pairing the Alexa Voice Remote.


OPERATING YOUR TV

Basic Operation

- **Power:** Press the power button on the remote or TV to turn it on or off.
- **Input Selection:** Use the input button on the remote to switch between connected devices (HDMI, AV, TV Tuner).
- **Navigation:** Use the directional pad and select button on the remote to navigate menus and select options.

Alexa Voice Control

Your Fire TV comes with an Alexa Voice Remote, allowing you to control your TV and access content using voice commands.

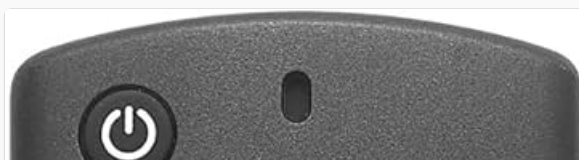





The Alexa Voice Remote, featuring dedicated buttons for streaming services and a microphone button for voice commands.

Press and hold the microphone button on the remote, then speak your command. You can ask Alexa to:

- Find movies and TV shows (e.g., "Find action movies").
- Launch apps (e.g., "Open Netflix").
- Control playback (e.g., "Pause", "Fast forward").
- Switch inputs (e.g., "Switch to HDMI 1").
- Check weather, sports scores, or set timers.

Streaming Services with Fire TV

Access a vast library of streaming content directly from your TV. The Fire TV interface provides access to thousands of channels, apps, and Alexa skills.

Streaming Services

Access thousands of shows with Fire TV



The television screen showing the Fire TV interface with various streaming service applications like Apple TV+, Netflix, HBO Max, and Disney+.

Popular services include Prime Video, Netflix, Hulu, HBO Max, YouTube, Apple TV+, Disney+, ESPN+, Sling TV, and Paramount+. (Note: Separate subscriptions may be required for some services.)

Parental Controls

Manage content access for children by blocking programs based on ratings or entire channels. A PIN can be set to restrict access to certain content.

DTS Virtual-X Sound

Experience immersive, three-dimensional audio directly from your TV's built-in speakers, enhanced by DTS Virtual-X technology.

Apple AirPlay

This TV supports Apple AirPlay, allowing you to stream content directly from your Apple devices (iPhone, iPad, Mac) to

the television.

MAINTENANCE

To ensure the longevity and optimal performance of your TV, follow these maintenance guidelines:

- **Cleaning the Screen:** Gently wipe the screen with a soft, lint-free cloth. For stubborn marks, use a screen cleaner specifically designed for electronics, applied to the cloth, not directly to the screen.
- **Cleaning the Cabinet:** Use a soft, dry cloth to wipe the TV cabinet. Do not use abrasive cleaners or solvents.
- **Ventilation:** Ensure the ventilation openings on the back of the TV are not blocked to prevent overheating.
- **Power Cord:** Regularly check the power cord for any damage. If damaged, replace it immediately with an approved cord.

TROUBLESHOOTING

If you encounter issues with your TV, refer to the following common problems and solutions:

Problem	Possible Solution
No power	Check if the power cable is securely connected to the TV and the power outlet. Try a different outlet.
No picture, but sound is present	Ensure the correct input source is selected. Check cable connections to external devices.
No sound, but picture is present	Check volume level and mute settings. Verify audio cable connections. If using HDMI ARC, ensure ARC is enabled on both TV and sound device.
Remote control not working	Replace batteries. Ensure there are no obstructions between the remote and the TV. Re-pair the Alexa Voice Remote if necessary (press and hold Home button for 10 seconds).
Cannot connect to Wi-Fi	Check your Wi-Fi password. Restart your router and modem. Move the TV closer to the router or use a Wi-Fi extender.
Apps are slow or freezing	Restart the TV by unplugging it for 30 seconds. Clear app cache or data in the TV settings. Ensure a stable internet connection.

SPECIFICATIONS





Side profile of the television, indicating a width of 6.72 inches with the stand.

Feature	Detail
Model Number	NS-32F401NA26
Screen Size	32 Inches (82 cm diagonal)
Display Technology	LED
Resolution	1080p (Full HD)
Refresh Rate	60 Hz
Operating System	Fire TV OS
Voice Assistant	Alexa Built-in
Audio Technology	DTS Virtual-X Sound
Connectivity	Wi-Fi, 2x HDMI (1 ARC), 1x USB 2.0, 1x Digital Optical, 1x Composite (AV), 1x 3.5mm Headphone, 1x Coaxial (ANT/CABLE)
Special Features	Apple AirPlay, Parental Controls
Product Dimensions (with stand)	28.31" W x 18.62" H x 6.71" D
Country of Origin	Mexico

WARRANTY AND SUPPORT

Your INSIGNIA TV is covered by a limited warranty. Please refer to the warranty card included with your product for specific terms and conditions. For technical support, troubleshooting assistance, or service inquiries, please visit the official INSIGNIA support website or contact their customer service line. Keep your purchase receipt and model number handy for faster service.

For the most up-to-date support information, visit: www.insigniaproducts.com/support

© 2025 INSIGNIA. All rights reserved. Fire TV, Alexa, and all related logos are trademarks of Amazon.com, Inc. or its affiliates.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for

conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question