

COCBTKQ 722891641680

COCBTKQ Smart Bike Glasses Camera User Manual

Model: 722891641680

1. INTRODUCTION

Thank you for choosing the COCBTKQ Smart Bike Glasses Camera. This device is designed to capture high-definition video and photos from a first-person perspective, offering a convenient way to record your experiences during various outdoor activities. This manual provides essential information for the proper setup, operation, and maintenance of your new smart glasses camera.

2. PRODUCT OVERVIEW

The COCBTKQ Smart Bike Glasses Camera integrates a 1080P HD camera into a lightweight glasses frame, featuring polarized lenses for enhanced visual clarity. It includes Wi-Fi connectivity for easy file transfer and is suitable for a range of activities such as cycling, driving, running, and fishing.

2.1 What's in the Box

- Smart Bike Glasses Camera
- User Manual
- Charging Cable
- 32GB TF Card (pre-installed or included separately)

2.2 Product Components

Product Display



Figure 1: Views of the Smart Bike Glasses Camera, highlighting the integrated camera lens and overall design.



Figure 2: The 1080P high-definition camera lens is discreetly located in the center of the glasses frame, designed for capturing clear footage.

3. SETUP

3.1 Charging the Device

Before first use, fully charge the glasses camera. Connect the provided charging cable to the charging port on the glasses and plug the other end into a USB power adapter (not included) or a computer USB port. The indicator light will show charging status and turn off or change color when fully charged.

3.2 Inserting the TF Card

Locate the TF card slot on the glasses frame. Gently insert the 32GB TF card (included) into the slot until it clicks into place. Ensure the card is inserted in the correct orientation. The device requires a TF card to store recordings.

3.3 Powering On/Off

- **To Power On:** Press and hold the power button (usually located on the side of the frame) for a few seconds until the indicator light illuminates.

- **To Power Off:** Press and hold the power button again for a few seconds until the indicator light turns off.

3.4 Connecting to Wi-Fi (for Mobile Viewing)

The glasses camera supports Wi-Fi connectivity for transferring videos and photos to your mobile device without needing to remove the TF card. Refer to the specific instructions in the included mini-manual for downloading the companion app and connecting via Wi-Fi. Typically, you will activate Wi-Fi on the glasses, then connect your phone to the glasses' Wi-Fi network and use the app to browse and download files.

Mobile Internet Instant Video Transmission

Connect your phone to your glasses and transfer videos and photos without using your phone to store data



Figure 3: The glasses can connect to your phone via Wi-Fi for instant video and photo transmission.

4. OPERATING INSTRUCTIONS

4.1 Recording Video

Once the device is powered on, a short press of the record button (often the same as the power button, or a

dedicated button) will start video recording. The indicator light will typically flash or change color to indicate recording is in progress. Press the button again to stop recording. Videos are saved to the TF card.

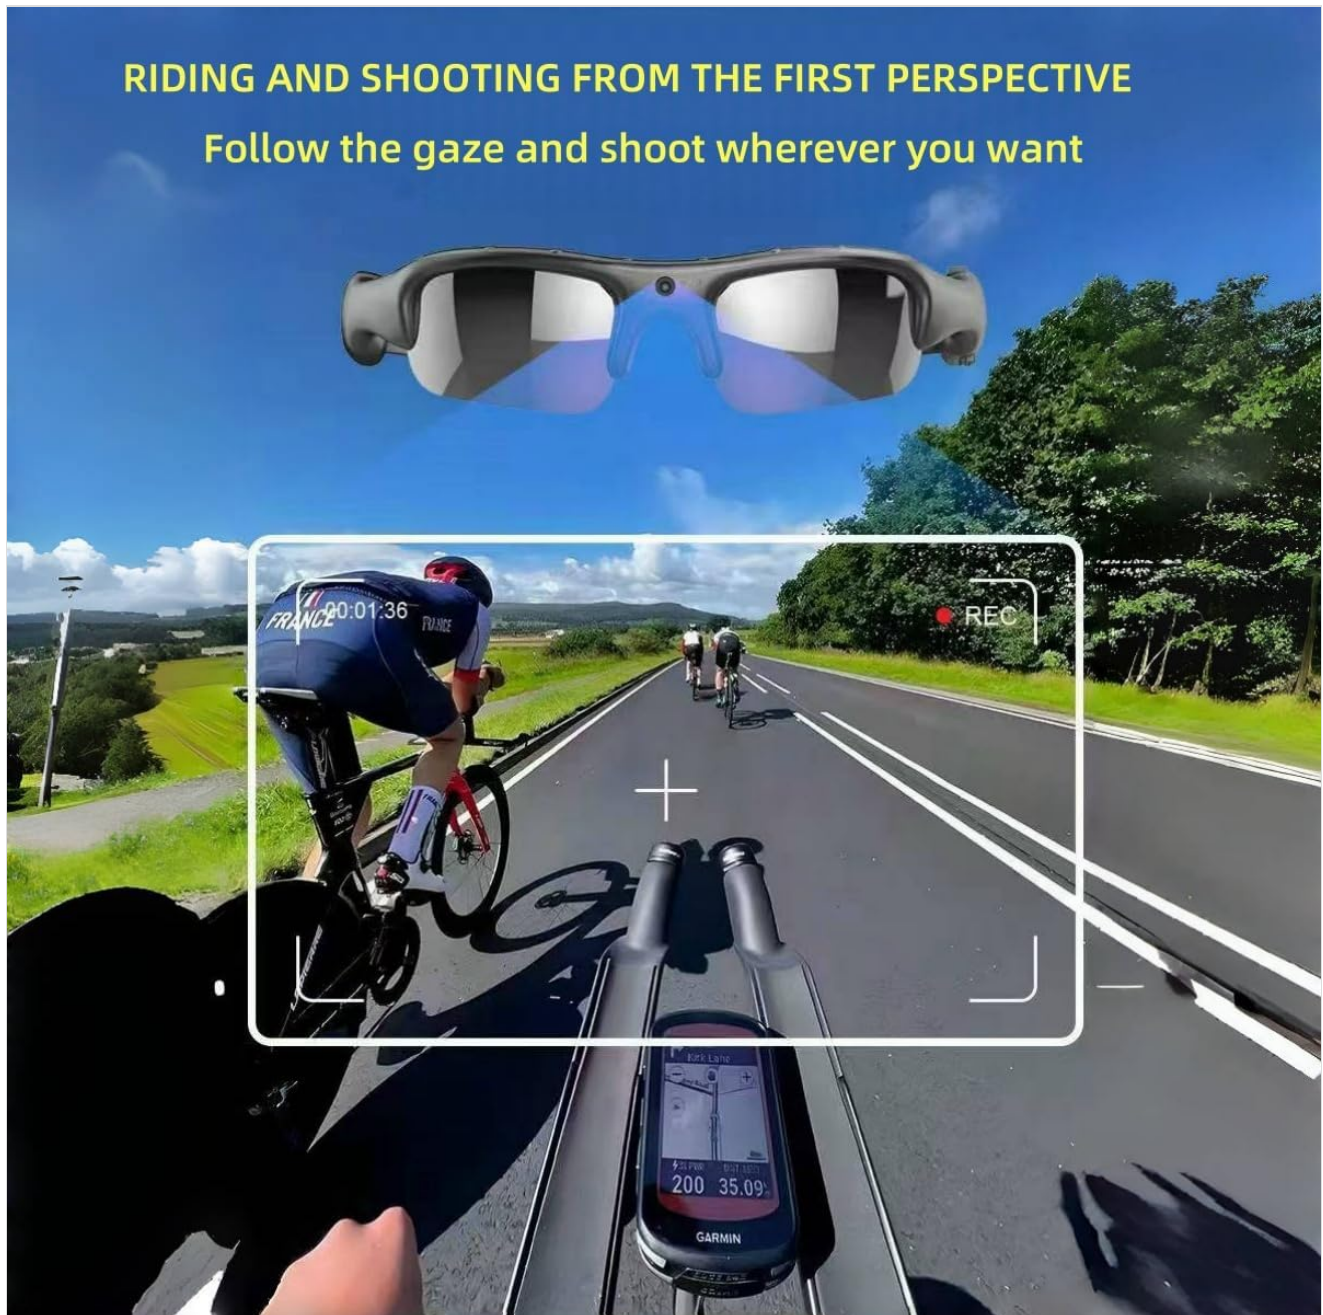


Figure 4: The glasses capture video from a first-person perspective, allowing you to record what you see.

4.2 Taking Photos


While the device is on, a quick press of a specific button (refer to your mini-manual for exact button assignment) will capture a still photograph. The indicator light may flash briefly to confirm a photo has been taken. Photos are saved to the TF card.

4.3 Polarized Lenses

The glasses are equipped with polarized lenses designed to reduce glare and improve visual comfort. These lenses filter out reflected light from surfaces such as roads, water, snow, and glass, ensuring clear visibility in various lighting conditions, both indoors and outdoors.

Polarized lenses fearless of changes in light

Filter out reflected light or glare from road surfaces, water surfaces, snow, glass, etc. to ensure clear visibility, suitable for both indoor and outdoor use!

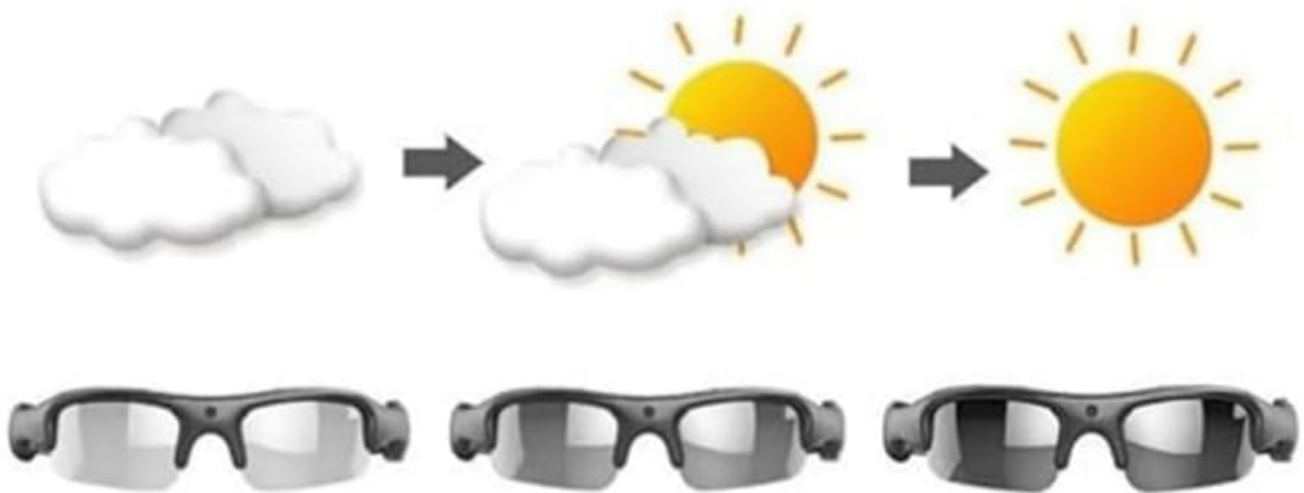

Cloudy or cloudy light gray, changing color with the strength of ultraviolet rays under sunlight



Figure 5: Polarized lenses reduce glare from reflective surfaces, enhancing visual clarity and comfort.

5. MAINTENANCE

5.1 Cleaning the Lenses and Frame

Use a soft, lint-free cloth (such as the one provided) to clean the lenses. For stubborn smudges, a small amount of lens cleaning solution can be applied to the cloth, not directly to the lenses. Wipe the frame with a soft, damp cloth as needed. Avoid using harsh chemicals or abrasive materials.

5.2 Battery Care

To prolong battery life, avoid fully discharging the battery frequently. Charge the device regularly, even if not in use for extended periods. Store the device in a cool, dry place away from extreme temperatures.

5.3 Storage

When not in use, store the glasses camera in its protective case to prevent scratches and damage. Keep it away from direct sunlight and moisture.

6. TROUBLESHOOTING

- **Device not powering on:** Ensure the battery is charged. Connect to a charger and try again.
- **Cannot record video/take photos:** Check if the TF card is properly inserted and has sufficient free space. The battery might also be too low to initiate recording.
- **Wi-Fi connection issues:** Ensure Wi-Fi is enabled on the glasses and your mobile device. Restart both devices and try connecting again. Verify you have the correct companion app installed.
- **Poor video quality:** Ensure the lens is clean and free from smudges. Record in well-lit conditions for optimal results.
- **Device unresponsive:** If the device becomes unresponsive, try performing a soft reset by holding the power button for an extended period (e.g., 10-15 seconds) until it powers off, then restart.

7. SPECIFICATIONS

Brand	COCBTKQ
Model Number	722891641680
Video Capture Resolution	1080p
Photo Sensor Technology	CMOS
Connectivity Technology	Wi-Fi
Item Weight	5.6 ounces
Batteries	1 Nonstandard Battery (included)
Video Capture Format	MP4
Supported Audio Format	AAC, MP3

8. WARRANTY AND SUPPORT

This product comes with a standard manufacturer's warranty. Please refer to the product packaging or the seller's website for specific warranty terms and conditions. For technical support or customer service inquiries, please contact the retailer or manufacturer directly using the contact information provided at the point of purchase.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question