

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [PEOCKE](#) /

› [PEOCKE Bluetooth Tracker G-HB15 User Manual](#)

PEOCKE G-HB15

PEOCKE Bluetooth Tracker G-HB15 User Manual

Compatible with Google Find My Device

INTRODUCTION

Thank you for choosing the PEOCKE Bluetooth Tracker G-HB15. This device is designed to help you locate your valuable items quickly and efficiently using the Google Find My Device network. This manual provides detailed instructions for setup, operation, maintenance, and troubleshooting to ensure you get the most out of your tracker.

Key Features:

- **Precise Tracking:** Utilizes the Google Find My Device network for accurate location.
- **Long Battery Life:** Powered by a CR2032 battery, lasting up to one year.
- **Compact & Portable:** Easily attaches to keys, wallets, backpacks, and other items.
- **Loud Alert:** Emits a 90dB sound for easy retrieval within Bluetooth range.
- **Water & Dust Resistant:** IP67 rated for durability in various conditions.
- **Leave Behind Reminder:** Notifies you if you leave an item behind.
- **Device Sharing:** Share access to your tracker with trusted contacts.

COMPATIBLE WITH ALL ANDROID PHONES

Works with most Android phones including **Samsung**, **Google**, **Xiaomi**, **Oppo**, **Vivo**, and others.



Samsung



Oppo



Google



Vivo



Xiaomi



others

Note: Apple and Huawei devices are not supported.

Image: PEOCKE Bluetooth Tracker highlighting its features and integration with the Find My Device app.

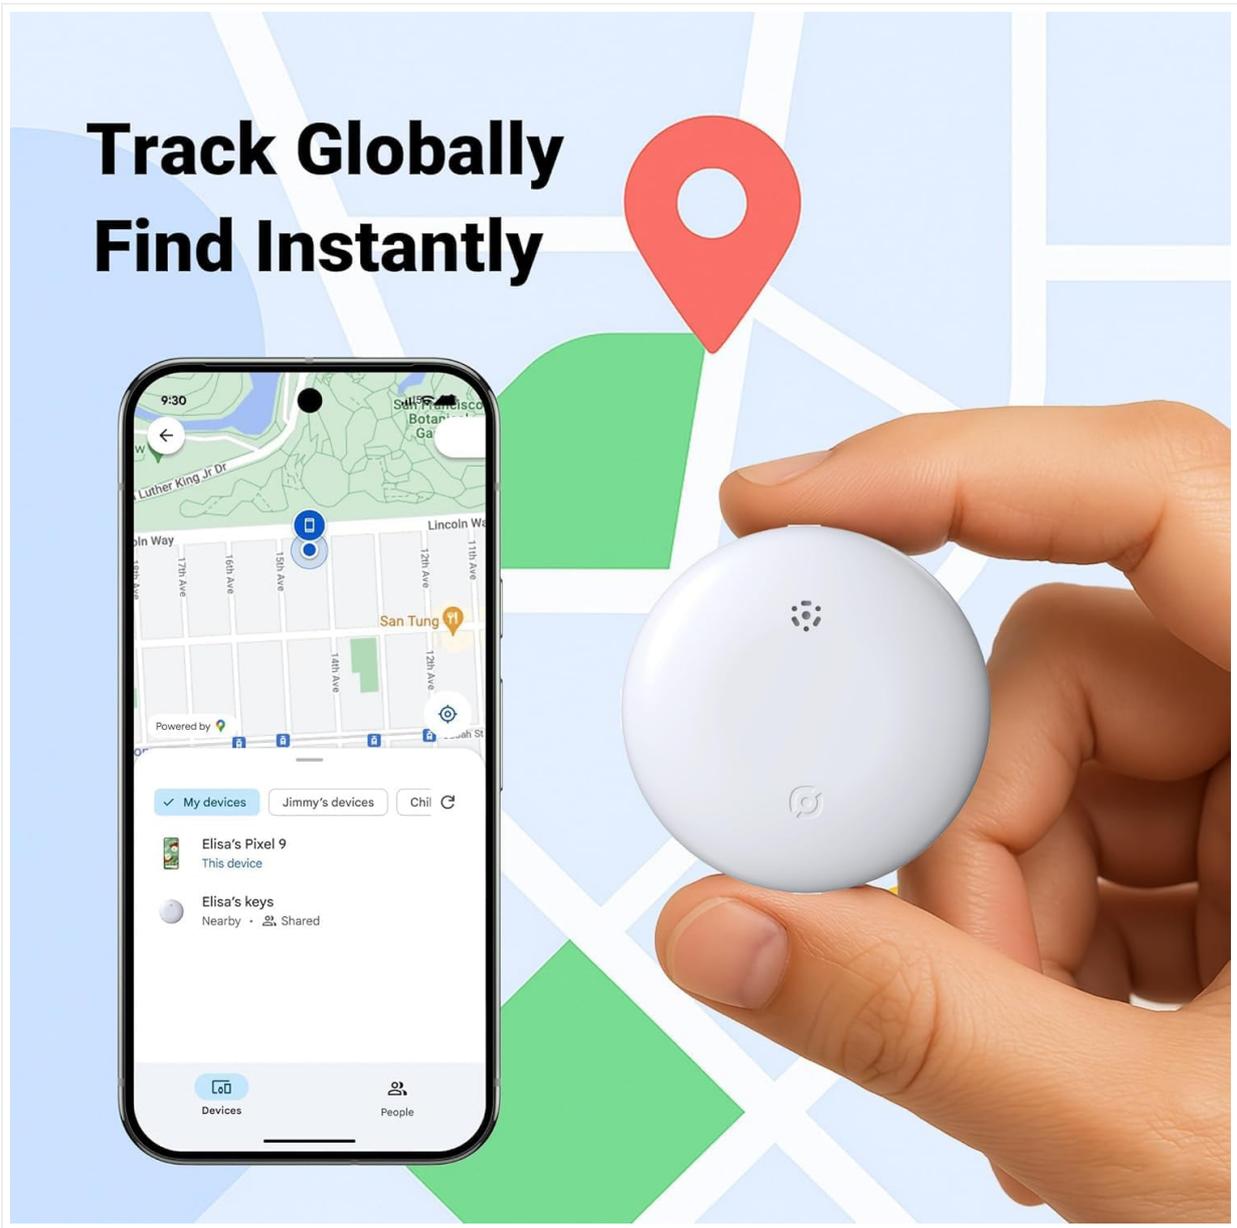


Image: PEOCKE trackers in multiple colors, illustrating compatibility with Google's Find My Device for Android phones.
Note: Apple and Huawei devices are not supported.

PACKAGE CONTENTS

Please check the package for the following items:

- PEOCKE Bluetooth Tracker G-HB15 (White)
- CR2032 Battery (pre-installed)
- Keychain Holder
- Quick Start Guide

SPECIFICATIONS

Feature	Detail
Model Number	G-HB15
Dimensions	1.26"L x 1.26"W x 0.32"Th (32 x 32 x 8.1 mm)

Feature	Detail
Weight	0.25 ounces (7 grams)
Connectivity	Bluetooth
Battery Type	CR2032 (included)
Battery Life	Up to 12 months
Alert Volume	90dB
Water/Dust Resistance	IP67
Compatibility	Android 9 and above (Google Find My Device app)
Material	Plastic

SETUP

1. Battery Installation

The PEOCKE Bluetooth Tracker comes with a CR2032 battery pre-installed. If you need to replace it, follow these steps:

1. Gently twist the tracker's two halves counter-clockwise to open the casing.
2. Remove the old CR2032 battery.
3. Insert a new CR2032 battery with the positive (+) side facing up.
4. Align the two halves of the tracker and twist clockwise until securely closed.

2. App Installation

To use your PEOCKE Bluetooth Tracker, you need the Google Find My Device app on your Android device (Android 9 or above).

1. Open the Google Play Store on your Android smartphone or tablet.
2. Search for "Google Find My Device" and download the official app.
3. Install and open the app. Log in with your Google account.

Track and locate your items with tracker tags



Works with Android
Find My Device



Long Battery Life



Loudest Sound



Water Resistant



Adapt to Android system

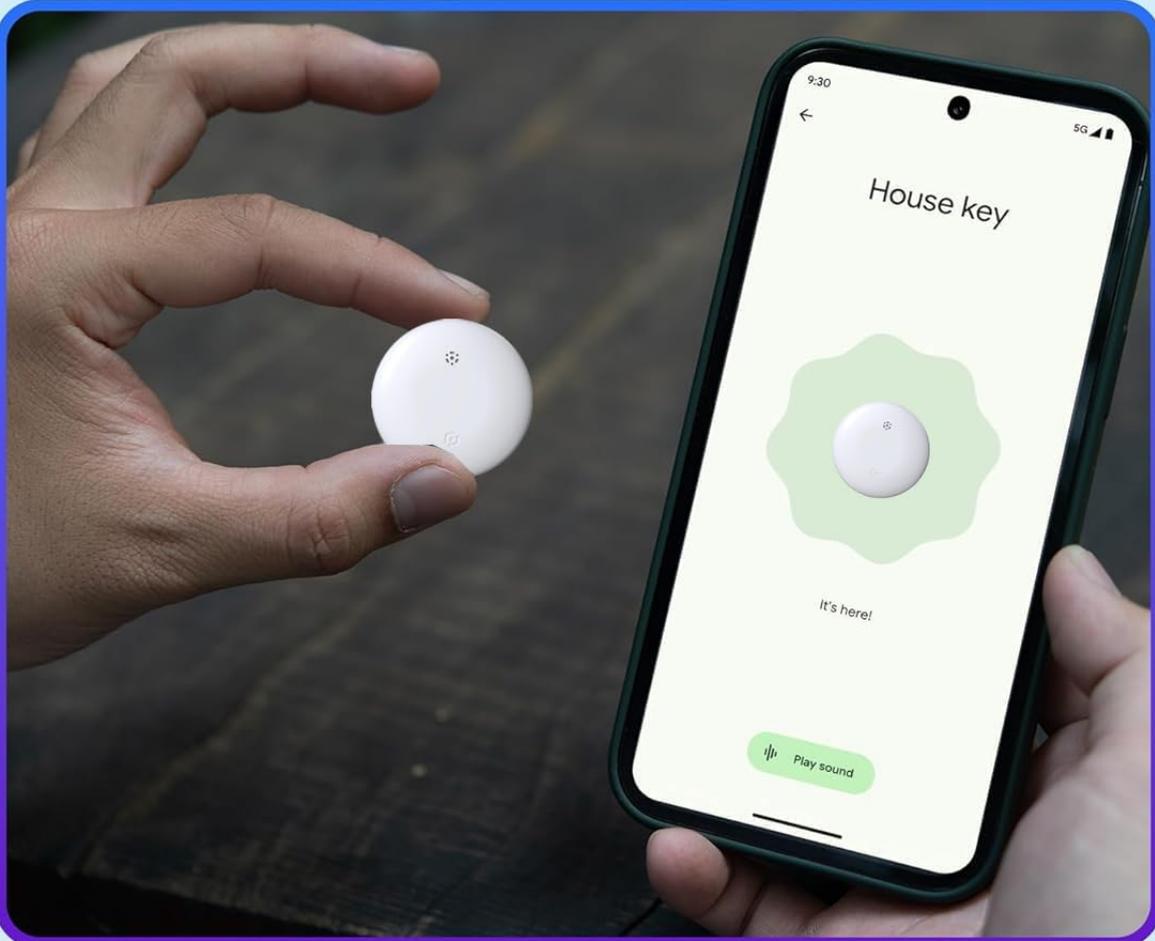


Image: The PEOCKE tracker is compatible with most Android phones running Android 9 and above, and integrates with the Google Find My Device app available on the Google Play Store.

3. Pairing the Tracker

Once the app is installed, pair your tracker:

1. Ensure Bluetooth is enabled on your Android device.
2. Open the Google Find My Device app.
3. The app should automatically detect nearby compatible trackers. Follow the on-screen prompts to add your PEOCKE tracker to your account.
4. You may be asked to press a button on the tracker to confirm pairing.

5. Assign a name to your tracker (e.g., "Keys," "Wallet," "Backpack") for easy identification.

OPERATING INSTRUCTIONS

1. Locating Items (Within Bluetooth Range)

When your item is within Bluetooth range (up to 350 feet or 100 meters), you can make the tracker emit a sound:

1. Open the Google Find My Device app.
2. Select the tracker you wish to locate.
3. Tap the "Play Sound" button. The tracker will emit a loud 90dB alert, helping you pinpoint its exact location.
4. Tap "Stop Sound" once you've found your item.



Image: Activating the 'Play Sound' feature on the Find My Device app to make the PEOCKE tracker ring.

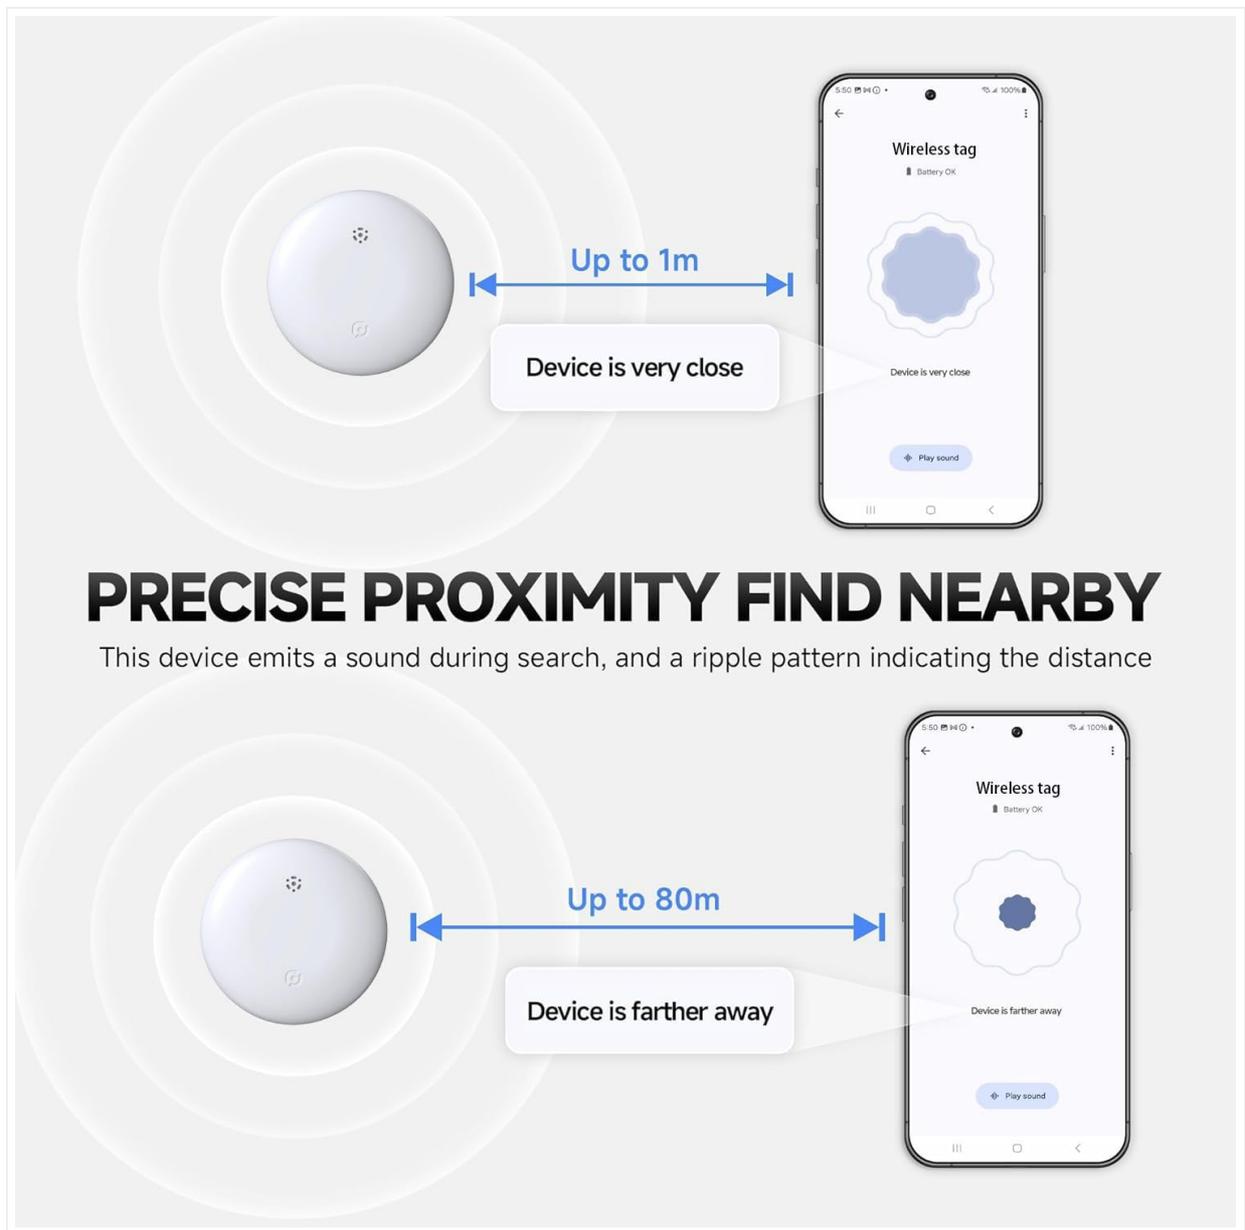


Image: Visual representation of proximity finding, showing how the app indicates if the device is very close or farther away.


2. Locating Items (Out of Bluetooth Range)

If your item is out of Bluetooth range, the Google Find My Device network can still help:

1. Open the Google Find My Device app.
2. Select the tracker you are looking for.
3. The app will display the last known location of your tracker on a map, based on the Google Find My Device network.
4. You can use this information to navigate to the vicinity of your item. Once within Bluetooth range, use the "Play Sound" feature.

GLOBAL PRECISE LOCATION TRACKING

With Google System Support Accurate Tracking Worldwide.

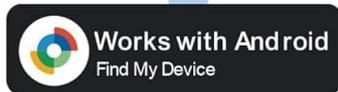

Google's system is continuously being upgraded for enhanced performance.

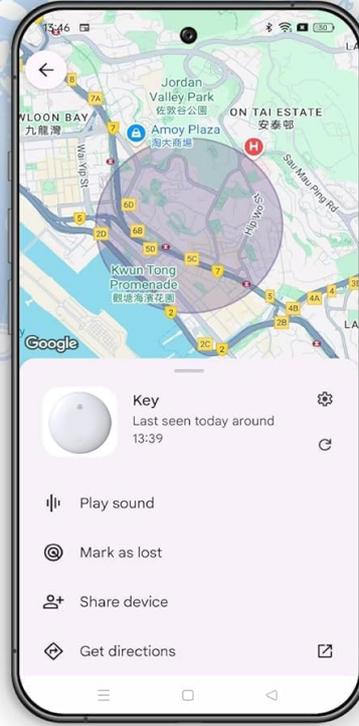


Image: Global tracking capabilities of the PEOCKE tracker using the Google Find My Device network, showing a map with the item's last known location.

Supported by Google's "Find My Device"

Compatible with Samsung and Google phones

Apple and Huawei Do Not Support

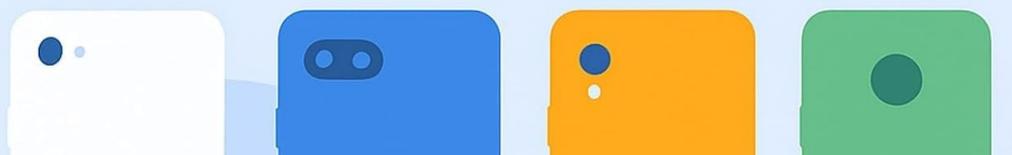
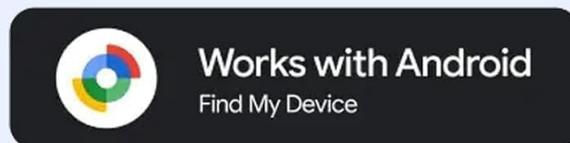


Image: The Google Find My Device app interface displaying multiple tracked devices and their locations on a map.

3. Leave Behind Reminder

To prevent leaving your items behind:

- Ensure notifications are enabled for the Google Find My Device app on your Android device.
- If your PEOCKE tracker moves out of Bluetooth range from your paired device, the app will send a notification within 10 minutes, reminding you to retrieve your item.

4. Sharing Devices

You can share access to your PEOCKE tracker with up to 10 trusted users:

1. In the Google Find My Device app, select the tracker you wish to share.
2. Look for a "Share Device" or similar option.
3. Follow the prompts to invite other Google account users to access the tracker's location.

5. Managing Multiple Devices

The Google Find My Device app allows you to manage up to 100 PEOCKE trackers per account. Simply add each tracker following the pairing instructions, and they will all appear in your app for easy management.

1. Battery Replacement

The CR2032 battery typically lasts up to 12 months. You can monitor the battery status within the Google Find My Device app. When the battery is low, replace it promptly to ensure continuous tracking. Refer to the "Battery Installation" section under Setup for detailed steps.

2. Cleaning

To clean your PEOCKE tracker, wipe it gently with a soft, dry, or slightly damp cloth. Avoid using harsh chemicals or abrasive materials, as these can damage the device.

3. Water and Dust Resistance

The PEOCKE tracker is rated IP67, meaning it is resistant to dust and can withstand immersion in water up to 1 meter for 30 minutes. While it is designed to be durable, avoid prolonged exposure to water or extreme conditions to maintain its functionality.

TROUBLESHOOTING

Tracker Not Connecting/Pairing

- Ensure the battery is correctly installed and not depleted.
- Verify that Bluetooth is enabled on your Android device.
- Check that your Android device is running Android 9 or above.
- Make sure the Google Find My Device app has the necessary permissions (e.g., location, Bluetooth).
- Try restarting your Android device and the app.

Sound Not Playing

- Ensure the tracker is within Bluetooth range of your device.
- Check the battery level of the tracker in the app.
- Verify that your phone's media volume is not muted or too low.

Inaccurate Location

- Location accuracy depends on the Google Find My Device network. In areas with fewer Android devices, location updates might be less frequent or precise.
- Ensure your device's GPS and location services are enabled.
- Check for any obstructions that might interfere with Bluetooth signals.

Leave Behind Notifications Not Received

- Ensure notifications are enabled for the Google Find My Device app in your phone's settings.
- Check your phone's battery optimization settings, as they might restrict background app activity.
- Ensure the app is running in the background.

Privacy Concerns

The PEOCKE tracker utilizes anonymous and encrypted communication within the Google Find My Device network. It does not store location history or track your movement directly. Your privacy is protected through Google's robust security measures.

WARRANTY INFORMATION

For detailed warranty information regarding your PEOCKE Bluetooth Tracker G-HB15, please refer to the manufacturer's official website or the warranty card included with your product packaging. Warranty terms and conditions may vary by region and retailer.

SUPPORT

If you encounter any issues or have questions not covered in this manual, please visit the official PEOCKE website for FAQs, troubleshooting guides, and customer support contact information. You can also reach out to the retailer where you purchased the product for assistance.